

**PARMCO****FS60CER-8W****If PART Number has N/A then Parmco is unable to supply.**

Diag #	PART Number	DESCRIPTION
1	XXS0041800335	Cooktop - FS60CER-8W
2	XXS0040900463	Element - Small FX60CER
3	XXS0040900462	Element - Large FX60CER
4	N/A - 0040100159	Large disk support stove gasket
5	N/A - 0040100161	Large disk support stove gasket
6	N/A - 0040901060A	FS furnace plate cable assembly long (black)
7	N/A - 0040901058A	FS furnace plate cable assembly long (red)
8	N/A - 0040901061A	FS furnace plate cable assembly short (blue)
9	N/A - 0040901059A	FS furnace plate cable assembly short (white)
10	N/A - 0040901057A	Residual heat indicator line
11	XXS0040200147	Knob - Simmerstat FX60CER FX60H
12	XXS0040200127	Knob Collar - FS60R-8W
13	N/A - 0040100020	Knob spring
14	XXS0040900026A	orange indicator light - FS60R-8W
15	XXS0040900025A	red indicator light - FS60R-8W
16	XXS0040901046	ON/OFF Switch - FS60R-8W
17	XXS0040901045	10A socket - FS60CER-8W
18	N/A - 0040305624	rear controller with 2 functions
19	XXS0040900105	Simmerstat FX60CER
20	XXS0040900332	Thermostat FX60CER FX60H
21	XXS0040900553	Clock - FS60R-8W
22	XXS0040901049	Function Switch - FS60R-8W
23	XXS0040200573	cooktop shaft bracket (left) - FS60CER-8W
24	XXS0040200572	cooktop shaft bracket (right) - FS60CER-8W
25	N/A - 0040102353	back plate of control panel
26	XXS0040900484	Upper Element - FS60R-8W
27	XXS0040101503A	ROAST DISH SHALLOW - FS60R-8W
28	XXS0040101502	Grill Rack - FS60R-8W
29	XXS0042100360	ROAST DISH, DEEP - FS60R-8W
30	N/A - 0042100030	Isolation of rear fan (enameled black)
31	XXS0040900052	ELEMENT CIRCULAR - FS60R-8W
32	XXS0040900029	Lamp assembly FX60CER FX60H
33	N/A - 0042100325	Drawer
34	N/A - 0042100406	rear cover of drawer (black)
35	N/A - 0042100400	front cover of drawer (white)
36	N/A - 0041300220	Telescopic rail
37	N/A - 0042100398	Lower front beam (white)
38	N/A - 0040200024	Adjustable foot
39	XXS0040900031	Element - Oven lower FX60CER FX60H
40	N/A - 0040101509	protective shield of lower heater
41	N/A - 0020101208	isolation board under lower heater
42	XXS0041300227	Side Rack Left - FS60R-8W

43	XXS0041300228	Side Rack Right - FS60R-8W
44	N/A - 0040101017	Pylons fixed pin
45	N/A - 0042100397	left side pannel
46	N/A - 0042100414	right side panel (White)
47	N/A - 0042100437	Cavity (black enamel)
48	N/A - 0042100396	Frame
49	XXS0040400075	Door Seal - FS60R-8W
50	N/A - 0040901048A	oven wire
51	N/A - 0040102183	The fixing plate of rear fan
52	XXS0040900467	CIRCULAR FAN MOTOR - FS60R-8W
53	N/A - 0042300093	Vent-pipe of oven
54	N/A - 0040102397	Back cover
55	N/A - 0040900693	Fuse Holder
56	N/A - 0040901070	fuse
57	XXS0040900028	Connection box FX60CER FX60H
58	N/A - 0040102391	Thermostat fix
59	XXS0040900638	Overheat Thermostat - FS60R-8W
60	N/A - 0040700894	The inside door glass
61	XXS0041300213	Door hinge (right) - FS60R-8W
62	XXS0041300212	Door hinge (left) - FS60R-8W
63	N/A - 0040200015	right Lower supporting part of the inside door glass
64	N/A - 0040200013	left Lower supporting part of the inside door glass
65	N/A - 0040700893	The middle-layer glass
66	N/A - 0040800288	Glass hook
67	N/A - 0041300254	H10 Handle (white)
68	N/A - 0042100394	Air outlet part of door
69	N/A - 0041800283	outer door glass assembly
70	XXS0040803039	Complete Door - FS60R-8W