

PARMCO

FS60R-4W

If PART Number has N/A then it is only available as special order

Diag #	PART Number	DESCRIPTION
1	XXS0042100401	DNO FS60R-4W/8W Cooktop FS60WR*
2	XXS0040901011	COIL ELEMENT SMALL - FS60R-8W
3	XXS0040901010	COIL ELEMENT LARGE - FS60R-8W
4	XXS0040102356	drip pan (small) - FS60R FS60WR*
5	XXS0040102357	drip pan (large) - FS60R FS60WR*
6	N/A - 0040901013	square socket& coil connection line (short)
7	XXS0040901012	ELEMENT SOCKET both front elements - FS60R-8W FS60WR*
8	N/A - 0040102349	coil support plate (left)
9	N/A - 0040102348	coil support plate (right)
10	XXS0040200147	Knob FS60 stoves FS60W**
11	XXS0040200127	Knob Collar - FS60R-8W FS60WR&C*
12	N/A - 0040100020	Knob spring
13	XXO0040900025A	Neon light - PPOV-6S-DT-3 FS*00** FS60W**
14	XXS0040900026A	orange indicator light - FS60R-8W FS900** FS60W**
15	XXS0040901045	10A side plug socket - FS60CER/R-8W/4W FS60WR&C*
16	XXS0040901046	ON/OFF Switch - FS60R-8W FS60WR&C*
17	XXS0040305445	CONTROL PANEL FS60R-4W
18	XXH0040900105	SIMMERSTAT - HX-1-6S-CER, -6NF-CER FS*00*C FS60WR&C*
19	XXO0040900332	THERMOSTAT - VERSO 1-1, OX-1-6S-5 OX7-2 OX7-3 OX7-4 OX7-5 PPOV-6S-SIDE FS*00** FS60WR&C*
0	XXS0040900553	Clock - FS60R-8W FS600** FS60R&C Only
20	XXO0040900721	Function Switch - Lower Oven - PPOV-6S-DT-3 FS60W*4
21	XXS0040200573	cooktop shaft bracket(left) - FS60CER-8W FS60WR&C*
22	N/A - 0040200572	cooktop shaft bracket (right)
23	XXS0040102353	back plate of control panel
24	XXO0040900029	COMPLETE LIGHT FITTING FS*00** FS60W**
25	XXO0040900484	ELEMENT, UPPER - VERSO 1-1 OX7-2 OX7-3 OX7-4 OX7-5 FS600** FS60WR&C*
26	XXS0040101503A	Wire Rack - FS60R-8W FS600** FS60WR&C*
27	XXO0040101502	GRILL RACK - VERSO 1-1, OX7-2 OX7-3 OX7-4 OX7-5 FS600** FS60WR&C*
28	XXO0042100360	Oven Tray - OX7-3 OX7-4 OX7-5 FS60WR&C*
29	N/A - 0042100325	Drawer
30	N/A - 0042100406	rear cover of drawer (black)
31	XXS0042100400	front cover of drawer (white)
32	N/A - 0041300220	Telescopic rail
33	XXS0042100398	Lower front beam (white)
34	XXS0040200024	Adjustable feet/legs FS*00** FS60W**
35	N/A - 0040900031	Lower heater
36	N/A - 0040101509	protective shield of lower heater
37	XXS0020101208	isolation board under lower heater
38	XXO0041300227	Side rack - Left - OX7-3 OX7-4 OX7-5 FS*00** FS60WR&C*
39	XXO0041300228	Side rack - Right - OX7-3 OX7-4 OX7-5 FS*00** FS60WR&C*
40	N/A - 0040101017	Pylons fixed pin
41	N/A - 0042100397	left side panel
42	N/A - 0042100414	right side panel (White)

43	N/A - 0042100428	Cavity (black enamel)
44	N/A - 0042100396	Frame
45	N/A - 0042100416	Cooktop drip pan (black enamel)
46	N/A - 0040102340	flue pipe
47	N/A - 0040102183	The fixing plate of rear fan
48	XXS0040102380	Back cover
49	XXS0040900693	10amp Fuse Holder
50	N/A - 0040900028	Connection box
51	XXS0040700894	The inside door glass
52	XXS0041300212	Door hinge (left) - FS60R-8W
53	XXS0041300213	Door hinge (right) - FS60R-8W
54	XXS0040200013	Lower fixer of the inside door glass(left) FS600** FS60R/CER FS60W**
55	N/A - 0040200015	right Lower supporting part of the inside door glass
56	N/A - 0040700893	The middle-layer glass
57	N/A - 0040800288	Glass hook
58	N/A - 0041300254	H10 Handle (white)
59	N/A - 0042100394	Air outlet part of door
60	XXS0041800283	outer door glass assembly
61	N/A - 0040803039	black door assembly (with double glass and H10 handle)
62	XXS0040102391	Thermostat fix
63	XXS0040900638	Overheat Thermostat 105° - FS60R-8W FS60WR&C*
64	XXO0040400075	DOOR SEAL - VERSO 1-1 OX7-2 OX7-3 OX7-4 OX7-5