

P A R M C O

FS60R-8W

If PART Number has N/A then it is only available as special order

Diag #	PART Number	DESCRIPTION
1	XXS0042100401	FS60R-4W/8W Cooktop
2	XXS0040901011	COIL ELEMENT SMALL - FS60R-8W
3	XXS0040901010	COIL ELEMENT LARGE - FS60R-8W
4	XXS0040102356	drip pan (small) - FS60R
5	XXS0040102357	drip pan (large) - FS60R
6	N/A - 0040901013	square socket& coil connection line (short)
7	XXS0040901012	ELEMENT SOCKET - FS60R-8W
8	N/A - 0040102349	coil support plate (left)
9	N/A - 0040102348	coil support plate (right)
10	XXS0040200147	Knob FS60 stoves
11	XXS0040200127	Knob Collar - FS60R-8W
12	N/A - 0040100020	Knob spring
13	XXO0040900025A	Neon light - PPOV-6S-DT-3 FS*00**
14	XXS0040900026A	orange indicator light - FS60R-8W FS900**
15	XXS0040901045	10A side plug socket - FS60CER/R-8W/4W
16	XXS0040901046	ON/OFF Switch - FS60R-8W
17	XXS0040305451	CONTROL PANEL FS60R-8W
18	XXH0040900105	SIMMERSTAT - HX-1-6S-CER, -6NF-CER FS*00*C
19	XXO0040900332	THERMOSTAT - VERSO 1-1, OX-1-6S-5 OX7-2 OX7-3 OX7-4 OX7-5 PPOV-6S-SIDE FS*00**
20	XXS0040900553	Clock - FS60R-8W FS600**
21	XXS0040901049	Function Switch - FS60R-8W
22	XXS0040200573	cooktop shaft bracket(left) - FS60CER-8W
23	XXS0040200572	cooktop shaft bracket (right) - FS60CER-8W
24	N/A - 0040102353	back plate of control panel
25	XXO0040900029	COMPLETE LIGHT FITTING FS*00**
26	XXO0040900484	ELEMENT, UPPER - VERSO 1-1 OX7-2 OX7-3 OX7-4 OX7-5 FS600**
27	XXS0040101503A	Wire Rack - FS60R-8W FS600**
28	XXO0040101502	GRILL RACK - VERSO 1-1, OX7-2 OX7-3 OX7-4 OX7-5 FS600**
29	XXO0042100360	Oven Tray - OX7-3 OX7-4 OX7-5
30	N/A - 0042100030	Isolation of rear fan (enameled black)
31	XXO0040900052	ELEMENT,CIRCULAR - OX ovens, DT ovens, Verso ovens
32	XXS0042100325	DNO -Complete drawer FS60R-4W/8W and FS60CER-8W
33	N/A - 0042100406	rear cover of drawer (black)
34	N/A - 0042100400	front cover of drawer (white)
35	XXS0041300220	Telescopic rail FS*00**
36	N/A - 0042100398	Lower front beam (white)
37	XXS0040200024	Adjustable foot FS*00**
38	XXO0040900031	ELEMENT, LOWER FS600**

39	N/A - 0040101509	protective shield of lower heater
40	N/A - 0020101208	isolation board under lower heater
41	XXO0041300227	Side rack - Left - OX7-3 OX7-4 OX7-5 FS*00**
42	XXO0041300228	Side rack - Right - OX7-3 OX7-4 OX7-5 FS*00**
43	XXS0040101017	Side Rack Fixing screws FS*00**
44	N/A - 0042100397	left side pannel
45	N/A - 0042100414	right side panel (White)
46	N/A - 0042100430	Cavity (black enamel)
47	N/A - 0042100396	Frame
48	N/A - 0042100416	Cooktop drip pan (black enamel)
49	N/A - 0040102340	flue pipe
50	XXO0040900467	CIRCULAR FAN MOTOR FS*00**
51	N/A - 0040102183	The fixing plate of rear fan
52	N/A - 0040102380	Back cover
53	XXS0040900693	10amp Fuse Holder
54	XXO0040900028	Connector box - PPOV-6S-DT-3
55	N/A - 0040700894	The inside door glass
56	XXS0041300212	Door hinge (left) - FS60R-8W
57	XXS0041300213	Door hinge (right) - FS60R-8W
58	XXS0040200013	Lower fixer of the inside door glass(left) FS600**
59	XXS0040200015	Lower fixer of the inside door glass(right) FS600**
60	N/A - 0040700893	The middle-layer glass
61	N/A - 0040800288	Glass hook
62	N/A - 0041300254	H10 Handle (white)
63	N/A - 0042100394	Air outlet part of door
64	N/A - 0041800283	outer door glass assembly
65	XXS0040803039	Complete Door - FS60R 4, 8W and FS60CER
66	N/A - 0040102391	Thermostat fix
67	XXS0040900638	Overheat Thermostat - FS60R-8W
68	XXO0040400075	DOOR SEAL - VERSO 1-1 OX7-2 OX7-3 OX7-4 OX7-5