

PARMCO

FS60WC8

If PART Number has N/A then it is only available as special order

Diag #	PART Number	DESCRIPTION
1	XXS0041800335	DNO Cooktop - FS60CER-8W FS60WC8
2	N/A - 0040102376	Front connector of the cooktop
3	N/A - 0040400158	Rubber mat (left)
4	N/A - 0040400159	Rubber mat (right)
5	XXS0040900462	Element - Large FS60CER-8W FS*00*C FS60WC8
6	XXS0040900463	Element - Small FS60CER-8W FS*00*C FS60WC8
7	N/A - 0040100161	Large disk support stove gasket
8	N/A - 0040100159	Large disk support stove gasket
9	N/A - 0040901060A	FS furnace plate cable assembly long (black)
10	N/A - 0040901058A	FS furnace plate cable assembly long (red)
11	N/A - 0040901061A	FS furnace plate cable assembly short (blue)
12	N/A - 0040901059A	FS furnace plate cable assembly short (white)
13	XXS0040200147	Knob FS60 stoves FS60W**
14	N/A - 0040100020	Knob spring
15	XXS0040200127	Knob Collar - FS60R-8W FS60WR&C*
16	XXO0040900025A	Neon light - PPOV-6S-DT-3 FS*00** FS60W**
17	XXS0040900026A	orange indicator light - FS60R-8W FS900** FS60W**
18	XXS0041800883	Control panel FS60WC8
19	XXS0040901045	10A side plug socket - FS60CER/R-8W/4W FS60WR&C*
20	XXS0040901046	ON/OFF Switch - FS60R-8W FS60WR&C*
21	N/A - 0040102379	The fix of electronic programmer
22	XXH0040900105	SIMMERSTAT - HX-1-6S-CER, -6NF-CER FS*00*C FS60WR&C*
23	XXO0040900332	THERMOSTAT - VERSO 1-1, OX-1-6S-5 OX7-2 OX7-3 OX7-4 OX7-5 PPOV-6S-SIDE FS*00** FS60WR&C*
24	XXS0040900553	Clock - FS60R-8W FS600** FS60R&C Only
25	XXS0040901049	Function Switch - FS60R-8W FS60W*8
26	XXS0040200573	cooktop shaft bracket(left) - FS60CER-8W FS60WR&C*
27	XXS0040200572	cooktop shaft bracket (right) - FS60CER-8W FS60WR&C*
28	N/A - 0040102353	back plate of control panel
29	XXO0042100360	Oven Tray - OX7-3 OX7-4 OX7-5 FS60WR&C*
30	XXS0040101503A	Wire Rack - FS60R-8W FS600** FS60WR&C*
31	XXO0040101502	GRILL RACK - VERSO 1-1, OX7-2 OX7-3 OX7-4 OX7-5 FS600** FS60WR&C*
32	N/A - 0040100820	Pylons fixed pin
33	XXO0041300228	Side rack - Right - OX7-3 OX7-4 OX7-5 FS*00** FS60WR&C*
34	XXO0041300227	Side rack - Left - OX7-3 OX7-4 OX7-5 FS*00** FS60WR&C*
35	N/A - 0042100030	Isolation of rear fan
36	XXS0040900980	Circular Element FS600** FS60W*8
37	XXS0040400161	Door Seal FS600** FS60WR&C*
38	XXO0040900029	COMPLETE LIGHT FITTING FS*00** FS60W**
39	XXO0040900484	ELEMENT, UPPER - VERSO 1-1 OX7-2 OX7-3 OX7-4 OX7-5 FS600** FS60WR&C*
40	XXO0040900031	ELEMENT, LOWER FS600** FS60W** OX ovens
41	N/A - 0040101509	protective shield of lower heater
42	N/A - 0020101208	Gas baking bottom panel
43	N/A - 0040802006	Tube attemperator

44	N/A - 0040802123	Rear attemperator
45	N/A - 0040102183	The fixing plate of rear fan
46	XXO0040900467	CIRCULAR FAN MOTOR FS*00**, OX, PPOV ovens and more - see notes FS60W*8
47	XXS0040900638	Overheat Thermostat 105° - FS60R-8W FS60WR&C*
48	N/A - 0040901365A	oven wire
49	N/A - 0042100613	Front panel
50	N/A - 0040200657	Front panel baffle (left)
51	N/A - 0040200658	Front panel baffle (right)
52	N/A - 0042100560	front cover of drawer (black)
53	N/A - 0042100326	Rear cover of drawer (black)
54	XXS0042100325	DNO -Complete drawer FS60R-4W/8W and FS60CER-8W FS60WR&C*
55	N/A - 0040102194A	Drawer bracket
56	XXS0040200024	Adjustable feet/legs FS*00** FS60W**
57	N/A - 0042100561	Before the beam
58	N/A - 0042100096	60FR frame of cavity
59	XXO0040101558	HINGE GUIDE - PYRO-2 VERSO 1-1 OX7-2 OX7-3 OX7-4 OX7-5 FS600** FS60WR&C*
60	XXS0041300220	Telescopic rail FS*00** FS60WR&C*
61	N/A - 0042100324	Side beam (right)
62	N/A - 0042100323	Side beam (left)
63	N/A - 0042100081	Cavity (black enamel)
64	N/A - 0040102181	Rear left fixer
65	N/A - 0040102182	Rear right fixer
66	N/A - 0042100562	Lower back beam
67	N/A - 0040101434	Bottom cover of cooling fan system
68	N/A - 0040101674	Vent hole of oven
69	N/A - 0040101433	Top cover of cooling fan system
70	XXO0040900426	COOLING FAN - VERSO 1-1 OX7-2 OX7-3 OX7-4 OX7-5 FS*00** FS60WR&C*
71	XXO0040900240	Thermostat 65degC - PPOV-6S-DT-3 FS60WR&C*
72	N/A - 0042100558	Side panel
73	N/A - 0040102825	Upper rear crosspiece
74	N/A - 0040102826	Back cover
75	XXO0040900028	Connector box - PPOV-6S-DT-3 FS60W**
76	N/A - 0041300096A	Anti dumping of chain
77	XXS0040900693	10amp Fuse Holder
78	N/A - 0040700397	The inside door glass
79	XXS0041300321	Hinge FS600*C FS60WR&C*
80	XXS0040200019	Upper fixer of the inside door glass(right) FS600** FS60W**
81	XXS0040200017	Upper fixer of the inside door glass(left) FS600** FS60W**
82	XXS0040200015	Lower fixer of the inside door glass(right) FS600** FS60R/CER FS60W**
83	XXS0040200013	Lower fixer of the inside door glass(left) FS600** FS60R/CER FS60W**
84	N/A - 0040700876	The middle door glass
85	N/A - 0040800288	The fixer of the middle door glass
86	N/A - 0041300254	H10 Handle
87	N/A - 0042100094	Vent hole of door
88	N/A - 0041800884	The outside door glass assembly
89	XXS0040803399	Door assembly FS60WR&C*