

PARMCO

FS60WR8

If PART Number has N/A then it is only available as special order

Diag #	PART Number	DESCRIPTION
1	XXS0042100401	DNO FS60R-4W/8W Cooktop FS60WR*
2	XXS0041800886	Coil element small FS60WR*
3	XXS0041800887	Coil element large FS60WR*
4	XXS0040102356	drip pan (small) - FS60R FS60WR*
5	XXS0040102357	drip pan (large) - FS60R FS60WR*
6	XXS0040901013	Socket both back elements FS60WR*
7	XXS0040901012	ELEMENT SOCKET both front elements - FS60R-8W FS60WR*
8	N/A - 0040102376	Front connector of the cooktop
9	N/A - 0040400158	Rubber mat (left)
10	N/A - 0040400159	Rubber mat (right)
11	XXS0040200147	Knob FS60 stoves FS60W**
12	N/A - 0040100020	Knob spring
13	XXS0040200127	Knob Collar - FS60R-8W FS60WR&C*
14	XXO0040900025A	Neon light - PPOV-6S-DT-3 FS*00** FS60W**
15	XXS0040900026A	orange indicator light - FS60R-8W FS900** FS60W**
16	N/A - 0041800885	rear controller with 8 functions
17	XXS0040901045	10A side plug socket - FS60CER/R-8W/4W FS60WR&C*
18	XXS0040901046	ON/OFF Switch - FS60R-8W FS60WR&C*
19	N/A - 0040102379	The fix of electronic programmer
20	XXH0040900105	SIMMERSTAT - HX-1-6S-CER, -6NF-CER FS*00*C FS60WR&C*
21	XXO0040900332	THERMOSTAT - VERSO 1-1, OX-1-6S-5 OX7-2 OX7-3 OX7-4 OX7-5 PPOV-6S-SIDE FS*00** FS60WR&C*
22	XXS0040900553	Clock - FS60R-8W FS600** FS60R&C Only
23	XXS0040901049	Function Switch - FS60R-8W FS60W*8
24	XXS0040200573	cooktop shaft bracket(left) - FS60CER-8W FS60WR&C*
25	XXS0040200572	cooktop shaft bracket (right) - FS60CER-8W FS60WR&C*
26	N/A - 0040102353	back plate of control panel
27	XXO0042100360	Oven Tray - OX7-3 OX7-4 OX7-5 FS60WR&C*
28	XXS0040101503A	Wire Rack - FS60R-8W FS600** FS60WR&C*
29	XXO0040101502	GRILL RACK - VERSO 1-1, OX7-2 OX7-3 OX7-4 OX7-5 FS600** FS60WR&C*
30	N/A - 0040100820	Pylons fixed pin
31	XXO0041300228	Side rack - Right - OX7-3 OX7-4 OX7-5 FS*00** FS60WR&C*
32	XXO0041300227	Side rack - Left - OX7-3 OX7-4 OX7-5 FS*00** FS60WR&C*
33	N/A - 0042100030	Isolation of rear fan
34	XXS0040900980	Circular Element FS600** FS60W*8
35	XXS0040400161	Door Seal FS600** FS60WR&C*
36	XXO0040900029	COMPLETE LIGHT FITTING FS*00** FS60W**
37	XXO0040900484	ELEMENT, UPPER - VERSO 1-1 OX7-2 OX7-3 OX7-4 OX7-5 FS600** FS60WR&C*
38	XXO0040900031	ELEMENT, LOWER FS600** FS60W** OX ovens
39	N/A - 0040101509	protective shield of lower heater
40	N/A - 0020101208	Gas baking bottom panel
41	N/A - 0040802006	Tube attemperator
42	N/A - 0040802123	Rear attemperator
43	N/A - 0040102183	The fixing plate of rear fan

44	XXO0040900467	CIRCULAR FAN MOTOR FS*00**, OX, PPOV ovens and more - see notes FS60W*8
45	XXS0040900638	Overheat Thermostat 105° - FS60R-8W FS60WR&C*
46	N/A - 0040901365A	oven wire
47	N/A - 0042100613	Front panel
48	N/A - 0040200657	Front panel baffle (left)
49	N/A - 0040200658	Front panel baffle (right)
50	N/A - 0042100560	front cover of drawer (black)
51	N/A - 0042100326	Rear cover of drawer (black)
52	XXS0042100325	DNO -Complete drawer FS60R-4W/8W and FS60CER-8W FS60WR&C*
53	N/A - 0040102194A	Drawer bracket
54	XXS0040200024	Adjustable feet/legs FS*00** FS60W**
55	N/A - 0042100561	Before the beam
56	N/A - 0042100096	60FR frame of cavity
57	XXO0040101558	HINGE GUIDE - PYRO-2 VERSO 1-1 OX7-2 OX7-3 OX7-4 OX7-5 FS600** FS60WR&C*
58	XXS0041300220	Telescopic rail FS*00** FS60WR&C*
59	N/A - 0042100324	Side beam (right)
60	N/A - 0042100323	Side beam (left)
61	N/A - 0042100081	Cavity (black enamel)
62	N/A - 0040102181	Rear left fixer
63	N/A - 0040102182	Rear right fixer
64	N/A - 0042100562	Lower back beam
65	N/A - 0040101434	Bottom cover of cooling fan system
66	N/A - 0040101674	Vent hole of oven
67	N/A - 0040101433	Top cover of cooling fan system
68	XXO0040900426	COOLING FAN - VERSO 1-1 OX7-2 OX7-3 OX7-4 OX7-5 FS*00** FS60WR&C*
69	XXO0040900240	Thermostat 65degC - PPOV-6S-DT-3 FS60WR&C*
70	N/A - 0042100558	Side panel
71	N/A - 0040102841	Upper rear crosspiece
72	N/A - 0040102826	Back cover
73	XXO0040900028	Connector box - PPOV-6S-DT-3 FS60W**
74	N/A - 0041300096A	Anti dumping of chain
75	XXS0040900693	10amp Fuse Holder
76	N/A - 0040700397	The inside door glass
77	XXS0041300321	Hinge FS600*C FS60WR&C*
78	XXS0040200019	Upper fixer of the inside door glass(right) FS600** FS60W**
79	XXS0040200017	Upper fixer of the inside door glass(left) FS600** FS60W**
80	XXS0040200015	Lower fixer of the inside door glass(right) FS600** FS60R/CER FS60W**
81	XXS0040200013	Lower fixer of the inside door glass(left) FS600** FS60R/CER FS60W**
82	N/A - 0040700876	The middle door glass
83	N/A - 0040800288	The fixer of the middle door glass
84	N/A - 0041300254	H10 Handle
85	N/A - 0042100094	Vent hole of door
86	N/A - 0041800884	The outside door glass assembly
87	XXS0040803399	Door assembly FS60WR&C*