



PARMCO

FX60CER

If PART Number has N/A then Parmco is unable to supply.

Diag #	PART Number	DESCRIPTION
1	N/A - 0040101851	postnotum
2	N/A - 0042100096	face-plate
3	N/A - 0041300044	hinge
4	N/A - 0040200545	Plastic decoration
5	N/A - 0040200546	Plastic decoration
6	XXS0040900332	Thermostat FX60CER FX60H
7	XXS0040900721	Function Switch FX60CER FX60H
8	XXS0040900333	Timer FX60CER FX60H
9	XXS0040900105	Simmerstat FX60CER
10	XXS0041800207	Control panel FX60CER FX60H
11	XXS0040300487	Knob base - Thermostat FX60CER FX60H
12	XXS0040300483	Knob base - Function switch FX60CER FX60H
13	XXS0040200160	Knob base - Timer FX60CER FX60H
14	XXS0040200162	Knob base - Simmerstat FX60CER
15	N/A - 0040100020	Knob spring
16	XXS0040200147	Knob - Simmerstat FX60CER FX60H
17	XXS0040200138	Knob - Function switch FX60CER FX60H
18	XXS0040200147	Knob - Simmerstat FX60CER FX60H
19	XXS0040200147	Knob - Simmerstat FX60CER FX60H
20	XXS0040900463	Element - Small FS60CER-8W
21	XXS0040900462	Element - Large FS60CER-8W
22	N/A - 0041800208	splice
23	N/A - 0040100161	Support small stove plate gasket
24	N/A - 0040100159	Large disk support stove gasket
25	N/A - 0040900782	FS furnace plate cable assembly long
26	N/A - 0040900783	FS furnace plate cable assembly short
27	N/A - 0040900784	Heat indicator light cable
28	XXS0040900028	Connection box FX60CER FX60H
29	N/A - 0042300097	Back cover
30	N/A - 0040101933	built-in fitment(left)
31	N/A - 0040101934	built-in fitment(right)
32	N/A - 0040101846	postnotum
33	N/A - 0040101980	baffle plate
34	N/A - 0040800026	The rear attemperator
35	N/A - 0042300093	Vent-pipe of oven
36	XXS0040900011	Thermostat - Overheat 170° FX60CER FX60H
37	N/A - 0040100131	Fixer of temperature limiter
38	N/A - 0020101133	Upper rear crosspiece
39	N/A - 0040101185	The rear support(left)
40	N/A - 0040101186	The rear support(left)
41	N/A - 0040800544	The tube attemperator
42	N/A - 0042100170	Tube (gas enamel)
43	N/A - 0042100171	Frame of tube (60Fs)
44	N/A - 0042100193	Side panel (right)

45	N/A - 0020101205	The front fixer of cooktop
46	N/A - 0042100192	Side panel (left)
47	XXS0040400060	Door Seal FX60CER FX60H
48	N/A - 0040101852	front panel
49	XXS0040900029	Lamp assembly FX60CER FX60H
50	XXS0040900030	Element - Oven upper FX60CER FX60H
51	N/A - 0040101932	Fixer of thermostat prob
52	XXS0040900031	Element - Oven lower FX60CER FX60H
53	N/A - 0020101216	protection part of lower heater
54	N/A - 0020101208	isolation of lower heater
55	N/A - 0040101071	The bottom fixer of right side panel
56	N/A - 0040101070	The bottom fixer of left side panel
57	N/A - 0040101921	Adjustable foot
58	N/A - 0040101558	The fixer of hinge
59	N/A - 0040101115	Lower anterior crosspiece
60	N/A - 0040900776	oven wire
61	XXS0042100206	Oven slide rail FX60CER FX60H
62	XXS0042100207	Oven slide rail FX60CER FX60H
63	N/A - 0042100191	Drawer assembly (black)
64	N/A - 0041800206	Cover of drawer assembly (white)
65	N/A - 0040100487	H1 Handle
66	N/A - 0040800035	Flat biscuit tray
67	XXS0040100223	Grill rack FX60CER FX60H
68	N/A - 0040700321	The inside door glass
69	XXS0041300040	Door Hinge FX60CER FX60H
70	N/A - 0040200019	Upper fixer of the inside door glass(right)
71	N/A - 0040200017	Lower fixer of the inside door glass(right)
72	N/A - 0040200015	Lower fixer of the inside door glass(right)
73	N/A - 0040200013	Lower fixer of the inside door glass(left)
74	N/A - 0040700215	The middle-layer glass
75	N/A - 0040800288	Glass hook
76	N/A - 0010801929	Venthole of door
77	N/A - 0040100487	H1 Handle
78	N/A - 0041800205	The outside door glass
79	XXS0040802924	Door assembly FX60CER FX60H