 


Installation and Operating Instructions

Models:

HO-4-6S-CER

HO-4-6NF-CER

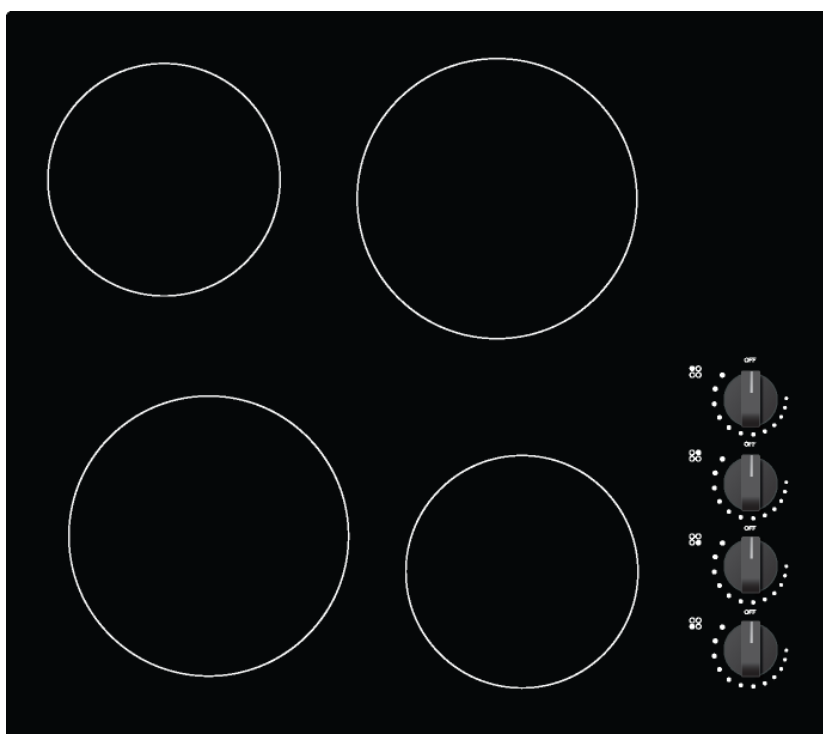

As part of Parmco Appliances commitment to improving and updating product ranges, we reserve the right to alter, change and update technical specifications and appearance attributes of all Parmco Appliances products. E&OE



Dear Valued Customer,

Thank you and congratulations on purchasing your new Parmco appliance.

All Parmco products are made to the highest quality and design standards. We are sure you will enjoy your new appliance.

As a note please read through these instructions carefully, as these will assist you in gaining a complete understanding of the functions and features offered by your appliance.

Please take special note of all detailed technical information and installation instructions. It is essential that you only allow a qualified technician to install this appliance to ensure the safety and reliability of this appliance.

Furthermore, not using appropriate personnel to install this appliance may affect any future warranty claims lodged, so please check with Parmco Appliances before any installation is carried out.

We hope you enjoy your new appliance. If you would like to find out more about this product or any other products in Parmco's extensive range, visit us on the web at www.parmco.co.nz.

Regards,
The Parmco Team



Product Introduction

The HO-4 ranges of ceramic hobs are able to meet the requirements of even the most demanding cooks. Its stylish controls and sleek design give something more to those who require exceptional kitchen appliances.

As always, when buying a Parmco product, quality and peace of mind are as important as the product itself. Hence we offer a 5 year warranty support on your new ceramic cooktop. If you would like more information or require detailed product specifications, please visit Parmco's website at www.parmco.co.nz.

Working Principle

The HO-4 Parmco hob employs sophisticated microcomputer technology. This controls all aspects of the hobs' heating and timing requirements. The heat resistant wiring ensures longevity, while the advanced heating technology provides all the benefits ceramic cooking can offer.

Safety

Excessive Heat Protection

Sensors mounted in the hob itself monitor the temperature on each hotplate. Should excessive heat occur under any circumstances, your ceramic hob will automatically disconnect the elements and cease the power supply.

Residual Heat Indicators

After using the hob, residual heat remains for some time while the hob cools. During this time, the indicator light will display to warn of heat still being emitted.

Installation

Selection of Installation Equipment

Cut out a hole in the table surface according to the sizes shown in the diagram. For the purpose of installation and use, a minimum of 50mm space must be preserved around the hole.

Be sure the thickness of the table surface is at least 30mm. Please select heat-resistant table material to avoid larger deformation caused by the heat radiation from the hotplate.

As shown in Figure (1).


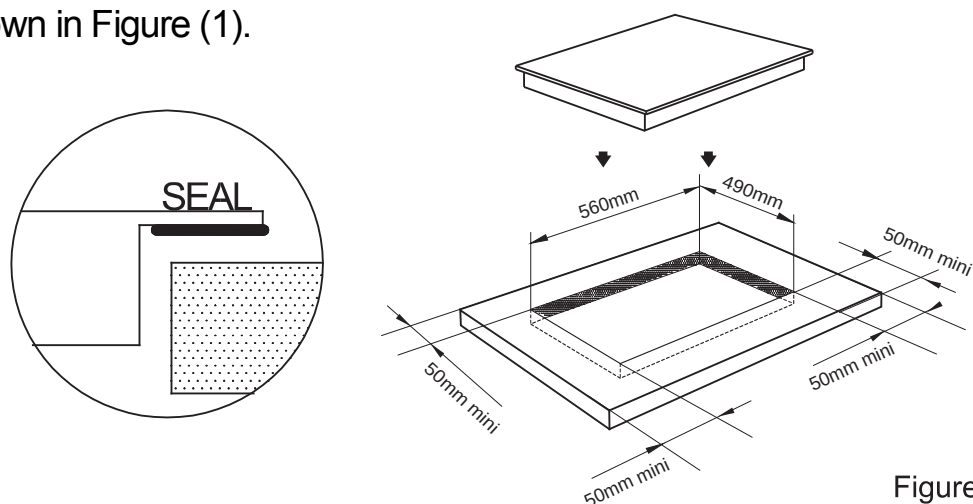 


Figure (1)

Make sure the hob is well ventilated and that there are no obstructions between the hob and the ventilation system.

 
Upon installation, inspect your hob to ensure it is in good working state.

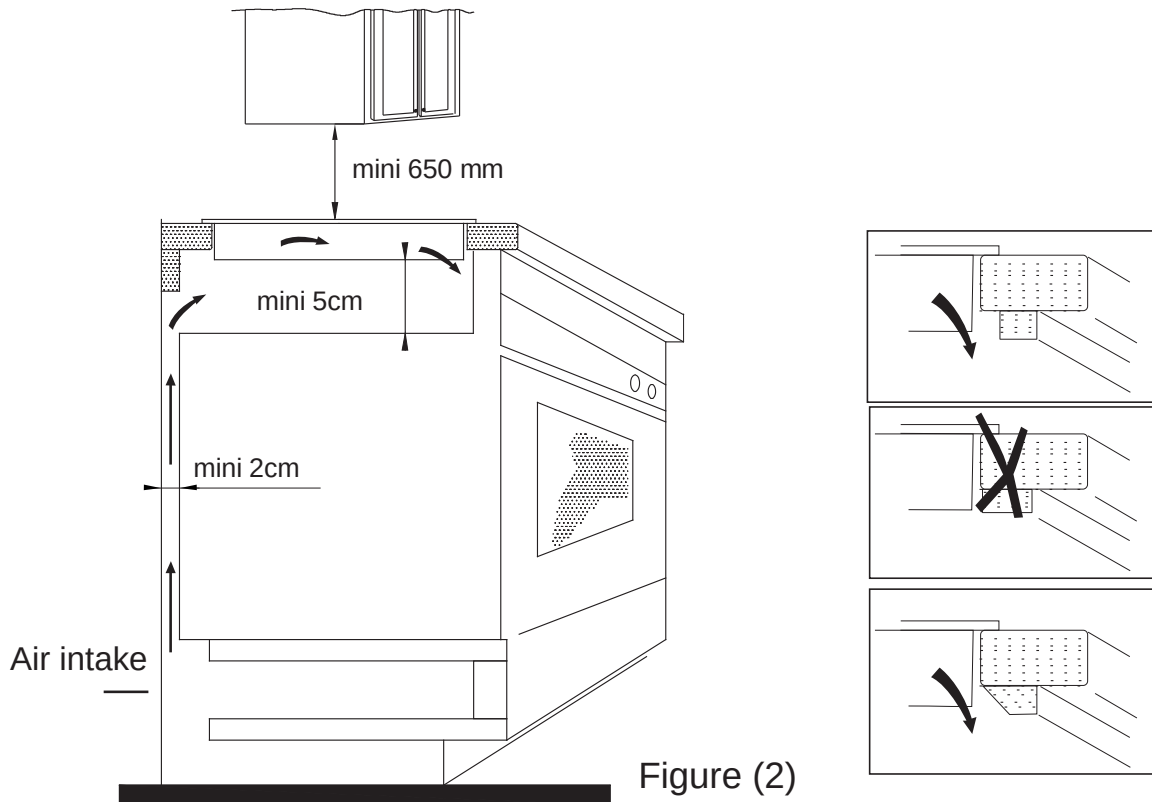

Note: The safety distance between the ceramic hob and the ventilation system should be at least 650mm.

When installing the hob over drawers, a board must be installed 10mm underneath the hob. The board must be made of suitable heat resistant properties.

 Fix the hob to the mounting point with the screws and brackets provided. Adjust the bracket position to suit for different table top thickness.

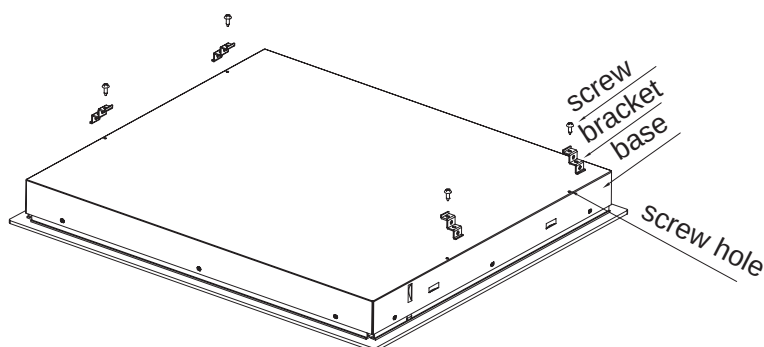

Cautions

1. Do not attempt to install this hob yourself. This hob is only to be installed by a qualified technician.
2. Do not install this hob near or on cooling appliances such as dishwashers or dryers.
3. All areas exposed directly to the hob during its operation must be made of heat resistant materials to avoid damage.
4. All adhesives used when mounting the hob must contain heat resistant properties.
5. Use only approved cleaners to clean this hob.
6. Do not clean the hob with any kind of steam cleaner.
7. To avoid a hazard, under bench access must be restricted. Installation of the board underneath the hob must be made of suitable heat resistant materials.
8. The adult should supervise children to make sure children can not play with the appliance.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction, concerning the use of the appliance by a person responsible for their safety.
10. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
11. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
12. Metal objects such as knives, forks, spoons and lids should not be placed on the surface of glass panel as they may become hot.

Power Line Connection

The socket should be connected according to the relevant standards or connected to a single-pole cut-out. 30AMP minimum supply.

The method of connection is shown in Figure (3):


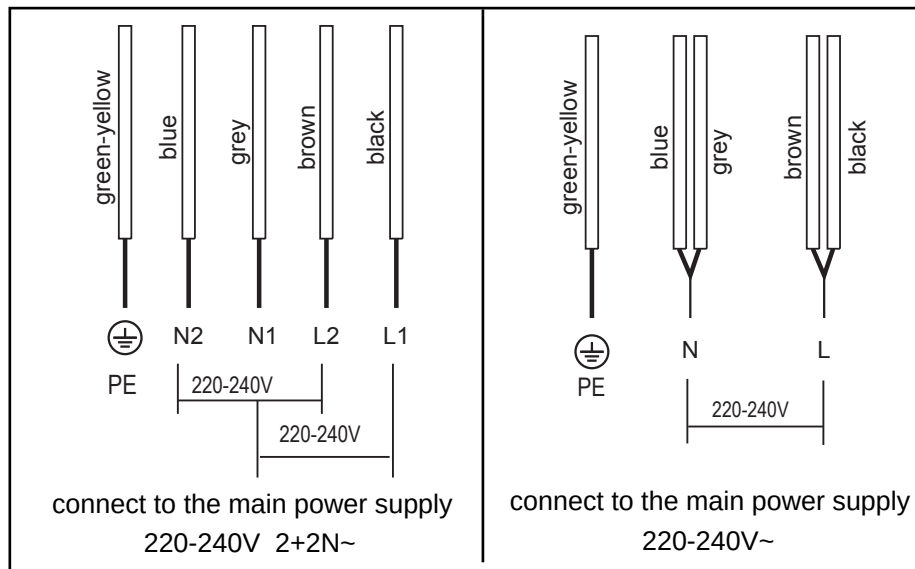 



Figure (3)

- If the power cable is damaged, cease using the appliance immediately.
- If the hob is connected directly to the mains, an omnipolar circuit breaker must be installed with a minimum opening of 3mm between contacts.
- The hob must be installed in compliance with all relevant New Zealand standards.
- The cable must not be bent or compressed.
- The cable must be checked regularly and only replaced by a qualified technician.

 The Ceramic Cooker Hob Appearance

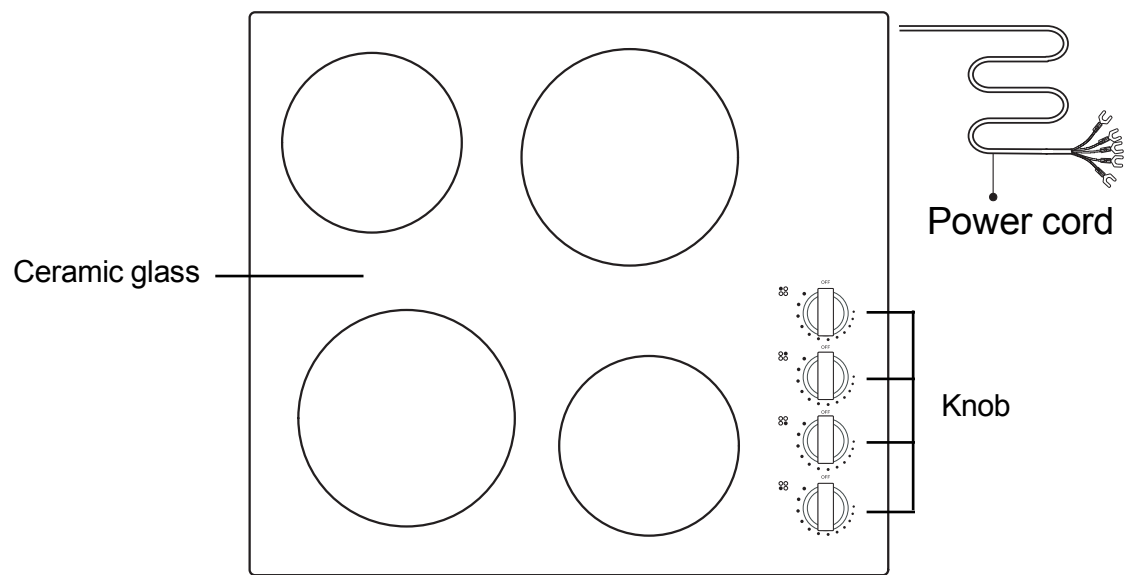

Schematic Diagram of the Control Panel

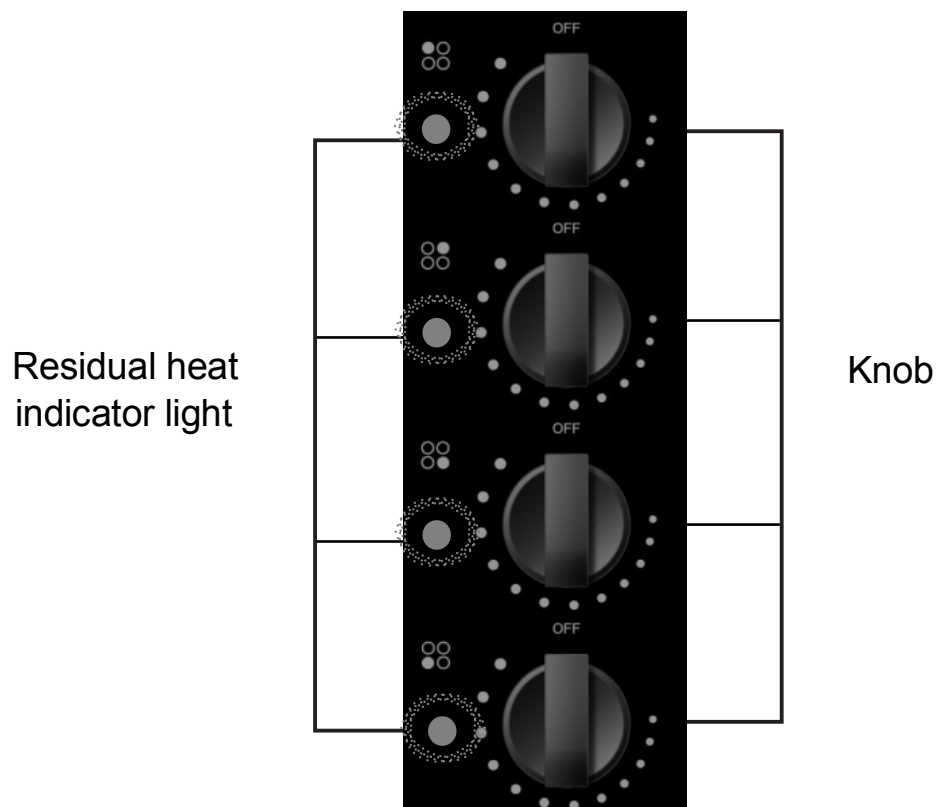 

Instructions for Use

Put the pot in the centre of the heating zone.

Operation Instructions:

After the power supply is connected, put the pot on the centre of the ceramic plate. Turn the knob clockwise or anticlockwise to turn on the hob.

Residual heat indicator lights:


When the glass plate is still hot after it has been turned off, the residual heat indicator lights will light up. Don't touch the glass plate until the indicator light goes out.

Shut down: After using, please turn the knob to "OFF". The hob will stop heating.

The power of each heating zone is shown as follow:

Heating zone	Left rear	Right rear	Right front	Left front
Power	1200W	1800W	1200W	1800W

 Safety and Maintenance

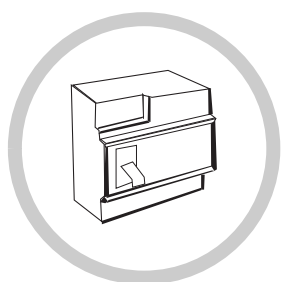

A dedicated power protection airswitch must be used.



Never use the ceramic hob in high temperature environments such as near a gas stove or kerosene stove.



 
Do not put any detergents or flammable materials in the equipment installed under the ceramic hob.



Metallic objects such as knives, forks, spoons and lids should not be placed on the hob since they can get hot.



Do not heat sealed foods such as canned goods before opening their covers to avoid dangers of explosion.

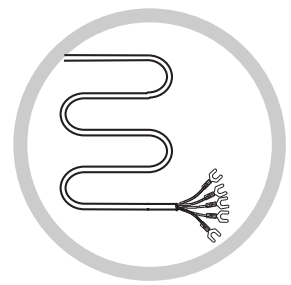

If the power supply cord is damaged, it must be replaced by a service agent or a similarly qualified technician.



Do not cook using rough or uneven surfaced pots or pans, as they may damage the ceramic surface.



If the surface of the hob is damaged, cease using immediately and seek a qualified technician.



Never wash the ceramic hob with water directly to avoid danger.



 
Do not cook on the ceramic hob without liquid or food inside as this may affect the hob's performance.




After extended use, residual heat will remain on the corresponding heating zone. Treat with care and caution.



Always keep the hob away from the reach of children or infirm persons. Do not let them use appliance without supervision.

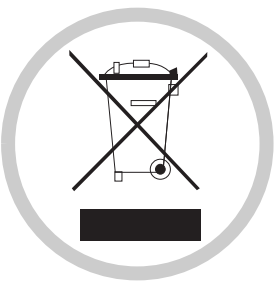

 DISPOSAL: Do not dispose product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

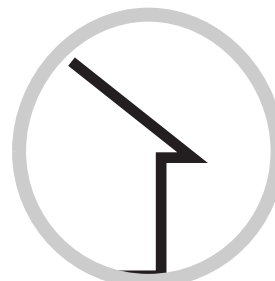

This hob is intended for indoor use only.



Maintain a regular cleaning routine to ensure best performance. Failure to do so will result in reduced performance and possible damage.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by a service agent or a similarly qualified person in order to avoid a hazard.
4. A steam cleaner must not to be used.
5. Switch off the hob element by its control after use and do not rely on the pan detector.
6. The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Cleanness and Maintenance

You can easily clean the surface of the ceramic hob by following the methods given in the table.

Type of contamination	Method of cleaning	Articles used for cleaning
Light	Clean with a damp cloth and dry it with another cloth.	Cleaning sponge
Accumulation of dirt	Clean with damp cloth and dry it with another cloth.	Special cleaning sponge for ceramic glass
Rings and lime crumbles	Apply white vinegar to the polluted zone, then wipe it dry with a soft cloth or a special wipe in local markets.	Ceramic cleaner, available from most supermarkets.
Sweetmeat, melted aluminium or plastics	Use a scraper suitable for ceramic glass (to protect glass, a silicon product is preferred) to remove residuals.	Ceramic cleaner, available from most supermarkets.

Note: please disconnect the power before cleaning.



Parmco Appliances extended 5 year warranty

The Warranty:

- Subject to the terms and conditions contained within this warranty, if the product is not of Acceptable Quality (as defined in the Consumer Guarantees Act) within 5 years of the date of original purchase, then Parmco Sales undertakes to repair or, at its sole discretion, replace the product.
- The warranty does not cover the costs of transport, mileage or travelling time if the product is located beyond 30km of a recognised Service Agent.
- This warranty is offered as an extra benefit, and does not affect other legal rights, which can not be modified or excluded by agreement.
- This warranty only applies to goods supplied and installed in the North and South Islands of New Zealand.
- The provisions of this warranty are in addition to the rights and remedies available to consumers under the Consumer Guarantees Act 1993.

Product _____ Date of purchase _____

Dealer / Retailers Name _____

Please retain this Warranty card together with receipt or other proof of purchase date when seeking service during the warranty period

For your convenience we recommend you
attach proof of purchase here



The Warranty is not valid:

- If the product is not installed and operated in accordance with the operating instructions.
- If the product is not installed to comply with the electrical, gas, plumbing and other Regulations and Codes of Practice in New Zealand.
- If the product is operated on voltages or frequencies outside the normal range for domestic appliances in New Zealand.
- If the product is not used in normal domestic use, or if it is used in a business as defined in the Consumer Guarantees Act.
- If any serial number has been removed or defaced.
- If proof of date of purchase is not supplied, except at the sole discretion of Parmco Sales. Proof of purchase can be for the product itself, or if installed with a kitchen or house then proof of purchase can be from a Parmco reseller of products supplied by Parmco.

Liability under this warranty will not be accepted for:

- Wear and tear from normal domestic use.
- Damage in transport.
- Damage caused to the product by neglect, abuse, negligence, wilful act or misuse.
- Any defect caused by accident, misuse, neglect, tampering with or unauthorised modifications of the appliance or any attempt at internal adjustment or repair by any person other than an Authorised Service Agent.
- Service calls that relate principally to the following:
 - Instruction on how to use the product.
 - Repair or replacement of house fuses, electrical wiring, gas fitting or plumbing.
- Wear and tear caused by normal use of the product.
- Normal or scheduled maintenance including blocked filters or ducting.
- Consumable items such as light bulbs.
- Any damage to ceramic glass hobs caused by spills when cooking.
- Any breakage or damage of glass items.
- Any damage caused by non recommended product used for cleaning, maintaining, lubricating or similar.
- Any aspect relating to the installation of the product, or damage caused during installation.
- Any third party (including reseller) or consequential loss or damage (direct or indirect) however arising.