

P A R M C O

VS60WR4

If PART Number has N/A then it is only available as special order

Diag #	PART Number	DESCRIPTION
1	XXS0042100401	DNO FS60R-4W/8W Cooktop
2	XXS0041800886	Coil element small
3	XXS0041800887	Coil element large
4	XXS0040102356	drip pan (small) - FS60R
5	XXS0040102357	drip pan (large) - FS60R
6	XXS0040901013	Socket both back elements
7	XXS0040901012	ELEMENT SOCKET - FS60R-8W
8	N/A - 0040102376	Front connector of the cooktop
9	N/A - 0040400158	Rubber mat (left)
10	N/A - 0040400159	Rubber mat (right)
11	XXS0040200147	Knob FS60 stoves
12	N/A - 0040100020	Knob spring
13	XXS0040200127	Knob Collar - FS60R-8W
14	XXO0040900025A	Neon light - PPOV-6S-DT-3 FS*00**
15	XXS0040900026A	orange indicator light - FS60R-8W FS900**
16	N/A - 0041800890	rear controller with 8 functions
17	XXS0040901045	10A side plug socket - FS60CER/R-8W/4W
18	XXS0040901046	ON/OFF Switch - FS60R-8W
20	XXH0040900105	SIMMERSTAT - HX-1-6S-CER, -6NF-CER FS*00*C
21	XXO0040900332	THERMOSTAT - VERSO 1-1, OX-1-6S-5 OX7-2 OX7-3 OX7-4 OX7-5 PPOV-6S-SIDE FS*00**
22	XXS0040901391	mechanical timer
23	XXO0040900721	Function Switch - Lower Oven - PPOV-6S-DT-3
24	XXS0040200573	cooktop shaft bracket(left) - FS60CER-8W
25	XXS0040200572	cooktop shaft bracket (right) - FS60CER-8W
26	N/A - 0040102353	back plate of control panel
27	XXO0042100360	Oven Tray - OX7-3 OX7-4 OX7-5
28	XXS0040101503A	Wire Rack - FS60R-8W FS600**
29	XXO0040101502	GRILL RACK - VERSO 1-1, OX7-2 OX7-3 OX7-4 OX7-5 FS600**
30	N/A - 0040100820	Pylons fixed pin
31	XXO0041300228	Side rack - Right - OX7-3 OX7-4 OX7-5 FS*00**
32	XXO0041300227	Side rack - Left - OX7-3 OX7-4 OX7-5 FS*00**
33	XXS0040400161	Door Seal FS600**
34	XXO0040900029	COMPLETE LIGHT FITTING FS*00**
35	XXO0040900484	ELEMENT, UPPER - VERSO 1-1 OX7-2 OX7-3 OX7-4 OX7-5 FS600**
36	XXO0040900031	ELEMENT, LOWER FS600**
37	N/A - 0040101509	protective shield of lower heater
38	N/A - 0020101208	Gas baking bottom panel
39	N/A - 0040802006	Tube attemperator

40	N/A - 0040802123	Rear attenuator
41	N/A - 0040102183	The fixing plate of rear fan
42	XXS0040900638	Overheat Thermostat - FS60R-8W
43	N/A - 0040901368A	oven wire
44	N/A - 0042100613	Front panel
45	N/A - 0040200657	Front panel baffle (left)
46	N/A - 0040200658	Front panel baffle (right)
47	N/A - 0042100560	front cover of drawer (black)
48	N/A - 0042100326	Rear cover of drawer (black)
49	XXS0042100325	DNO -Complete drawer FS60R-4W/8W and FS60CER-8W
50	N/A - 0040102194A	Drawer bracket
51	XXS0040200024	Adjustable foot FS*00**
52	N/A - 0042100561	Before the beam
53	N/A - 0042100096	60FR frame of cavity
54	XXO0040101558	HINGE GUIDE - PYRO-2 VERSO 1-1 OX7-2 OX7-3 OX7-4 OX7-5 FS600**
55	XXS0041300220	Telescopic rail FS*00**
56	N/A - 0042100324	Side beam (right)
57	N/A - 0042100323	Side beam (left)
58	N/A - 0042100501	Cavity (black enamel)
59	N/A - 0040102181	Rear left fixer
60	N/A - 0040102182	Rear right fixer
61	N/A - 0042100562	Lower back beam
62	N/A - 0040101434	Bottom cover of cooling fan system
63	N/A - 0040101674	Vent hole of oven
64	N/A - 0040101433	Top cover of cooling fan system
65	XXO0040900426	COOLING FAN - VERSO 1-1 OX7-2 OX7-3 OX7-4 OX7-5 FS*00**
66	XXO0040900240	Thermostat 65degC - PPOV-6S-DT-3
67	N/A - 0042100558	Side panel
68	N/A - 0040102841	Upper rear crosspiece
69	N/A - 0040102826	Back cover
70	XXO0040900028	Connector box - PPOV-6S-DT-3
71	N/A - 0041300096A	Anti dumping of chain
72	N/A - 0040901208	0
73	N/A - 0040700397	The inside door glass
74	XXS0041300321	Hinge FS600*C
75	XXS0040200019	Upper fixer of the inside door glass(right) FS600**
76	XXS0040200017	Upper fixer of the inside door glass(left) FS600**
77	XXS0040200015	Lower fixer of the inside door glass(right) FS600** FS60R/CER
78	XXS0040200013	Lower fixer of the inside door glass(left) FS600** FS60R/CER
79	N/A - 0040700876	The middle door glass
80	N/A - 0040800288	The fixer of the middle door glass
81	N/A - 0041300254	H10 Handle
82	N/A - 0042100094	Vent hole of door
83	N/A - 0041800889	The outside door glass assembly
84	XXS0040803399	Door assembly