


PARMCO

INSTALLATION AND OPERATING INSTRUCTIONS

Model: DR8WHP

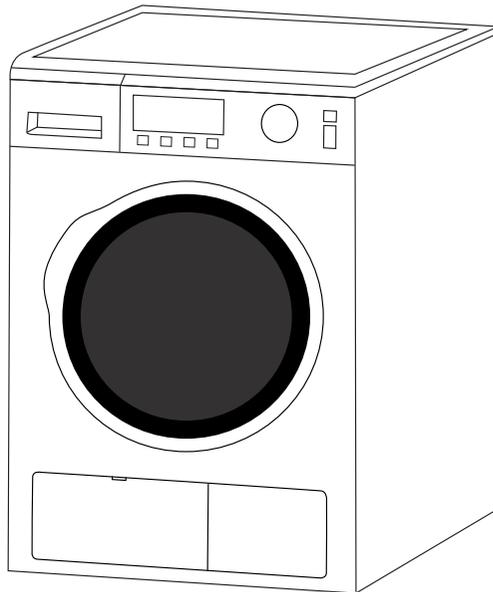

As part of Parmco Appliances commitment to improving and updating product ranges, we reserve the right to alter, change and update technical specifications and appearance attributes of all Parmco Appliances products. E&OE.



Dear Valued Customer,

Thank you and congratulations on purchasing your new Parmco appliance. All Parmco products are made to the highest quality and design standards. We are sure you will enjoy your new appliance.

As a note, please read through these instructions carefully. These will assist you in gaining a complete understanding of the functions and features offered by your appliance. Please take special note of all detailed technical information and installation instructions. It is essential that you follow these instructions to ensure the safety and reliability of this appliance.

Furthermore, not using appropriate personnel to install this appliance may affect any future warranty claims lodged, so please check with Parmco Appliances before any installation is carried out.

We hope you enjoy your new appliance. If you would like to find out more about this product or any other products in Parmco's extensive range, visit us online at www.parmco.co.nz.

Regards,
The Parmco Team

PARMCO

Inspiring kitchens, entertaining homes

Parmco Appliances extended 7 year warranty



The Warranty:

- This appliance is intended for domestic use in the owners' home. Use of the appliance for commercial purposes will limit the warranty period (please see Parmco website for commercial details).
- Subject to the terms and conditions contained within this warranty, if the product is not of Acceptable Quality (as defined in the Consumer Guarantees Act) within 7 years of the date of original purchase, then Parmco Sales undertakes to repair or, at its sole discretion, replace the product.
- The warranty does not cover the costs of transport, mileage or travelling time if the product is located beyond 30km of a recognised Service Agent.
- This warranty is offered as an extra benefit, and does not affect other legal rights, which can not be modified or excluded by agreement.
- This warranty only applies to goods supplied and installed in the North and South Islands of New Zealand.
- The provisions of this warranty are in addition to the rights and remedies available to consumers under the Consumer Guarantees Act 1993.

The Warranty is not valid:

- If the product is not installed and operated in accordance with the operating instructions.
- If the product is not installed to comply with the electrical, gas, plumbing and other Regulations and Codes of Practice in New Zealand.
- If the product is operated on voltages or frequencies outside the normal range for domestic appliances in New Zealand.
- If the product is not used in normal domestic use, or if it is used in a business as defined in the Consumer Guarantees Act.
- If any serial number has been removed or defaced.
- If proof of date of purchase is not supplied, except at the sole discretion of Parmco Sales. Proof of purchase can be for the product itself, or if installed with a kitchen or house then proof of purchase can be from a Parmco reseller of products supplied by Parmco.
- If the products are purchased in a second hand condition from other parties (including but not limited to TradeMe, Sella, etc.)

Liability under this warranty will not be accepted for:

- Wear and tear caused by normal domestic use of the product.
- Damage in transport.
- Damage caused to the product by neglect, abuse, negligence, willful act or misuse.
- Any costs associated with the repair, replacement, removal or reinstallation of products installed in a damaged condition.
- Any defect caused by accident, misuse, neglect, tampering with or unauthorised modifications of the appliance or any attempt at internal adjustment or repair by any person other than an Authorised Service Agent.
- Service calls that relate principally to the following:
 - Instruction on how to use the product.
 - Repair or replacement of house fuses, electrical wiring, gas fitting or plumbing.
 - Normal or scheduled maintenance including blocked filters or ducting.
 - Consumable items such as light bulbs.
 - Any damage to hobs caused by spills when cooking.
 - Any breakage or damage of glass items.
 - Any damage caused by non recommended product used for cleaning, maintaining, lubricating or similar.
 - Any aspect relating to the installation of the product, or damage caused during installation including blocked access for repair.
 - Any third party (including reseller) or consequential loss or damage (direct or indirect) however arising.

Product _____	Date of purchase _____
Serial Number _____	
Dealer / Retailer Name _____	
Please retain this Warranty card together with receipt or other proof of purchase date when seeking service during the warranty period	

Please contact Parmco at 09 573 5678 if your appliance needs servicing under warranty. Please have your model number and proof of purchase ready. Warranty repairs must be authorized by Parmco.



WARNING



Read and understand thoroughly this safety instructions before use. The items indicated here are very important safety precautions, which must be followed. Any failure and losses caused by ignoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and any liability.

The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised.

The rear surface of appliance shall be placed against a wall.



Possible electric shocks

- Disassembly, repair or modification can't be carried out by people other than professional maintenance staffs.
- The household electrical supply system (the current, the voltage, the cable) such as a fuse with suitable specifications should be provided. should meet requirements of the dryer under normal load, and safety devices.
- The power plug must be connected to a three-core socket with an earth wire and is grounded properly and reliably.
- If the supply cord is damaged, it must be replaced by the manufacture, its service agent or similarly qualified persons in order to avoid a hazard.
- Don't disconnect the power plug by pulling the supply cord .Hold the power plug with your hand.
- Don't use the supply cord when connection of the power plug and the supply cord is loose.
- Don't touch the power plug with wet hands. Wipe dust or water drops over the power plug off with dry cloth.
- Don't over-bend the supply cord or put it under heavy weight.
- Don't use the supply cord /socket /power plug if it is damaged or broken.



Possible Explosions

- Don't put combustible liquid such as gasoline, petrol and alcohol into the appliance or nearby. Don't put clothes with that liquid into the appliance.
- Don't connect / disconnect the power plug when leakage of gas or other combustible gas occurs.



Fire accidents / short circuit or electric leakage may occur

- Do not install the appliance close to fire sources or heat sources.
- Do not rest any burning candles or cigarettes on the appliance.
- Do not install the appliance in places with dampness or suffer from rainfalls, lest igniting damages or other accidents occur easily due to gathered water drops on electrical components.
- Do not install the dryer in places under direct sunshine, lest the plastic components and rubber components become aged.
- Do not use water shooting at the appliance when cleaning it.
- In order to avoid danger of fires caused by excessive drying, do not use the appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
- If you have washed your laundry with stain remover, you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- A carpet must not obstruct the openings in the base.

- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.



- **In the appliance enclosure or in the built-in structure, keep ventilation openings clear of obstruction.**
- **Do not damage the refrigerant circuit.**
- **Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.**
- **The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.**

Personal injury may occur


- This machine is not intended for use by young children or infirm persons without supervision.
- The package materials may be dangerous to children. Put all package materials (e.g. the plastic bag) to places unreachable to children.
- Don't touch laundries in the drying drum till the dryer stops working completely.
- Don't keep children or pets nearby when the dryer is working, for they may be trapped into the dryer. Please check carefully the drum before closing the door .

Other instructions

- This appliance is designed for domestic use .It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine dried. Follow the instruction on each garment label.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- Do not climb onto the dryer or rest heavy objects / heating devices or items with water or liquid leakage on the dryer, lest deformation of the face panel and the plastic component occur.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard ,sharp material can cause extensive damage and must not be placed into the machine.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable, or vent hose.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use, clean and maintenance.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be places in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are use, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- The tumble dryer is not be used if industrial chemicals have been used for cleaning.
- The lint must not to be allowed to accumulate around the tumble dryer.
- Do not dry unwashed items in the tumble dryer.
- Fabric softeners or similar products should be used as specified by the fabric softener instructions.
- The final pat of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- That exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- That the appliance must not be installed behind a lock able door, a sliding door or a door with a hinge on the opposite side to hat of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- Machine must be placed in a clean place , no water, ice and combustibile materials there. To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.
- If the tumble dryer is not completely leveled, need to adjust the front feet up: to lower the dryer by turning anti-clockwise and to ascend it by turning clockwise till the appliance will not shake.

- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Remove all objects from pockets such as lighters and matches.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil.
- Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, tacking or storing oil affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.
- Contains fluorinated greenhouse gases covered by the Kyoto Protocol.
- Hermetically sealed system.
- Do not vent gases into the atmosphere.
- Refrigerant(Type): R-134a(GWP=1430)
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been, given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.


Select the Buzzer

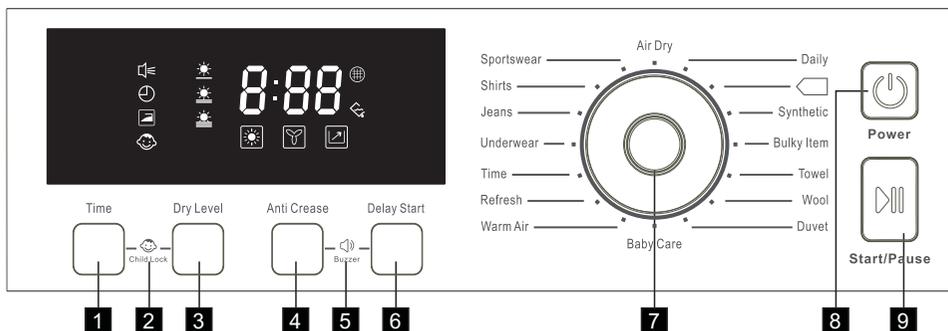

- 1.Time 2.Child Lock 3.Dry Level 4. Anti Crease 5.Buzzer
6.Delay Start 7.Programme Selection Knob 8.Power 9.Start/Pause

Product description

- 1.Control Pane
- 2.Water Tank
- 3.Fluff filter
- 4.Door
- 5.Condenser cover
- 6.Adjustment leg

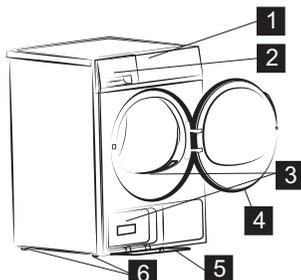

i First Use

- Ensure that the electrical connections comply with the installation instructions.
- Remove the poly styrene block and any material from the drum.
- Before using your tumble dryer for the first time, we recommend that you place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand new tumble dryer.

i Daily Use


Connect the appliance

- Open the door. Place the laundry in the drum, one item at a time, shaking them out as much as possible.
- Close the door. Please check the laundry does not get caught between the door and filter.



Select the required programme

Turn the program selector dial to the required program. The corresponding function lights is on. The program will be switched off if you have not pressed any button for 10 minutes.

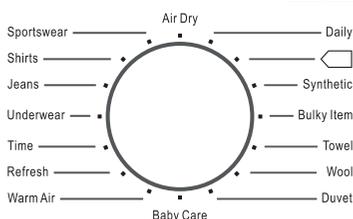

Attention:

Some thick clothes (jeans, big towel). Because of the material characteristics, some place hard to dry. If you find that they are not completely dry at the end of the program. It is recommended to use the "Time" program to dry again.

Automatic controlled drying

You can choose different programme base on your different clothes materials. The device has the function with sensor the moisture in order to automatically adjust the drying time for optimal drying. This drying system is fit for most programmes except "Time", "Refresh", "Warm Air".

 
Programme Option buttons

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button.

Select the Buzzer

After turning on the appliance, the buzzer is off if you do none operation. The buzzer can be turned on or be turned off during the process. By pressing "Anti crease" and the "Delay start" button at the same time, the buzzer will be turned on and the corresponding pilot light comes on. when the buzzer is on, the signal will sound in the following case:

- Open the door during operation.
 - When the water container is full.
 - At the end of program after cooling phase.
- When the buzzer is on, if you press the "buzzer" button once more, the buzzer will be switched off.



Select the Dry level

- Before you start the machine, you can choose the dry level. The dry level is divided into three grades. (* Heavy * Strong * Normal)
- This option is only suitable to the five programs: Daily, Cotton, Synthetic, Bulky Item, Towel.

Select the Anti-creasing

Anti-creasing is a default setting while all programs are switched off. Anti-creasing can be selected while the program is switched off or running.

Select Delay start

This button allows you to delay the starting of the program by 24 hours max. This option must be selected after having selected the program and before pressing Start/Pause to start the program. Every time the button is pressed, the time is increased by 1 hour.



It can be selected in both cases before and after selecting option programme (Buzzer, Anti-creasing). The countdown begins after you have pressed the Start/Pause button and the corresponding light illuminates. The display shows the remaining time. The remaining time is displayed hour by hour.

Display

The display shows the following information:

After you have selected the program, its duration (in hours and minutes) appears on the display. It is calculated automatically on the basis of the maximum load accepted for each type of fabric and of the required degree of drying. When the program starts, the remaining time is displayed every 1 minutes.

● Delay Start.

If you have selected a delay time by means of the relevant button, the display shows it, The countdown is displayed hour by hour. Once you press the "Start/Pause" button, the appliance will start the delayed process. If you want to check the selected program, press the "Delay Start" button again. It shows the duration of the previously selected program.

● Incorrect option selection

If you select an option that is not compatible with the program you have selected, the display shows ErS (error).

If you select other program because of incorrect operation while the program is running, the display shows ErS (error).

Select the Start/Pause

Press this button to start the dryer after having selected the program and the options. If the door of the appliance is opened while the program is running, this button must be pressed again after closing the door in order to restart the program from the point at which it was interrupted. In this cases the light of the Start/Pause button flashes to remind you that the start button needs to be pressed again.

Indicator lights

These lights indicate the following functions:

- Drying light "☀️" This light indicates that the appliance is in the drying phase.
- Cooling light "❄️" This light indicates that the appliance is in the cooling phase. At the end of drying, there is a two minutes cooling phase to cool the laundry.
- End of programme light "🔚" This light is on at the end of the cooling phase.
- Anti-creasing light "👔" This light is on when anti-creasing programme is selected.
- Filter light "🌀" It comes on every cycle to remind you that the filter must be cleaned at the end of the programme.
- Child Lock light "🔒" This light indicated the appliance is locked.
- Buzzer light "🔊" This light is on when buzzer programme is selected.
- Delay Start light "⌚" This light is on when delay start programme is selected.
- Drying Type light, this light is on when drying programme is selected depending on the rotating speed of washing machine.
- Tank full light "💧" It comes on after each program and also when the water tank is full. which remind you to empty the water container. Note! Empty the water container after each program to avoid the alarm when use in next time.

 
At the end of the programme

All drying programs end with 2 minutes cooling phase. If the laundry is not removed at the end of the cycle, the dryer performs an anti-creasing phase (duration:10 minutes maximum). If you don't remove the laundry, the machine will stop automatically at the end of the anti-creasing phase. The display shows "End" and the buzzer sounds if you have selected the buzzer. Turn the program selector dial to "off", all the lights go off.

"Child Lock" functions

When the machine is on, press meantime "Time" and "Dry level" button for several seconds, the system will lock all the buttons. Then all buttons are invalid except "off". If you want to make the appliance to return to the normal state, then press "Time" and "Dry level" button for several seconds meantime again. The function will be released in the following cases:

- Open the door during operation.
- Take out filter drawer during operation.
- Water tank full



You can set again the "Child Lock" function when you restart the machine.

After each use

Important!

If the drying program has to be stopped before it reaches the end, we recommend that you turn the program selector dial to position "Air Dry" and wait until the end of this cooling phase before removing the laundry. This will avoid a build-up of heat inside the appliance. To do this first turn the dial to "off" and then to "Air Dry" and depress the "Start" button.

Modifying the program

To change a program which is running, first cancel it by turning the programme selector dial to "off". Select the new program and press the "Start" button.

Attention:

- According to "-" for the dormant state;
 - standby mode, 10 minutes later, without any operation, enter a dormant state.
 - controller shows "End", 10 minutes later, without any operation, enter a dormant state.



Before loading the laundry

Never tumble dry the following: Particularly delicate items such as net curtains, woolen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.

- Always follow the instructions on garment labels:



may be tumble dried



delicate drying (low temperature)



normal drying (high temperature)



do not tumble dry

- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips, hooks, tie belts, apron strings. Sort laundry according to type and degree of drying required.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract fluff.
- The laundry must be thoroughly spun before tumble drying.
- Easy-care items, e. g. shirts, should be briefly pre-spun before drying.
- Knitted textiles(knitted underwear) may shrink a little during drying. Please do not over-dry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "Iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a brief post-drying time, but at least 30 minutes, This will be necessary particularly for multilayered items (e.g. collars, pockets, etc.)

Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins)

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.

To avoid laundry becoming tangled:

Close zips, button up duvet covers and tie loose ties or ribbons(e.g.of aprons).

Turn items with double-layered fabrics inside out(e.g.with cotton lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

Remove all objects from pockets such as lighters and matches.

Maximum loads

- Recommended loads are indicated in the program charts:
General rules:
- Cotton, linen:** drum full but not too tightly packed;
- Synthetics:** drum no more than half full;
- Delicate fabrics and woollens:** drum no more than quarter full.

Try to load the maximum capacity of the machine as small loads are uneconomical.

Course	Max load		Description of programme
Daily	8kg	9kg	Jeans, work clothes and so on.
	8kg	9kg	Drying cotton clothes.
Synthetic	4kg	4.5kg	Drying synthetic clothes.
Bulky Item	8kg	9kg	Drying heavy clothes.
Towel	4kg	4.5kg	Drying towels, bath towels and other small objects.
Wool	2kg	3kg	Drying wool clothes.
Duvet	3kg	4kg	Drying down garments, duvets.
Baby Care	3kg	4kg	Drying baby clothes.
Warm Air	4kg	4.5kg	Warm the clothes with low temperature and do not feel too cold when they are put on.
Refresh	4kg	4.5kg	Remove the smell of clothes.
Time	2kg	3kg	For silk items
Underwear	4kg	4.5kg	For men's underpants, shirt .
Jeans	4kg	4.5kg	Drying jeans.
Shirts	2kg	3kg	Drying shirts etc.
Sportswear	2kg	3kg	Drying sport wears.
Air Dry	4kg	4.5kg	For men's underpants ,shirt ,T-shirt ,cotton trousers ,etc.

Kind Notice: for drying bathrobe and toweling towel, the max load don't exceed 6kg.

Laundry weights

The following weights are indicative:

Bathrobe	1600g	Night Dress	265g
Napkin	130g	Ladies' Briefs	130g
Quilt Cover	930g	Men's Work Shirt	800g
Sheet	665g	Men's Shirt	265g
Pillow Case	266g	Men's Pyjamas	130g
Tablecloth	330g	Blouse	665g
Towelling Towel	265g	Men's Underpants	130g
Tea Cloth	130g		

Care and cleaning

- You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.
- Don't clean the dryer by directly spraying water onto the dryer. Don't clean the dryer with benzene, thinner, alcohol, or acetone. Otherwise, it may cause discoloration, deformation, damage. electric shock or fire.
- When cleaning the product , be sure to unplug the power cord.
- During the drying cycle ,the control panel or the door may accumulate moisture.

Control Panel

- Clean with a soft, damp clothes. Do not use abrasive substances.
- Don't spray cleaners directly on the panel.
- The control panel finish may be damaged by some laundry pre-treatment soil and stain remover products.
- Apply such products away from your dryer and wipe up any spills or overspray immediately.

Stainless Steel Tumbler

- To clean the stainless steel tumbler, use a damp cloth with a mild, non-abrasive cleaner suitable for stainless steel surfaces.
- Remove the cleaner residue and dry with a clean cloth.



Cleaning the door

Clean periodically the interior part of the door to remove any fluff. Accurate cleaning ensures correct drying.


Dryer Exterior

- The enter dryer has a high-gloss finish. Clean with a soft, damp cloth. Don't use abrasive substances.
- Protect the surface from sharp objects as they may scratch or damage the finish.
- Don't place any heavy or sharp objects or a detergent box on the dryer. Keep them on the purchased pedestal or in a separate storage box.

 Warning | **Do not use the appliance without filter.**

Cleaning the filter

- Open the loading door.
- Remove the lint filter by putting it up and open the lint filter.
- Clean lint, fibre, and cotton raveling by hand or with a soft piece of cloth.
- Close the lint filter and place it back into its housing.
- A layer can build up on the filter pores that can cause clogging of the filter after using the dryer for a while. Wash the lint filter with warm water to remove the layer that builds up on the lint filter surface. Dry the lint filter completely before reinstalling it.
- The lint trap has to be cleaned frequently.

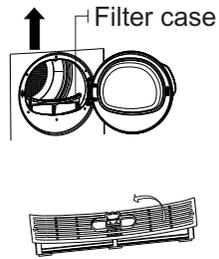


 Warning | **Always clean the lint filter and the inner surfaces of the loading door after each drying process.**

Water container emptied

Water container collects all of the water from condenser. Water container need to be emptied after every drying cycle. If the water container is full, an active programme will break off automatically. the  light will comes on and the buzzer sounds. In order to continue the programme, the water container must first be emptied.

 - 1.Pull out water container
- 3.Pull the water container in dryer



- 2.Tip water into pool
- 4.Press the Start/Pause button



Humidity sensor

 
In the movement process, this device is used for induction clothing humidity, it means that it must be carried on cleaning. Major cause of clean is must scour out the calcium oxide boiler which on the sensor surface up. Clean the sensor in the tumbler (See picture).



Clean the filter drawer


Lint and fibre that could not be captured by the lint filter are blocked in the filter drawer behind the cover. Clean the filter drawer after each drying process. There is a two-level filter in the filter drawer. The first level is the filter drawer sponge and the second level is the filter cloth.

- Press the button to open the cover.
- Unlock the fixer.
- Pull out the filter drawer.
- Clean lint, fiber and cotton raveling on the filter cloth by hand or with a soft piece of cloth.
- When you notice a layer that may lead clogging on the filter cloth, please clean the layer by washing in warm water. Let the filter cloth dry thoroughly before installing back the filter drawer.
- Wash the filter drawer sponge by hand to remove the fiber and lint on the surface. After washing the sponge, squeeze it by hand and remove the excess water. Well-dry the sponge before storing it.



Clean the evaporator

- Clean the lint accumulated on the fins of the evaporator located behind the filter drawer with a vacuum cleaner or a soft brush. You can also clean by hand provided that you wear protective gloves.
- It is recommended to clean it at least twice every month.

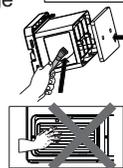

Warning

Never attempt to clean with bare hands. Evaporator fins can harm your hand.

IMPORTANT :

If you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.


Technical data

Dryer Model	DR8WHP
Dryer Capacity(kg)	8.0
(AC V/Hz)	220/50
Rated power (W)	650
Power(left-on mode)(W)	0.48
Power(off mode)(W)	0.48
Programme time at full load(min)	290
Energy efficient gear	Daily
Dimensions(W*D*H)(mm)	595X630X850
Ambient temperature range(°C)	5 ~ 35

Procedure

A separate earth is required by some local rules. In that case, you need buy grounding wire, clips and screws.

 - ⚠ It is dangerous to alter the specifications or attempt to modify this product in any way.
- ⚠ Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- ⚠ Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- ⚠ **IMPORTANT: The appliance must not built-in.**
- **Unpacking**
All packing must be removed before using the appliance.
- **Check accessory**
Open the accessory bag and check the accessories.
- ⚠ Should the appliance be moved, it must be transported vertically.

Accessory	Name	Quantity
	drainpipe	1
	manual	1

Something not working

Malfunction	Possible Cause	Solution
Dryer does not work	<ul style="list-style-type: none"> Mains plug is not plugged in. Loading door is open. Have you pressed the▶ button? 	<ul style="list-style-type: none"> Plug in at main socket. Close loading door. Press the▶ button again.
Drying results unsatisfactory	<ul style="list-style-type: none"> Wrong programme selected. Filter clogged. Incorrect volume of laundry. The sediment on humidity sensor. 	<ul style="list-style-type: none"> Select a different programme the next time you dry(see "Drying Programme "section). Clean lint filter. Observe recommended loading volumes. Washed humidity sensor surface.
Drum light does not work(option)	<ul style="list-style-type: none"> Light bulb is defective. 	<ul style="list-style-type: none"> Replace light bulb.
Drying cycle ends shortly after programme starts. "END" light illuminated.	<ul style="list-style-type: none"> Not enough washing loaded or washing load is too dry for selected programme. 	<ul style="list-style-type: none"> Select higher drying level(e. g. Heavy instead of Strong)
Drying cycle lasts an unusually long time	<ul style="list-style-type: none"> Load volume is too big. 	<ul style="list-style-type: none"> Reduce load volume.

i If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

Earth note

This appliance must be earthed. In case of failure or damage, earth can provide a minimum resistance to reduce the possibility of electric shock. The power cord has grounding wire with device and power cord with plug. Plug must be inserted into a properly installed and grounded socket(in accordance with all local rules and standards).

Water discharge

It's not necessary to discharge the condensed water to the tank, it can be drained out directly. change drainpipe

Pull out the water pipe by means of the arrow direction ,Then install the drainpipe. Such as the pilers can be used if it is difficult to do.



two packaging foam

Removing transport safety packaging foam

 
⚠ Caution!

Before use the machine, the packaging foam must be removed from the drum.

- 1.Open the loading door.
- 2.Pull off adhesive strips from inside machine on top of drum.
- 3.Remove the two packaging foam from the machine.


Check across the corner

When press on the edge, the machine should not shake up and down. (please check two direction) when press on the top frame (across the corner), the dryer shakes, need to re-adjust the adjustable feet. Do not put stacks of blanket or a rope on the floor, which could generate some heat and affect the machine running.



IMPORTANT:

The hot air emitted by the tumble dryer can reach temperature of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.

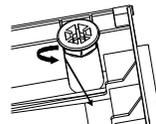

Adjustable screw

Electrical connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.



Warning

THIS APPLIANCE MUST BE EARTHED.

-  The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate.

Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are colored in accordance with the following code:

- Green and Yellow-Earth
- Blue -Neutral
- Brown-Live

The wire colored green and yellow must be connected to the terminal marked with the letter or by the earth symbol or colored green and yellow. ⊕



Warning

- A cut off plug inserted into a socket is a serious safety (shock) hazard.
- Ensure that the cut off plug is disposed of safely.
- Permanent connection
In the case of permanent connection it is necessary that you install a double pole switch. The switch must not break the yellow and green earth cable at any point.

Packaging materials

- The materials marked with the symbol  are recyclable.
>PE<=polyethylene
>PS<=polystyrene
>PP<=polypropylene
- This means that they can be recycled by disposing of them properly in appropriate collection containers.
- **Old machine**
Use authorized disposal sites for your old appliance. Help to keep your country tidy!
- The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.
- The Symbol  mean: caution, risk of fire Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oilaffected items can prevent heat from escaping and so create a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.



Ecological hints

To save energy and to help protect the environment, we recommend that you follow these hints:
Try to load the maximum capacity of the machine as small loads are uneconomical.

- Do not over-dry laundry, this avoids creasing and saves energy.
- Select the drying programme according to the type of laundry and the required degree of dryness.
- Clean the filters regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well.

Standard guarantee conditions

- We undertake that if within 12 months of the date of the purchase this appliance, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:
- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- This guarantee is in addition to your statutory and other legal rights.

This guarantee does not cover

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of our manufacture which are not marketed by us.

Marking explanation

V	Volt	~	Alternating current		
W	Watt	Hz	Hertz		
	Tested safety		CE marking		risk of fire

Electric diagram

