

# Installation and Operating Instructions

## **Models:**


**FS 600-CER**

**FS 600-BKC**

**FS 600-WHC**

**AR 900-CER**

For your convenience, we recommend to attach the serial number label HERE.

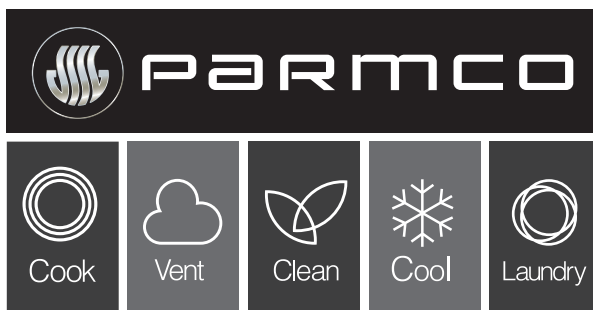

p: 09 573 5678  
f: 09 573 5699  
e: sales@parmco.co.nz  
w: www.parmco.co.nz

# Parmco Appliances extended 7 year warranty

## The Warranty:

- This appliance is intended for domestic use in the owners' home. Use of the appliance for commercial purposes will limit the warranty period (please see Parmco website for commercial details).
- Subject to the terms and conditions contained within this warranty, if the product is not of Acceptable Quality (as defined in the Consumer Guarantees Act) within 7 years of the date of original purchase, then Parmco Sales undertakes to repair or, at its sole discretion, replace the product.
- The warranty does not cover the costs of transport, mileage or travelling time if the product is located beyond 30km of a recognised Service Agent.
- This warranty is offered as an extra benefit, and does not affect other legal rights, which can not be modified or excluded by agreement.
- This warranty only applies to goods supplied and installed in the North and South Islands of New Zealand.
- The provisions of this warranty are in addition to the rights and remedies available to consumers under the Consumer Guarantees Act 1993.

Product \_\_\_\_\_ Date of purchase \_\_\_\_\_  
Serial Number \_\_\_\_\_  
Dealer / Retailers Name \_\_\_\_\_

Please retain this Warranty card together with receipt or other proof of purchase date when seeking service during the warranty period

Please contact Parmco at 09 573 5678 if your appliance needs servicing under warranty. Please have your model number and proof of purchase ready. Warranty repairs must be authorized by Parmco.



## The Warranty is not valid:

- If the product is not installed and operated in accordance with the operating instructions.
- If the product is not installed to comply with the electrical, gas, plumbing and other Regulations and Codes of Practice in New Zealand.
- If the product is operated on voltages or frequencies outside the normal range for domestic appliances in New Zealand.
- If the product is not used in normal domestic use, or if it is used in a business as defined in the Consumer Guarantees Act.
- If any serial number has been removed or defaced.
- If proof of date of purchase is not supplied, except at the sole discretion of Parmco Sales. Proof of purchase can be for the product itself, or if installed with a kitchen or house then proof of purchase can be from a Parmco reseller of products supplied by Parmco.
- If the products are purchased in a second hand condition from other parties (including but not limited to TradeMe, Sella, etc.)

## Liability under this warranty will not be accepted for:

- Wear and tear caused by normal domestic use of the product.
- Damage in transport.
- Damage caused to the product by neglect, abuse, negligence, wilful act or misuse.
- Any costs associated with the repair, replacement, removal or reinstallation of products installed in a damaged condition.
- Any defect caused by accident, misuse, neglect, tampering with or unauthorised modifications of the appliance or any attempt at internal adjustment or repair by any person other than an Authorised Service Agent.
- Service calls that relate principally to the following:
  - Instruction on how to use the product.
  - Repair or replacement of house fuses, electrical wiring, gas fitting or plumbing.
  - Normal or scheduled maintenance including blocked filters or ducting.
  - Consumable items such as light bulbs.
  - Any damage to hobs caused by spills when cooking.
  - Any breakage or damage of glass items.
  - Any damage caused by non recommended product used for cleaning, maintaining, lubricating or similar.
  - Any aspect relating to the installation of the product, or damage caused during installation including blocked access for repair.
  - Any third party (including reseller) or consequential loss or damage (direct or indirect) however arising.



# PARMCO

Dear Valued Customer,

Thank you and congratulations on purchasing your new Parmco appliance.

All Parmco products are made to the highest quality and design standards. We are sure you will enjoy your new appliance.

As a note, please read through these instructions carefully. These will assist you in gaining a complete understanding of the functions and features offered by your appliance. Please take special note of all detailed technical information and installation instructions. It is essential that you follow these instructions to ensure the safety and reliability of this appliance.

Furthermore, not using appropriate personnel to install this appliance may affect any future warranty claims lodged, so please check with Parmco Appliances before any installation is carried out.

We hope you enjoy your new appliance. If you would like to find out more about this product or any other products in Parmco's extensive range, visit us online at [www.parmco.co.nz](http://www.parmco.co.nz).

Regards,  
**The Parmco Team**



Cook



Vent



Clean



Cool



Laundry

# INDEX

|                                     | PAGE |
|-------------------------------------|------|
| <b>Important Safety Information</b> |      |
| Before using this appliance         | 4    |
| For your safety                     | 4    |
| Use and care                        | 6    |
| <b>Product Description</b>          |      |
| Description of the appliance        | 7    |
| Using the cooktop                   | 10   |
| Using the oven                      | 12   |
| Cooking modes                       | 16   |
| Practical cooking advise            | 17   |
| Cooking guide                       | 18   |
| Care and Maintenance                | 19   |
| <b>Installation Instructions</b>    | 23   |



## IMPORTANT NOTE

It is the law in New Zealand that this appliance must be installed only by authorized persons. The installation must comply with all the appropriate New Zealand Standards and Regulatory Requirements with particular reference to the New Zealand Electrical and Gas Installation Standards.

Any attempt to install this or any other Parmco product without an authorized person could result in damage to the product and a possible health hazard. Not having an authorized person install this appliance may result in all associated warranties from Parmco Appliances being null and void.

## PRODUCT REGISTRATION

Register your product online now at [www.parmco.co.nz](http://www.parmco.co.nz). This will help keep your information on file in case of warranty claims in the future (proof of purchase required).

# IMPORTANT SAFETY INFORMATION

For best performance and to extend the life of your appliance, we recommend that you read the instructions in this owner's manual thoroughly before using your new appliance. It will provide you with all the information you need to ensure its safe installation, proper use and maintenance. Keep this owner's manual for future reference.

To maintain the efficiency and safety of this appliance, we recommend the following:

## BEFORE USING THIS APPLIANCE

Read the instructions thoroughly.

- Remove all plastic protective films on the appliance before operating the appliance.
- Remove the plastic film on the oven glass door (when provided).
- To prepare the appliance for its first use, heat the empty oven at maximum temperature for 45 minutes. This allows unpleasant smells and smoke from protective oils used during manufacture and from new thermal insulation to burn off.
- Allow the unit to cool off and wash the oven with soapy water and then rinse.

DANGER

DO NOT PLACE ALUMINIUM FOIL OR  
SIMILAR ON THE FLOOR OF THIS OVEN

## FOR YOUR SAFETY

- This appliance is designed for non-commercial, household use only and must not be altered in any way.
- This appliance can only be used safely when it is correctly connected to an efficient earthing system in compliance with New Zealand Electrical Standards requirements.
- Before cleaning your appliance or perform maintenance, always ensure the appliance is disconnected from the main supply.
- Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be referred to a qualified technician. Always use oven gloves to remove and replace cookware in the oven.
- Packaging items that this appliance is delivered in, such as plastic bags, polystyrene, and nails, are potentially dangerous, and therefore appropriate measures must be taken to prevent children from coming into contact with them.
- This appliance must only be used by adults. Make sure that children do not touch the controls or play with the appliance. Young children should be supervised to ensure they do not play with the appliance. Young children should be supervised to ensure they do not play with the appliance.
- Do not allow children to stand, sit or play with any part of the appliance.
- Do not use the drop down door as a stool to reach overhead cabinets.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this appliance by a person responsible for their safety.



- During use, the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
  - Keep the appliance thoroughly cleaned. Food residues may cause fire risks.
  - Do not use a steam cleaner to clean this appliance.
  - When the gas burners are lit, check the flame is always regular.
  - **WARNING:** Accessible parts may become hot during use. To avoid burns, young children should be kept away.
  - Do not use pans with unstable or deformed bottoms as this may cause overturning and spilling.
  - **Never line the oven with aluminium sheets, trays, tins or utensils as doing so may damage the enamel and elements and cause the appliance to malfunction.**
  - Take care not to spill sugar or sweet mixtures on to the ceramic glass surface when hot. Never place materials or substances that could melt (plastic or aluminium foil) on the ceramic glass. In the event this happens, promptly switch off and remove the molten material while the cooking zone is still warm to prevent it from being damaged. Failure to instantly clean the ceramic glass could lead to incrustations, which are impossible to remove once the cooktop has cooled down.
  - Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in the glass shattering.
  - After using the appliance, please ensure that all controls are in the “OFF” position.
  - Avoid touching the oven with wet body parts.
  - Avoid improper or dangerous use of this appliance.
  - Do not obstruct the ventilation or heat dissipation slots.
  - Do not allow power cables of other appliances to come into contact with hot parts of this appliance.
  - This appliance is intended for indoor use only. Avoid exposing the appliance to atmospheric elements such as direct sunlight and rain.
  - Do not spray aerosols in the vicinity of this appliance while it is in operation.
- 
- **DO NOT USE OR STORE FLAMMABLE MATERIALS IN THE APPLIANCE OR NEAR THIS APPLIANCE.**

For any enquiries please contact Parmco Appliances (09) 573 5678.

# USE AND CARE

## How to use your oven

We recommend that you read the instructions in this owner's manual carefully before use. It will provide you with all the instructions you require to ensure safe installation, use and maintenance. Always keep this owner's manual close to hand since you may need to refer to it in the future. Place the spare serial number sticker on the front of this manual for future reference as you will need the serial number should this appliance need servicing.

It is important to remember that this oven may perform differently to the way your previous appliance worked. To obtain the best cooking results please experiment with the temperature, rack height and cooking times. As a guide to help you with this process please refer to the "Cooking Mode Table".

This multi-function oven combines the advantages of traditional convection ovens with those of the more modern fan assisted models in a single appliance. It is an extremely versatile.

## Steam and Condensation

Often owners of new ovens will see a higher level of steam and condensation than they are used to in their previous appliance. This is normal and contributes to keeping the food moist during cooking. The amount of steam and condensation will depend on the type of food (fresh, defrosted, frozen) being cooked. The style of cooking (water baths) will also contribute to the amount of steam and condensation generated. Climatic conditions also contribute to the generation of condensation.



When food is heated it produces steam in the same way a boiling kettle does. When steam comes into contact with the oven door glass it will condensate and produce droplets. To reduce condensation, ensure that the oven is well heated before placing food in the oven cavity. **Oven pre-heating is necessary before any cooking!**

It is normal for steam to escape the oven when opening the door. To reduce the build-up of condensation, pre heat the oven for longer periods and occasionally open the door and carefully wipe away the condensation. Adjusting your cooking practices will also ensure a minimum build up of condensation.



# PRODUCT DESCRIPTION

## Description of appliance

AR 900 ceramics

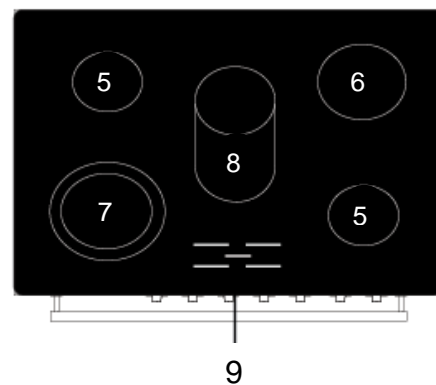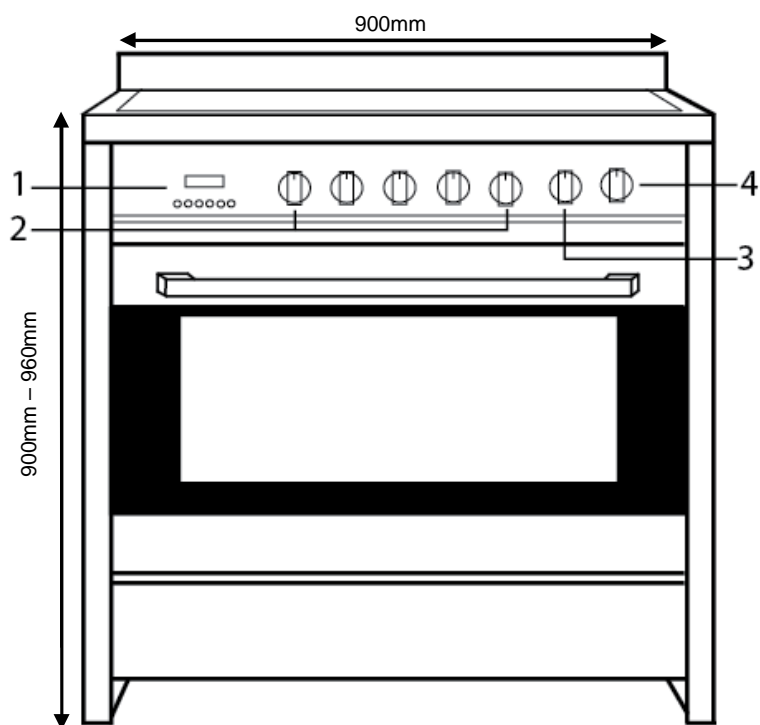

FS 600 ceramics

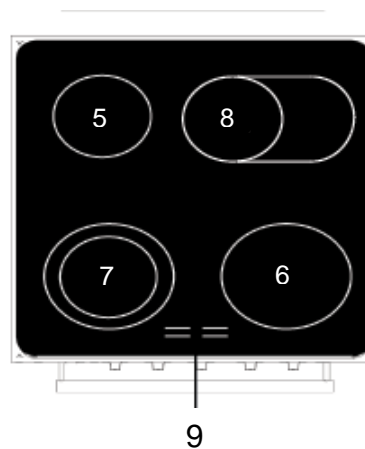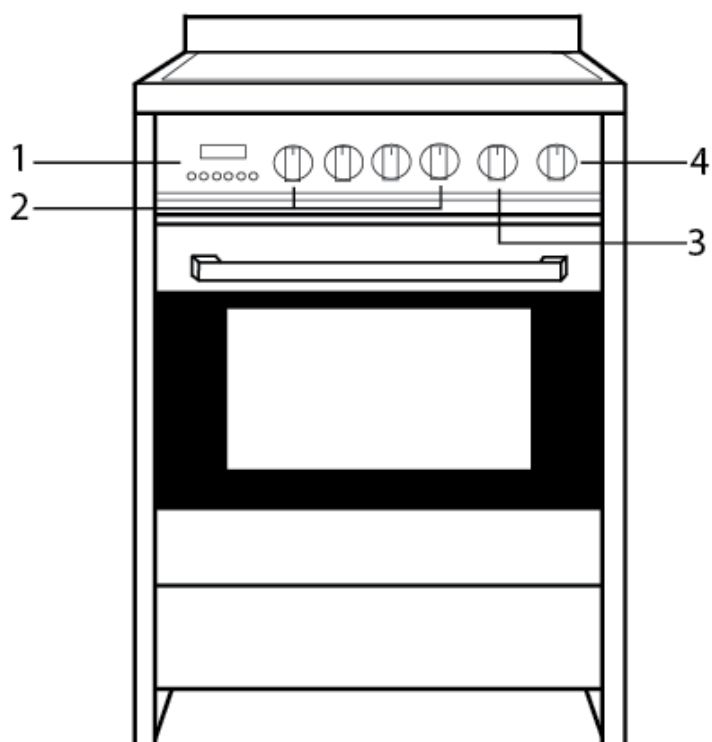



1. Electronic clock
2. Control knobs (cooktop burners)
3. Cooking temperature selection knob
4. Cooking mode selection knob
5. Small cooktop element
6. Medium cooktop element
7. Large cooktop element
8. Oval cooktop element
9. Power & residual heat indicators

## Oven and Accessories

The appliance is supplied with easy clean shelf supports which offer a range of shelf heights. The oven contains two wire racks, one roasting dish, and a grill rack insert.





Controls


Digital Automatic Clock


A  
U  
T  
O


88:88

 


















 Timer

 Cook time


 Finish time


 Manual operation


 Decrease time


 Increase time


Cooking Mode Selection Knob













 

















Cooking Temperature Selection Knob


























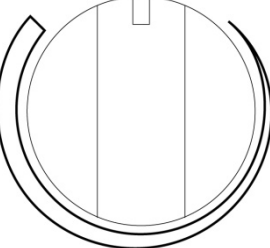




60  
80  
100  
120  
140  
160  
180  
200  
220

Control Knob  
(Cooktop Burners)






# USING THE COOKTOP

## Choosing the right Cookware


Do not use cookware with jagged edges or a curved base.



Make sure that the base of your pan is smooth, sits flat against the glass, and is the same size as the cooking zone. Always centre your pan on the cooking zone.

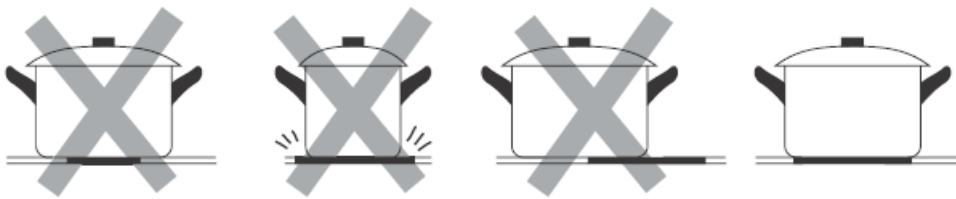

Always lift pans off the ceramic hob – do not slide, as they may scratch the glass.

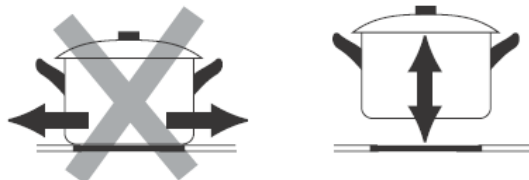

## Using the cooktop for the first time

Before cooking for the first time, the ceramic glass has to be cleaned. Remove any removable labels and protective sheeting. Place a saucepan filled with water on each front hotplates, then switch on high power for at least 30 minutes. After 30 minutes, switch the front plates off, and place a saucepan filled with cold water on each of the rear and central (if present) hotplates. Switch them on high for at least 30 minutes.

This procedure is necessary in order to evaporate any protective oils and humidity that may have been used during the manufacturing process and will enable the electronic control circuits to operate properly.


## **Single cooking zones**

Turn the control knob to the desired position (low to high). Adjustment is continuous so the cooking zone will operate at any intermediate knob setting between low and high. Once the cooking zone is hot, the LED corresponding to the zone illuminates.

You can switch off the cooking zone by turning the knob, in either direction, to the off position. The residual heat indicator will remain illuminated if the temperature of the ceramic glass surface is hot and will switch off once the surface temperature has cooled.


## **Dual cooking zones**

For the inner cooking zone, turn the control knob clockwise to the desired position between low and max. Once the inner cooking zone is hot, the lamp corresponding to the zone illuminates.

To operate the outer cooking zone, turn the knob past the max setting to the  symbol. This will turn on the outer cooking zone, and you can adjust the temperature. Both inner and outer cooking zone will operate.

To cancel the outer cooking zone and return to using the inner cooking zone, turn the knob to the off position to switch off the outer cooking zone.

The residual heat indicator will remain illuminated if the temperature of the ceramic glass surface is hot and it will switch off once the surface temperature has cooled.

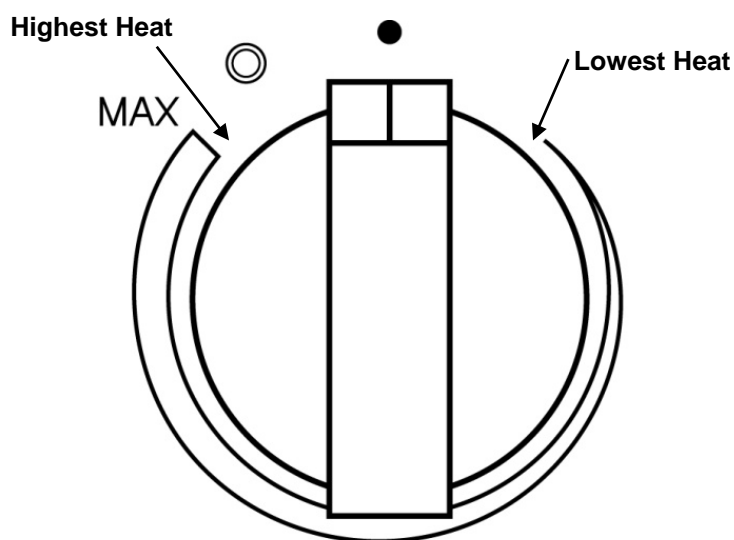


# USING THE OVEN

This multi-function oven combines the advantages of traditional conventional ovens with a modern fan assisted oven, all in a single appliance. It is extremely versatile, and allows you to choose easily and safely between different modes. The various cooking modes are selected using the cooking mode selection knob, located on the control panel.

It is important to remember that this oven may perform differently than your previous appliance may have. To obtain the best cooking results, please experiment with temperature, rack height, and cooking times.

Fit the trays and shelves between the two closest wires as shown on the right.

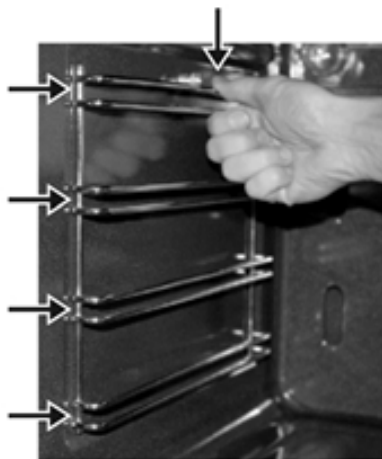

To remove the side support racks, push down on the wire below the locking pin and pull away from the oven wall until you can release the bottom of the support from the holes in the oven wall. To replace, reverse this procedure.

## To operate this oven:

- Ensure that the manual mode is selected.
- Turn the cooking mode selection knob to the desired cooking mode.
- Turn the temperature selection knob to the desired temperature.
- If grilling, turn the temperature selection knob to MAX.


The first time you use your appliance, set the temperature to MAX and select a cooking mode, leaving the empty oven to operate for 30 minutes. Then turn off the appliance and allow it to cool. Any odours during this initial use are due to the evaporation of substances used to protect the appliance during manufacture and storage.

**NOTE:** Place the baking tray provided on the bottom shelf to prevent any spillages from dripping onto the bottom of the oven. **Never place anything (including foil and oven trays) directly on the bottom of the oven when it is in operation as it could damage the enamel.** Place your cookware only (dishes, trays, aluminium foil, etc.) on the oven shelves provided with this appliance.

# ELECTRONIC TIMER


**NOTE:** The clock must be set in order for the oven to operate.

## **6 BUTTON DIGITAL CLOCK (only available on certain models)**

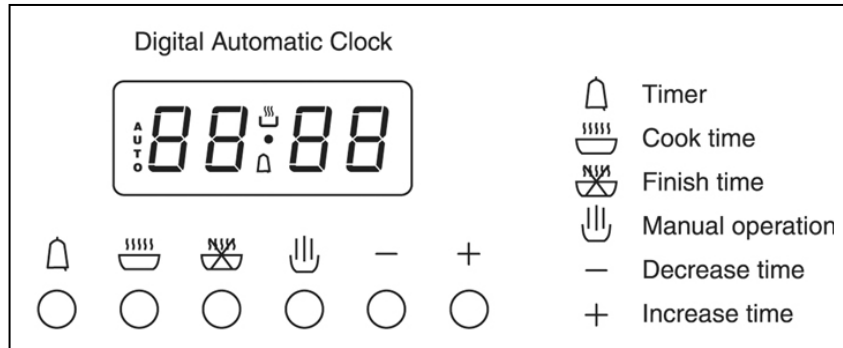


This appliance has a digital display 24 hour clock with six control buttons. When the power is connected, the screen displays 3 flashing numbers and **"AUTO"**.

### **Adjusting the Digital Clock**

 

To set the correct time, press the  button first and then the + or – button to increase or decrease until the correct time is displayed.

### **Manual Operation Setting**



If **"AUTO"** is flashing, automatic or semi automatic program has been set. Press the  button. **"AUTO"** will clear from the display and the oven can be operated manually.



### **Automatic Setting**

Automatic setting of the oven allows you to select the end time, cooking time, temperature and cooking mode. The oven will switch on, cook according to the selected cooking mode and temperature, then switch off automatically.


1. Press  button, set the cooking time with the + and – buttons.
2. Press  button, set cooking finish time with + and – buttons.
3. Set cooking temperature and cooking mode by turning the thermostat knob and mode selector knob.


**For Example:** If cooking time takes 45 minutes and you want it to finish at 14:00:




1. Press  button, set the cooking time to 45 minutes with the + and – buttons.
2. Press  button, set finish time to 14:00 with + and – buttons.
3. Set cooking temperature and cooking mode by turning the thermostat knob and mode selector knob.

After the above setting, the current time is displayed and **“AUTO”** will flash, indicating that the automatic cooking feature is set. When the clock displays 13:15, the oven will start cooking automatically. While cooking, **“AUTO”** and  will flash. When the clock displays 14:00, the oven automatically stops cooking. The alarm will ring and **“AUTO”** will flash. Press the  button and the ringing will stop.

### **Semi Automatic Setting**

 
1. Press  button, set cooking finish time with + and – buttons. (Up to 23 hours and 59 minutes).
2. Set cooking temperature and cooking mode by turning the thermostat knob and mode selector knob.

The oven starts immediately,  and **“AUTO”** will flash. At the finish time reached, the oven automatically stops cooking. The alarm will ring and **“AUTO”** will flash. Press the alarm bell to stop the ringing.

When the  button is pressed during semi-automatic cooking, the set cooking time is displayed. If the  button is pressed and the time set back to 0, the semi-automatic setting will be cancelled. When the  button is pressed again, the oven will revert back to manual mode.


### **Timer**

The digital timer can be set up to 23 hours and 59 minutes maximum.

To set the timer, press alarm button  and then + or – button until the desired time is displayed. Once the alarm button is released, the current time and alarm symbol will be displayed. When the alarm button is pressed, the remaining time is displayed. When the set time is reached, the alarm symbol disappears and the alarm will ring. To stop the alarm, press the alarm button.

**NOTE:** After pressing the alarm button, timer settings should be entered within 5 seconds. In case of power failure, all settings including the time display will be lost. When the power is restored, three ‘0’ and **“AUTO”** will be displayed.

## The Oven Light

Set the cooking mode selection knob to  switch on the oven light/s. The oven light/s will stay on while the oven is operating.




 



## Cooling / Ventilation

In order to keep the exterior of the appliance cool, the appliance is fitted with a cooling fan that operates automatically. When the oven is on, the cooling fan turns on and you will notice a flow of air exiting between the door and control panel.

**NOTE:** When cooking is finished, the cooling fan will continue operating until the oven has cooled down. The cooling fan will then turn off automatically.



# COOKING MODES

| Symbol  | Function description   |
|---|--|
|    | <b>Defrost:</b> When Defrost is selected, the fan located at the back of the oven circulates room temperature air around the oven. This is recommended for defrosting all types of food, but is particularly effective at defrosting delicate food items. It is possible to accelerate the defrosting process by selecting a multi-cooking mode and setting the temperature between 80°C and 100°C.  |
|    | <b>Conventional Bake:</b> When set to Conventional mode, the top and bottom heating elements will operate together like a 'normal' conventional oven. Conventional bake is best suited for traditional baking and roasting. You should only use one shelf at a time, otherwise the heat will be unevenly distributed. You can balance the amount of heat between the top and the bottom of the dish by selecting a different shelf height. If you want more heat at the top of the dish, place the dish on the top or second shelf. For more heat on the bottom of the dish, place the dish on the third or fourth shelf.  |
|    | <b>Fan Assisted Bottom Bake:</b> When set to Fan Assisted Bottom Bake cooking mode, the bottom element and the fan will operate. This mode is suitable for pastries, cakes, and non-dry sweets in baking tins or moulds that require heat from the bottom.   |
|   | <b>Top Bake:</b> When set to Top Bake mode, the top heating element will operate. This mode can be used to brown food at the end of cooking.   |
|  | <b>Grill:</b> When Grill is selected, the top element operates. Set the temperature to MAX when using the grill function. The extremely high and direct temperature of the grill makes it possible to brown the surface of meats and roasts while locking in the juices to keep them tender. Grill can also be used for dishes that require a high temperature on the surface of the dish, such as steak ribs, fillets, hamburgers, etc. Grill the food with the oven door slightly ajar.  |
|  | <b>Fan Assisted Grill:</b> When the Fan Assisted Grill mode is selected, the inner element and the fan will operate. This mode increases the circulation of the heated air throughout the oven, which helps prevent food from burning on the surface and allowing the heat to fully cook the dish. This mode is particularly useful for kebabs made with meats and vegetables, sausages, ribs, chicken, etc. When Fan Assisted Grill mode is used, grill with the door closed to avoid high surface temperatures on control knobs and surfaces. Place the food on the second or third oven shelf from the bottom, and place a dripping pan on the first rack from the bottom to prevent grease and fats dripping onto the oven floor. We recommend using 200°C with this mode as it is the most efficient temperature. |
|  | <p><b>Fan Forced Bake:</b> When Fan Forced Bake is selected, the fan element and the fan operate to provide a delicate heat that is more evenly distributed throughout the oven. This mode is ideal for baking and cooking delicate foods on multiple shelves, especially cakes that need to rise such as cream puffs, biscuits, swiss rolls, etc.</p> <p>NOTE: This function relies on the air circulation within the oven cavity to provide even temperatures and as such, the size and placement of the trays can affect the temperature distribution. It is usual to have some temperature variations within the oven cavity, and this function is NOT a guarantee of perfectly even temperatures through the oven.</p>  |

# PRACTICAL COOKING ADVICE

## FOR THE COOKTOP



For best results and energy efficiency, only use pans suitable for electric cooking.

- The bottom of the pan must be thick and flat. Before placing it on the hotplate, make sure that the pan and the hotplate are clean and dry.
- To avoid scratching the ceramic glass surface, never use cast-iron pans or pans with a rough bottom.
- To avoid wasting energy, make sure that the diameter of the pan bottom is 20mm bigger than the circle marked on the hotplate.


## FOR THE OVEN

The oven offers a wide range of settings which allows you to cook any type of food in the best way possible. With time and experimentation, you will learn the heat settings, cooking modes, and shelf heights that will deliver you the results that best matches your cooking style. The advice given below is a guideline only which may be varied according to your personal experience.

### Pre-Heating of Oven

If the oven needs to be preheated, the convection mode  or baking mode  should be selected. These are the most efficient modes, which will reach the desired temperature as quickly as possible using the least amount of energy. Once the oven has been pre heated and the cooking mode selected, the food should be placed in the oven.

### Multi-Shelf Cooking

If you want to cook food on several shelves, select the “Baking (Fan Forced)” mode . This is the only mode that allows you to cook on multi-shelves at the same time.





### Baking Results

Please note that baking results will vary between different brands of stoves/ovens and your usual baking style may need adjusting in order to get the best results out of your Parmco oven. Recipes may state the use of certain cooking functions and temperatures, but due to the variance in cooking ingredients worldwide it is in your best interests to adapt the recipe if results were not as expected by trialling different functions and temperatures.

Models that have a fan force function generally will have a “hotspot” in the cavity; this is due to the rotation of the fan motors distributing the heat. It is important to use only the trays supplied or appropriately sized baking trays (which we sell), as any tray that is oversized or has baking paper lining the tray surface must not block the designed airflow path circulated by the fan motor. In some instances if certain areas of the oven are found to be browning foods more than others then tray rotation may be required. Alternatively reducing the amount of items on a single tray and dividing them between 2 trays while on fan force may prove beneficial to the end result.

Fan force is specifically designed for multiple levels of cooking or baking where the conventional style function (top and bottom elements) is better suited for single layer cooking, this static heat function will provide a more delicate style of heat distribution so baked goods of a lighter complexion are not over coloured like sponges or scones.
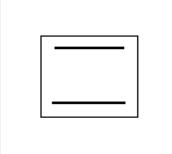
# COOKING GUIDE

| Selector Knob Setting  | Food to be Cooked    | Level from below | Temperature °C       | Time in Minutes       |
|--|----------------------|------------------|----------------------|-----------------------|
| <b>Conventional Bake</b><br><br>    | <b>First Courses</b> |                  |                      |                       |
|  | Lasagne              | 2 - 3            | 210 - 230            | 30                    |
|  | Oven Baked Pasta     | 2 - 3            | 210 - 230            | 40                    |
|  | <b>Meat</b>          |                  |                      |                       |
|  | Roast Veal           | 2                | 175 - 200            | 30 – 40 /kg           |
|  | Roast Beef           | 2                | 210 – 240            | 30 – 40 /kg           |
|  | Roast Pork           | 2                | 170 – 200            | 30 – 40 /kg           |
|  | Roast Lamb           | 2                | 170 – 200            | 15 / kg               |
|  | Pizza                | 1                | 210 – 240            | 40 – 45               |
|  | Meringue             | 1 – 2            | 50 – 70              | 60 – 90               |
| Temperature with preheated oven  |                      |                  |                      |                       |
| Selector Knob Setting  | Food to be Cooked    | Level from below | Temperature °C       | Time in Minutes       |
| <b>Fan Forced Cooking</b><br><br>  | <b>First Courses</b> |                  |                      |                       |
|  | Lasagne              | 2                | 190 – 210            | 20 – 25               |
|  | Sponge Cake          | 2 – 3            | 190 – 220            | 25 – 35               |
|  | Strudel              | 1 – 2            | 150                  | 25 – 35               |
|  | Bread                | 2 – 3            | 190 – 210            | 40                    |
|  | Toast                | 1 - 2            | 220 - 240            | 7                     |
| <b>Grilling</b><br><br>           |                      |                  | <b>First Surface</b> | <b>Second Surface</b> |
|  | Pork Chops           | 4                | 7 – 9                | 5 – 7                 |
|  | Fillet of Pork       | 3                | 9 – 11               | 5 – 9                 |
|  | Fillet of Beef       | 3                | 9 – 11               | 9 – 11                |
|  | Liver                | 4                | 2 – 3                | 2 – 3                 |
| <b>Fan Assisted Grill</b><br><br> | Half Chicken         | 3                | 9 – 14               | 9 – 11                |
|  | Sausages             | 4                | 7 – 9                | 5 – 6                 |
|  | Meat Balls           | 4                | 7 – 9                | 5 – 6                 |
|  | Fish Fillets         | 4                | 5 – 6                | 3 – 4                 |
|  | Toast                | 4                | 2 - 4                | 2 - 3                 |

NOTE: All ovens perform differently and may not perform the same way as your previous appliance did. Please experiment with different cooking time, mode, temperature and rack heights to achieve the desired results. The information provided here is just a helpful guide and may vary according to personal preferences.

# CARE AND MAINTENANCE

**Do not use a steam cleaner to clean the appliance.**

## Cleaning the Oven

### GENERAL CLEANING

Before cleaning your appliance or performing maintenance, make sure that the cooking mode selection knob and the cooking temperature selection knob is set to the "OFF" position.

**To extend the life of your oven, it must be cleaned frequently:**

- For best results the oven should be cleaned immediately after use, while still warm.
- The enamelled or stainless steel parts should be washed with hot soapy water. Do not use abrasive or corrosive substances as it will damage them. For tough stains use special products available on the market. After cleaning, rinse thoroughly and dry.
- Never use a steam cleaner for cleaning inside of the oven.

There is a seal surrounding the oven opening which guarantees its optimum performance. Check the condition of this seal on a regular basis.

Should it become damaged, please contact Parmco Appliances. This may or may not be covered under warranty.



**Never place anything (including foil and oven trays) on the bottom of the oven when it is in operation as this will result in damage to the enamel.**

Clean the glass door using non abrasive products or sponges and dry it with a soft cloth.

Do not use abrasive cleaners or sharp scrapers to clean the oven door glass as they can scratch the surface and cause the glass to shatter.



**Never place anything (including foil and oven trays) on the bottom of the oven when it is in operation as this may result in damage to the enamel.**

Clean the glass door using non-abrasive products or sponges, and try it with a soft cloth. Do not use abrasive cleaners or sharp scrapers to clean the oven door glass since they can scratch the surface and may result in the glass shattering.

## Cleaning the Ceramic Cooktop

Switch off your appliance before starting to clean. The ceramic glass should be regularly cleaned, preferably after each use once the residual heat warnings have turned off.

Smudges from pans with aluminium bottoms can easily be cleaned off with a cloth dampened in vinegar.

Remove any burnt residues immediately after cooking, rinse with water, and wipe dry with a clean cloth.

Never use abrasive or corrosive detergents, cleaning powders, oven sprays, spot removers, steel wool, or scourers.


## Cleaning the Front Panels

To clean the front panels, use hot soapy water. Use of abrasive cleaners, powders, pads, etc will remove the printed graphics prematurely.

### How to Remove the Oven door

For a more thorough clean, you can remove the oven door. Proceed as follows:

- Open the door to the full extent (Fig.1);
  - Open the lever A completely on the left and right hinge (Fig.2);
  - Hold the door as shown (Fig.3);
  - Gently close the door until left and right hinge levers A are hooked to part B of the door (Fig.4);
- Reassemble the door by following the above procedures backwards.

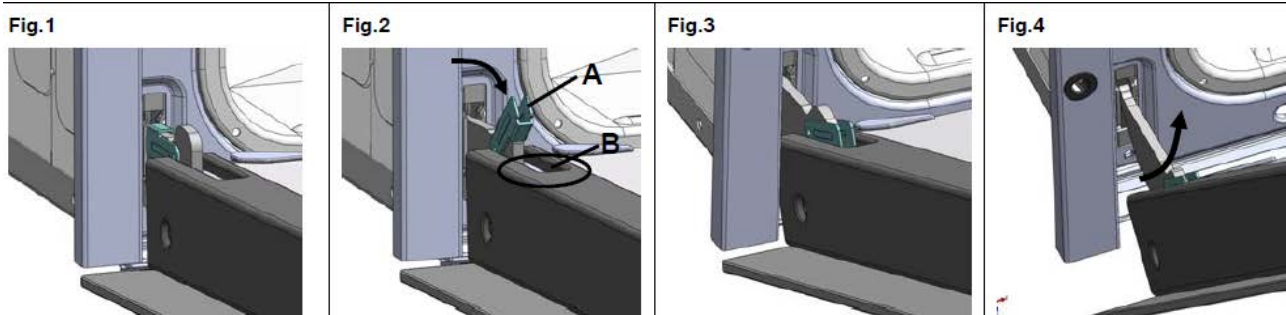


### To dismantle the oven door (two methods)

Method 1 remove and assemble procedure:

- Remove the seal A (Fig.2)、B、C(Fig.3) by push the no.2 rods of left and right sides(fig.1)
- Gently pull out the inner and middle panes of glass(fig.4)
- Clean the glass and other components with an appropriate cleaner. Dry thoroughly, and place on a soft surface.

Reassemble the door by following the above procedures backwards.

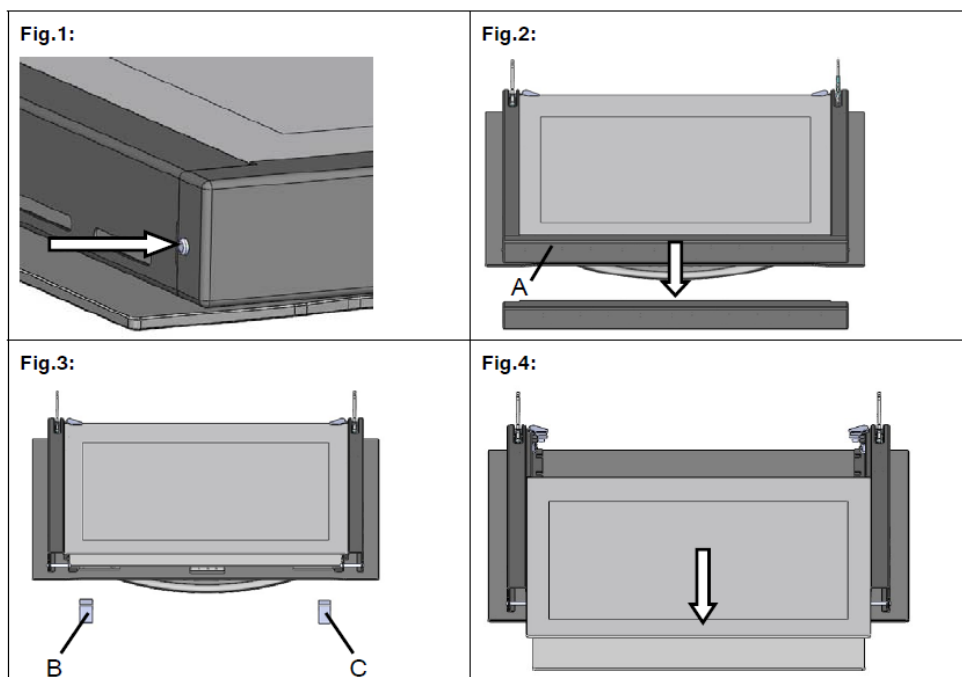


Method 2 remove and assemble procedure:

- Flip the glass pane retainers outwards to open them (Fig.1)

- Gently lift up the inner pane and remove it (fig.2)
- Gently lift up the middle pane and remove it (fig.3)
- Clean the glass and other components with an appropriate cleaner. Dry thoroughly, and place on a soft surface.

Reassemble the door by following the above procedures backwards.

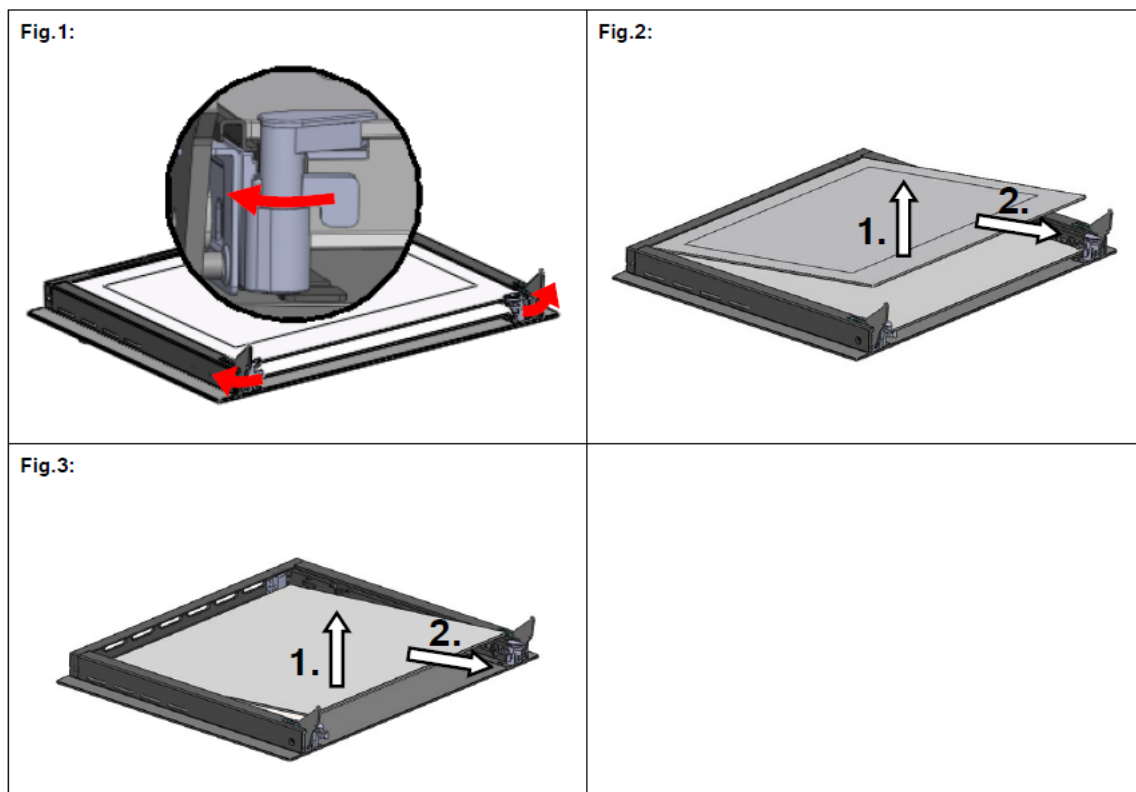


## Replacing the Oven Lamps

**WARNING:** Ensure that the appliance is turned off before replacing the oven lamp/s to avoid the possibility of electric shock.

Remove the glass cover of the lamp-holder as shown below.

Remove the lamp and replace with a lamp resistant to high temperatures (300°C) with the following characteristics.

 - Voltage 220 - 240V
- Wattage: 25W
- Type: E14



Replacement lamps are available from Parmco Appliances

## **Disposal**

Parmco has a commitment to being environmentally responsible. To avoid potential negative impacts on the environment, please ensure that this appliance is disposed of correctly. This

product must not be treated as household waste. Instead, it should be handed over to an appropriate collection point for recycling of electrical and steel components.

Disposal should always be carried out in an environmentally appropriate manner.

For more detailed information about treatment, recovery and recycling of this product, please contact your local City Council office.

## **Service and Parts**

Before leaving the factory, this appliance was tested and adjusted by specialist and skilled staff to give the best operating results. Any subsequent necessary repairs or adjustments must be carried out with the greatest care and attention by authorized personnel. For this reason, we strongly advise you to contact Parmco Service department, specifying the nature of the problem, the model, and the serial number of the appliance. This data is provided on the data label adhered to the base of the appliance and on the duplicate data label in the appliance information pack.

### **IMPORTANT NOTE**

It is the law in New Zealand that this appliance must be installed only by authorized persons. The installation must comply with all the appropriate New Zealand Standards and Regulatory Requirements with particular reference to the New Zealand Electrical and Gas Standards.

Any attempt to install this or any other Parmco products without an authorized person could result in damage to the product and possible health hazards. Not having an authorized person install this appliance may result in all associated warranties from Parmco Appliances being made null and void.

# INSTALLATION INSTRUCTIONS



- Installation of this appliance and its connection to the electrical mains must only be carried out by authorized personnel. Before any service procedure, it is important to ensure that the appliance is DISCONNECTED from the electrical mains.

- Do not modify this appliance.

- After removing the appliance from the packaging, make sure it is undamaged. In the unlikely event this occurs, contact Parmco before operating this appliance.
- Make sure that this appliance is adequately ventilated.
- Ensure that the room is well ventilated by keeping the air intakes free of obstruction and in good working order, and/or by installing a ventilation extraction system.
- If the appliance is used intensively for a long time, the effectiveness of the ventilation will need to be increased, for example, by opening a window or increasing the power of the ventilation fan.

## NOTES TO THE AUTHORIZED INSTALLER

This appliance shall only be installed by an authorized person. This appliance shall only be installed in complete accordance with the Gas and Electrical Standards of New Zealand. All local regulations, building code requirements, and all other statutory requirements must be met.

## Data Label



The data label is located at the rear of the appliance and inside of the utility draw if fitted. A duplicate label is supplied for you to adhere to a suitable accessible area next to the appliance. The data label on the appliance must NEVER be removed.

## Ventilation

Make sure that this appliance is installed in accordance with the ventilation requirements.

Before any procedure, it is important to check that the appliance is DISCONNECTED from the electrical mains. Parmco declines all responsibilities for any damage deriving from installations that are in breach of the regulations in force or from failure to comply with these installation instructions.

## Combustible Surfaces



The appliance shall be installed in accordance with the New Zealand standards relating to the installation of domestic cooking appliances.


In general, any adjoining wall surface within 200mm from the edge of any burner must be of a suitable non-combustible material to a height of 150mm, for the entire length of the appliance. Any combustible construction (e.g. cabinetry) must be a minimum of 750mm above this appliance. If a combustible bench top is within 200mm of any burner, then the appliance top should be a minimum of 10mm above the bench top. Any ventilation product supplied by Parmco Appliances should be a minimum of 650mm above this appliance.

## Installing Units on a Plinth



It is possible to install the FS 600-CER and AR 900-CER units on a “plinth” if required. Special ventilation is required in this application. Please refer to the diagram below.

- The appliance should be placed on a plinth constructed of material suitable to carry the full weight of the appliance.
- The base of the plinth should be constructed of a suitable non-combustible material.
- A 40mm air gap must be provided at the rear of the plinth.
- 6 air gaps of 100mm wide x 10mm high must be provided in the front face of the plinth.

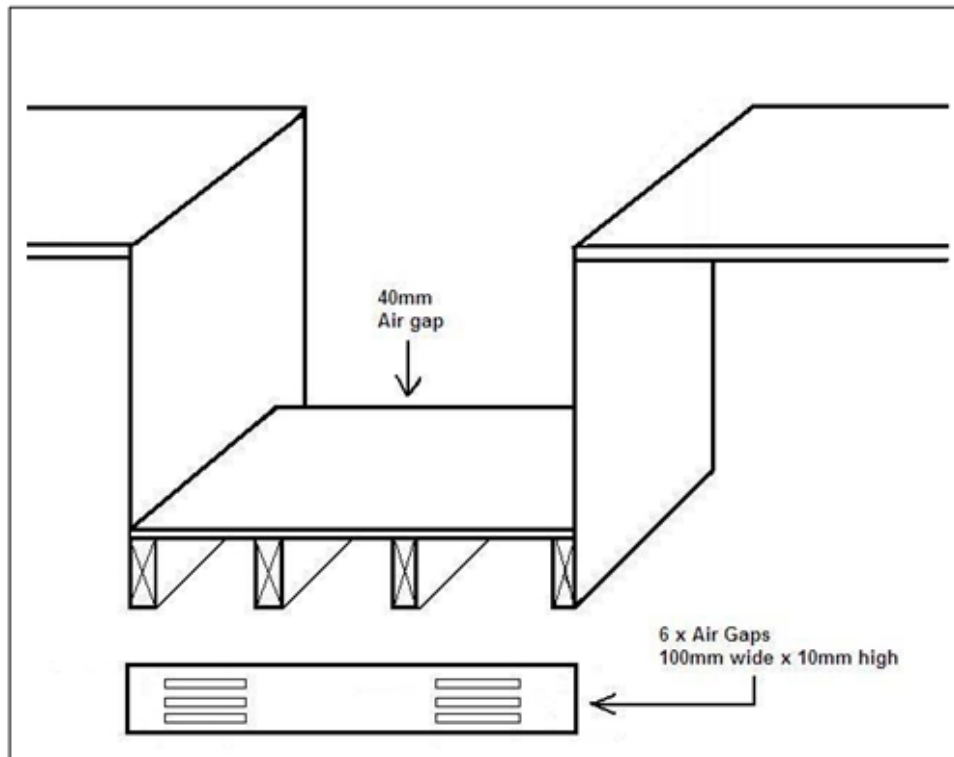

If this appliance is placed on a base, measures must be taken to prevent the appliance from slipping from the base.

### **Anti-Tilt/Hose Restraint Chain**

Each appliance is supplied with a restraint chain. The restraint chain prevents strain being applied to the hose when the appliance is pulled forward and prevents the appliance from tilting forward.

The chain should restrict the appliance movement to no more than 80% of the hose length. The chain should be connected to a suitable anchor point as close to the behind of the appliance as possible. If the appliance is installed between two cabinets, drill holes into the cabinetry and secure the chains inside the cupboards.

**WARNING: Ensure the chains are correctly anchored to prevent the appliance from tilting forward and to prevent strain on the hose when the appliance is pulled forward.**

**MAKE SURE THE ANTI-TILTING CHAINS ARE TAUT WHEN ANCHORED TO PREVENT THE APPLIANCE FROM TILTING.**

## Catalytic Liners

NOTE: If your oven does not have catalytic liners and you wish to purchase them, they are available from your retailer or Parmco.

## Operation

The catalytic liners are coated with a specially formulated enamel coating, over a base of regular enamel. This enamel coating has a rough surface which is also porous. During normal cooking, fats and other food spatter is partially absorbed into the surface and then oxidised away. This oxidisation of the fat works best if the oven is set at high temperatures. If you do a lot of lower temperature baking, say around the normal 180°C, then the cleaning process may not be complete. Every now and then you should turn the oven on to maximum temperature for around one hour to completely remove the soil.

## Cleaning

### **Cleaning by hand. Make sure the oven is cool before cleaning.**

The catalytic liners should be cleaned using a solution of hot water and washing-up liquid applied with a soft nylon brush. Do not wash these liners in the dishwasher.

Do not use abrasive cleaning agents, hard brushes, scouring pads or cloths, steel wool, knives or other abrasive materials. Do not use oven spray on catalytic enamel as the chemicals used in oven sprays will damage catalytic liners and render them unusable.

If using oven sprays on the interior oven surfaces, the catalytic liners must first be removed from the oven.

Should the panels become heavily soiled, they will need to be taken out of the oven and cleaned by hand. They should be soaked in warm, soapy water for at least 2 hours and then wiped clean with a soft cloth.

### **Cleaning with high temperatures**

Before cleaning the catalytic liners using high oven temperatures make sure that all interior oven surfaces have been cleaned as described above. Otherwise, the high temperatures can bake deposits onto the interior oven surfaces and make them impossible to remove.

Note that deposits of spices, syrups and similar substances are not removed by this process. These should be removed by hand with a mild solution of hot water and washing-up liquid applied with a soft brush.

- Remove all accessories from the oven.
- Set the oven to conventional function.
- Set the heat to 250 °C.
- Run the oven for approximately 1 hour. The length of time will depend on the degree of soiling.

It is a good idea to set the finish time for the process using the end time setting, in case you forget to switch the oven off at the end.

Any remaining soil will gradually disappear with each subsequent use of the oven at high temperatures. The stains on the catalytic liners caused by grease, fats and oils from cooking are completely normal and will not be able to be completely removed. Catalytic liners are a consumable item and can be replaced with new catalytic liners.

**NOTE: Solid cleaning powders, creamy cleansers, caustic oven cleaners, steel wool or other scourers will ruin the catalytic surface and must NEVER BE USED.**

## CATALYTIC LINER INSTALLATION

### **Remove the side racks and fitting side catalytic liners**

Unclip the bottom of the side rack from the lug.

Lift the side rack up to disengage the hooks.

The side rack should now be free to be pulled in towards the centre of the oven.

Repeat process for the other side.

Place catalytic liner on the side wall of the oven aligning the holes at the top.

Refit the side racks by inserting the top of the rack into the holes through the catalytic liner.

Clip bottom of rack into position over lug.

### **Removing and installing the catalytic fan cover**


- Remove the 4 retaining screws on the top and bottom edge of the rear fan cover.
- Remove cover

**Note: The fan cover must be replaced after cleaning**

- To refit, place the fan cover back into position by lining up the screw holes in each corner.
- Insert screws firmly into appropriate holes
- The fan cover must not be loose

# ELECTRICAL CONNECTION

The appliance comes fitted with an approved supply cord and can be connected to an appropriately rated plug that is compatible with the socket-outlet that is fitted to the final sub-circuit in the fixed wiring that is intended to supply this appliance. It is necessary that all installation and connections are carried out by qualified personnel and that the connections meet all New Zealand regulatory requirements.

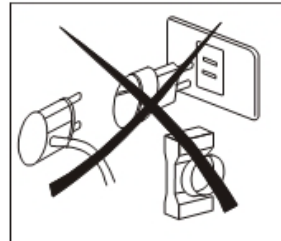

## **Connection of Feed Cable to Mains**

These units are fitted with a multiphase mains terminal block and can be installed either single phase, 2 phase or 3 phase power supply.

In the case of direct connection to the mains (hardwired without plug), it is necessary to insert a suitable omnipolar switch before the appliance, with a minimum opening of 3mm between the contacts – the grounding wire should not be interrupted by the switch.

Before connecting to the mains, make sure that:

- The electrical counter, the circuit breaker, feed cable, and socket are suitable to withstand the maximum load requirements as detailed on the rating label.
- The supply system is regularly grounded as per New Zealand regulations.
- The socket or omnipolar switch can easily be reached after the appliance is installed.
- After connection of the appliance to the mains, make sure no wires come into contact with any parts of the appliance subjected to heating.
- Never use reductions, shunts or adapters which can cause overheating or burning.

**This appliance is not intended to be operated by means of an external timer of separate remote-control system.** It is essential that this unit is operated in conjunction with some form of ventilation/extraction system. Parmco has a wide range of kitchen ventilation solutions available.

# TECHNICAL DATA

| Product Code                       | Max power consumption |
|------------------------------------|-----------------------|
| FS 600-CER, FS 600-WHC, FS 600-BKC | 10.7KW                |
| AR 900-CER                         | 12.45KW               |

This appliance must be installed in accordance with New Zealand's electrical installation rules and regulations by a suitably qualified and authorized person.

Electricity supply                      220-240V (50-60Hz)