

Installation and Operating Instructions

Models:

AR 600

AR 600-LEG

AR 600-CER

AR 600-OBS

AR 600-WHT

AR 900

AR 900-LEG

AR 900-CER

AR 900-OBS

FS9S-5-2

For your convenience, we recommend to attach the serial number label HERE.



PARMCO

Dear Valued Customer,

Thank you and congratulations on purchasing your new Parmco appliance.

All Parmco products are made to the highest quality and design standards. We are sure you will enjoy your new appliance.

As a note, please read through these instructions carefully. These will assist you in gaining a complete understanding of the functions and features offered by your appliance. Please take special note of all detailed technical information and installation instructions. It is essential that you follow these instructions to ensure the safety and reliability of this appliance.

Furthermore, not using appropriate personnel to install this appliance may affect any future warranty claims lodged, so please check with Parmco Appliances before any installation is carried out.

We hope you enjoy your new appliance. If you would like to find out more about this product or any other products in Parmco's extensive range, visit us online at www.parmco.co.nz.

Regards,
The Parmco Team



Cook



Vent



Clean



Cool



Laundry

INDEX

	PAGE
Important Safety Information	
Before using this appliance	4
For your safety	4
Use and care	6
Product Description	
Description of the appliance	7
Using the cooktop	11
Using the oven	14
Cooking modes	18
Practical cooking advise	19
Cooking guide	20
Care and Maintenance	21
Installation Instructions	26
Warranty	34



IMPORTANT NOTE

It is the law in New Zealand that this appliance must be installed only by authorized persons. The installation must comply with all the appropriate New Zealand Standards and Regulatory Requirements with particular reference to the New Zealand Electrical and Gas Installation Standards.

Any attempt to install this or any other Parmco product without an authorized person could result in damage to the product and a possible health hazard. Not having an authorized person install this appliance may result in all associated warranties from Parmco Appliances being null and void.

IMPORTANT SAFETY INFORMATION

For best performance and to extend the life of your appliance, we recommend that you read the instructions in this owner's manual thoroughly before using your new appliance. It will provide you with all the information you need to ensure its safe installation, proper use and maintenance. Keep this owner's manual for future reference.

To maintain the efficiency and safety of this appliance, we recommend the following:

BEFORE USING THIS APPLIANCE

Read the instructions thoroughly.

- Remove all plastic protective films on the appliance before operating the appliance.
- Remove the plastic film on the oven glass door (when provided).
- To prepare the appliance for its first use, heat the empty oven at maximum temperature for 45 minutes. This allows unpleasant smells and smoke from protective oils used during manufacture and from new thermal insulation to burn off.
- Allow the unit to cool off and wash the oven with soapy water and then rinse.

DANGER **DO NOT PLACE ALUMINIUM FOIL OR
SIMILAR ON THE FLOOR OF THIS OVEN**

FOR YOUR SAFETY

- This appliance is designed for non-commercial, household use only and must not be altered in any way.
- This appliance can only be used safely when it is correctly connected to an efficient earthing system in compliance with New Zealand Electrical Standards requirements.
- Before cleaning your appliance or perform maintenance, always ensure the appliance is disconnected from the main supply.
- Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be referred to a qualified technician. Always use oven gloves to remove and replace cookware in the oven.
- Packaging items that this appliance is delivered in, such as plastic bags, polystyrene, and nails, are potentially dangerous, and therefore appropriate measures must be taken to prevent children from coming into contact with them.
- This appliance must only be used by adults. Make sure that children do not touch the controls or play with the appliance. Young children should be supervised to ensure they do not play with the appliance. Young children should be supervised to ensure they do not play with the appliance.
- Do not allow children to stand, sit or play with any part of the appliance.
- Do not use the drop down door as a stool to reach overhead cabinets.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this appliance by a person responsible for their safety.



- During use, the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
 - Keep the appliance thoroughly cleaned. Food residues may cause fire risks.
 - Do not use a steam cleaner to clean this appliance.
 - When the gas burners are lit, check the flame is always regular.
 - **WARNING:** Accessible parts may become hot during use. To avoid burns, young children should be kept away.
 - Do not use pans with unstable or deformed bottoms as this may cause overturning and spilling.
 - **Never line the oven with aluminium sheets, trays, tins or utensils as doing so may damage the enamel and elements and cause the appliance to malfunction.**
 - Take care not to spill sugar or sweet mixtures on to the ceramic glass surface when hot. Never place materials or substances that could melt (plastic or aluminium foil) on the ceramic glass. In the event this happens, promptly switch off and remove the molten material while the cooking zone is still warm to prevent it from being damaged. Failure to instantly clean the ceramic glass could lead to incrustations, which are impossible to remove once the cooktop has cooled down.
 - Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in the glass shattering.
 - After using the appliance, please ensure that all controls are in the “OFF” position.
 - Avoid touching the oven with wet body parts.
 - Avoid improper or dangerous use of this appliance.
 - Do not obstruct the ventilation or heat dissipation slots.
 - Do not allow power cables of other appliances to come into contact with hot parts of this appliance.
 - This appliance is intended for indoor use only. Avoid exposing the appliance to atmospheric elements such as direct sunlight and rain.
 - Do not spray aerosols in the vicinity of this appliance while it is in operation.
-
- **DO NOT USE OR STORE FLAMMABLE MATERIALS IN THE APPLIANCE OR NEAR THIS APPLIANCE.**

For any enquiries please contact Parmco Appliances (09) 573 5678.

USE AND CARE

How to use your oven

We recommend that you read the instructions in this owner's manual carefully before use. It will provide you with all the instructions you require to ensure safe installation, use and maintenance. Always keep this owner's manual close to hand since you may need to refer to it in the future. Place the spare serial number sticker on the front of this manual for future reference as you will need the serial number should this appliance need servicing.

It is important to remember that this oven may perform differently to the way your previous appliance worked. To obtain the best cooking results please experiment with the temperature, rack height and cooking times. As a guide to help you with this process please refer to the "Cooking Mode Table".

This multi-function oven combines the advantages of traditional convection ovens with those of the more modern fan assisted models in a single appliance. It is an extremely versatile.

Steam and Condensation




Often owners of new ovens will see a higher level of steam and condensation than they are used to in their previous appliance. This is normal and contributes to keeping the food moist during cooking. The amount of steam and condensation will depend on the type of food (fresh, defrosted, frozen) being cooked. The style of cooking (water baths) will also contribute to the amount of steam and condensation generated. Climatic conditions also contribute to the generation of condensation.

When food is heated it produces steam in the same way a boiling kettle does. When steam comes into contact with the oven door glass it will condensate and produce droplets. To reduce condensation, ensure that the oven is well heated before placing food in the oven cavity. **Oven pre-heating is necessary before any cooking!**

It is normal for steam to escape the oven when opening the door. To reduce the build-up of condensation, pre heat the oven for longer periods and occasionally open the door and carefully wipe away the condensation. Adjusting your cooking practices will also ensure a minimum build up of condensation.




PRODUCT DESCRIPTION


Description of appliance

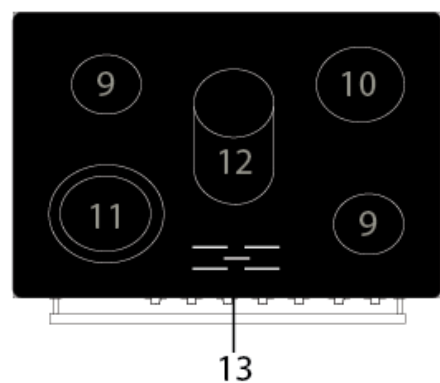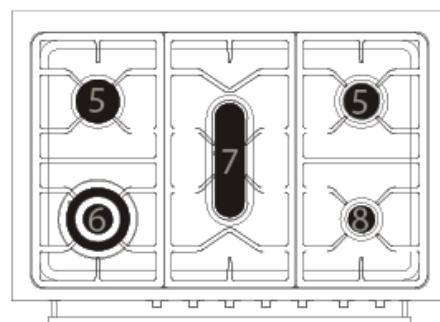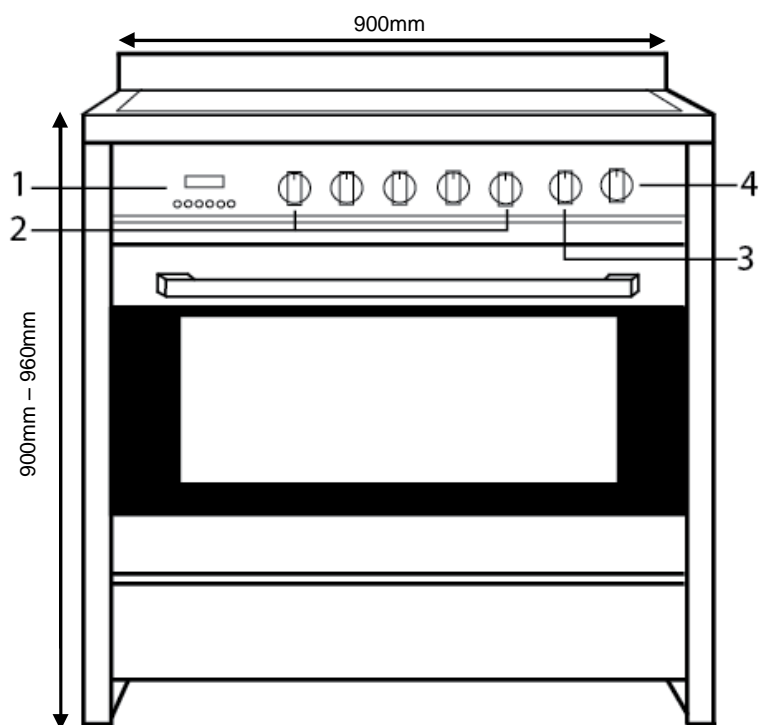

AR 900s

AR 600s

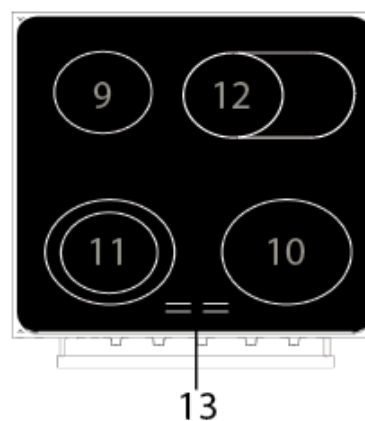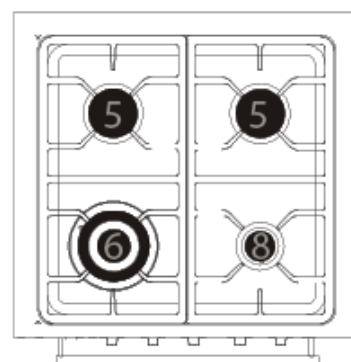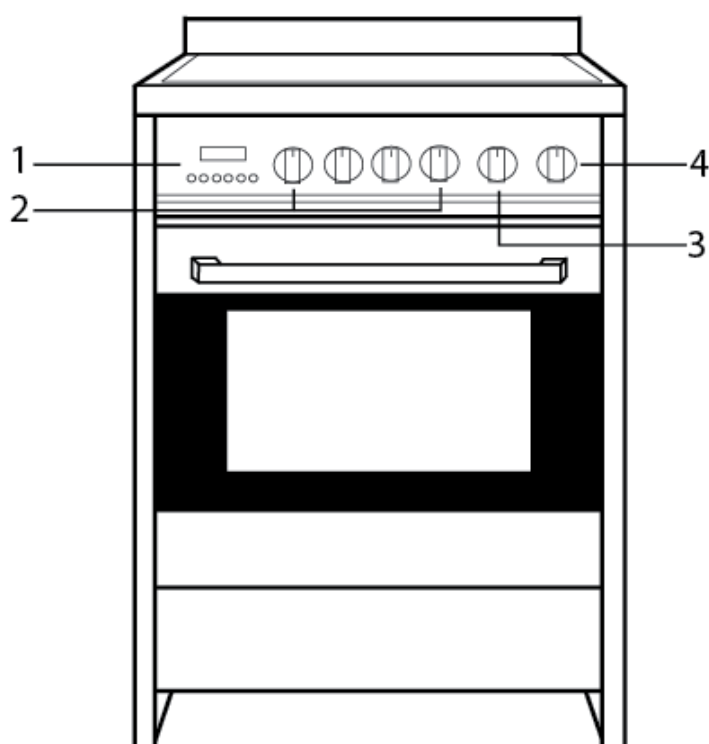

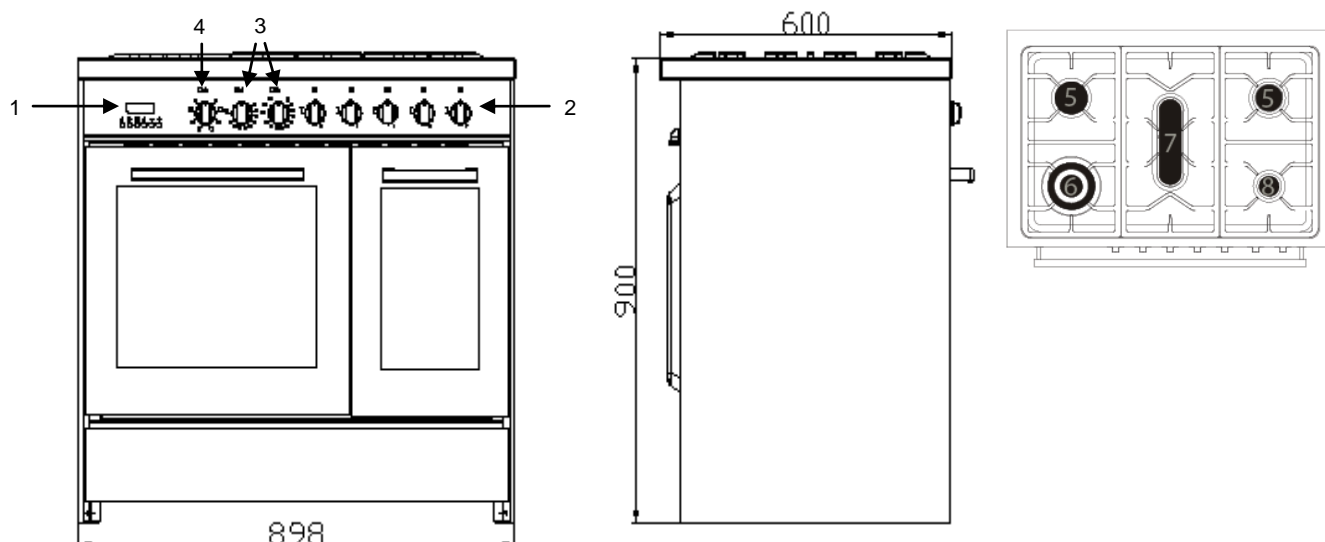



- | | |
|---------------------------------------|--------------------------------------|
| 1. Electronic clock | 8. Auxiliary burner (small) |
| 2. Control knobs (cooktop burners) | 9. Small cooktop element |
| 3. Cooking temperature selection knob | 10. Medium cooktop element |
| 4. Cooking mode selection knob | 11. Large cooktop element |
| 5. Semi-rapid burner (medium) | 12. Oval cooktop element |
| 6. Wok burner | 13. Power & residual heat indicators |
| 7. Fish burner | |

Oven and Accessories

The appliance is supplied with easy clean shelf supports which offer a range of shelf heights. The oven contains two wire racks, one roasting dish, and a grill rack insert.



Controls

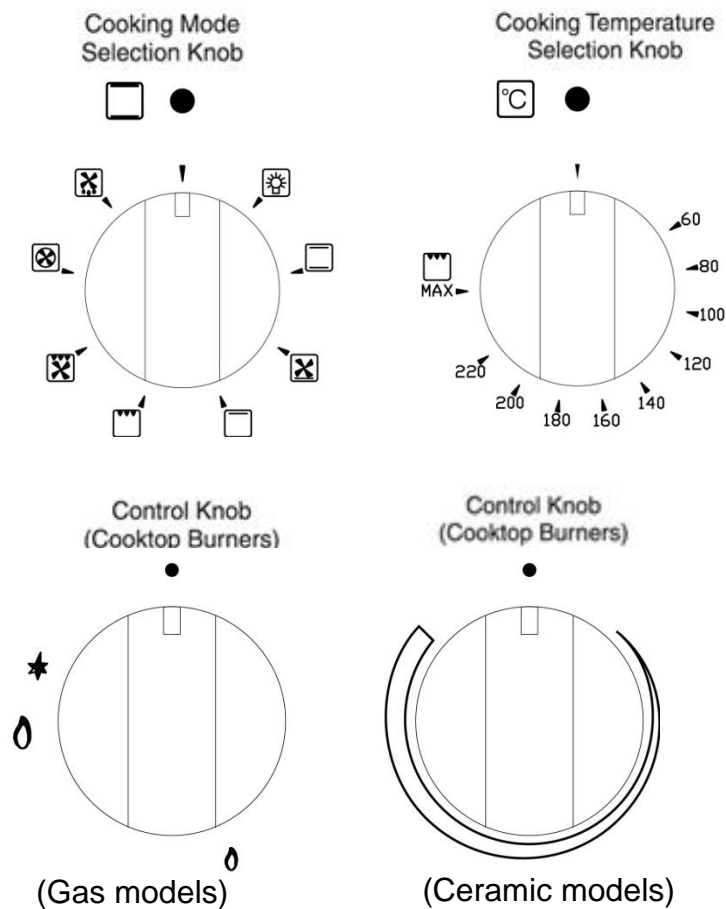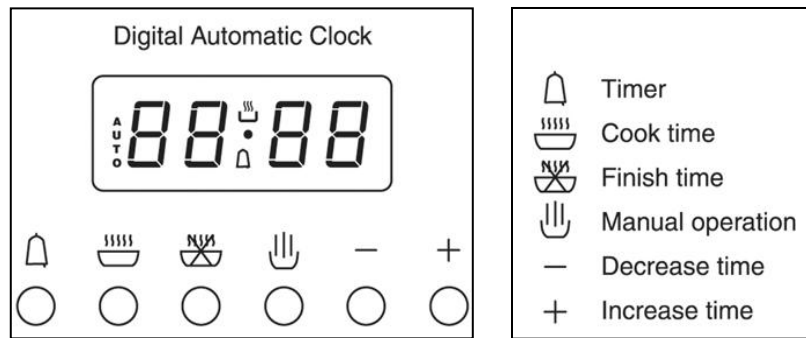

The symbols on the gas control knob means the following:

- No gas, or "Off".
- ★ Maximum gas flow or 'high' flame and lighting position.
- Minimum gas flow or 'low' flame.

When using the appliance, the knobs should be positioned between the maximum and minimum flow settings. Never position the knobs between the maximum setting and the "Off" position.

Igniting the Gas Cooktop



Oven and Half Freestander (FS9S-5-2)




This symbol above the control knob selects the controls for the larger multifunction oven.




This symbol above the control knob selects the controls for the smaller conventional oven.

Half Oven control (FS9S-5-2)

Turn off anti-clockwise

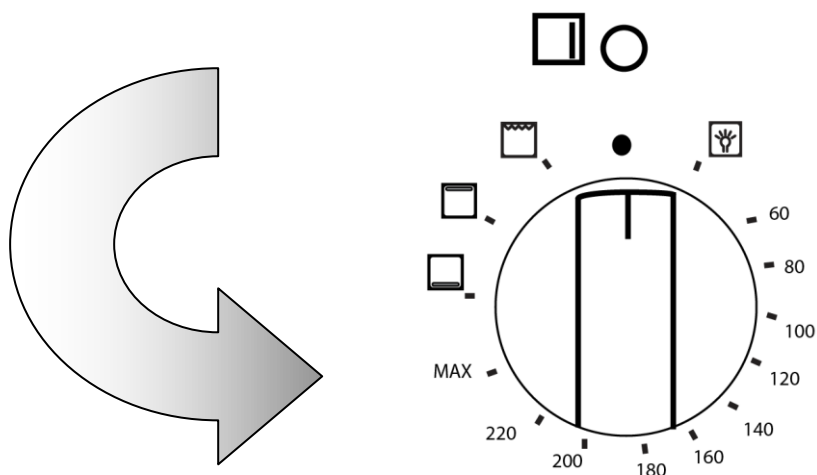

When selecting a temperature between 60°C and MAX the half oven will automatically be set to conventional oven mode. When selecting "bottom bake", "top bake" and "grill" functions the temperature will be automatically set to high. To turn the oven off the control knob must be turned **anti- clockwise** to the off position. **Do not force the control knob the other way as it will damage the appliance.**

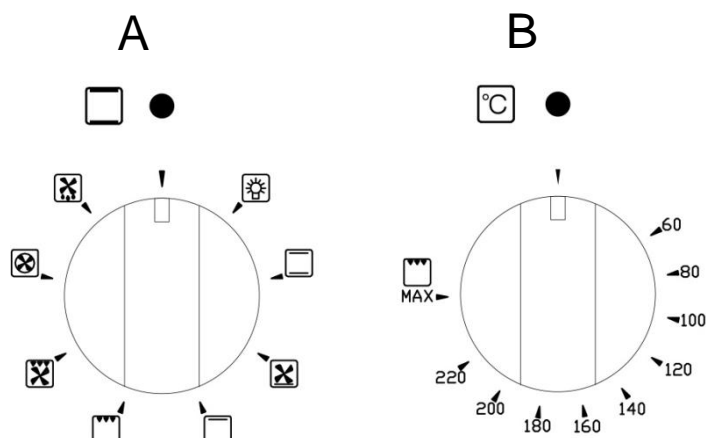



When using the main oven, you can select your desired (B) temperature according to the cooking function selected (A)

USING THE COOKTOP

USING THE GAS COOKTOP

Lighting the Cooktop Burners

- A - Burner cap
- B - Burner body
- C - Burner base
- D - Flame failure thermocouple (where fitted)
- E - Ignition candle

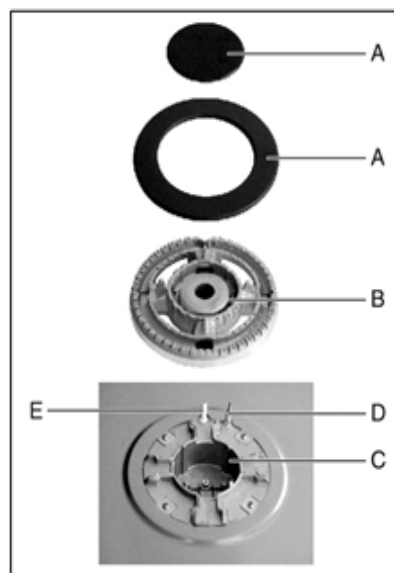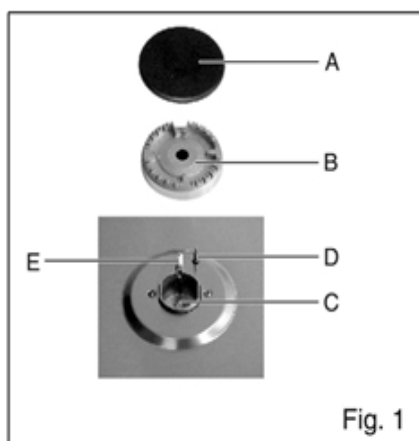

To light the burner, press the control knob down and continue to hold the knob down before rotating the knob anti-clockwise to the high flame position. The ignition of the burner is integrated into the control knob and is automatically activated by pushing down on the control knob.

After lighting the flame, continue to hold the knob down for 3 seconds. This time is necessary to heat up the flame failure thermocouple (Fig 1, D) and activate the safety valve, which would otherwise cut off the gas flow.

In the event of a power failure, it is still possible to operate your appliance. Place a lit match next to the burner and follow the above steps for normal lighting. If the flame fails to ignite, wait 5 minutes for the gas to dissipate, then attempt to ignite the burner again.

Once lit, check that the flame is even and regular, and turn the control knob to adjust the flame as required. If the flame is uneven, check that the burner head/skirt (Fig 1, A and B) are correctly positioned.


To turn off the flame, turn the control knob clockwise to the "Off" position. Always turn off the flame before removing pots and pans from the burner.

Correct Use of the Cooktop

For lower gas consumption and better heating performance, use only flat bottom pots and pans of suitable dimensions for the burners. Please refer to the table below. As soon as liquid comes to boil, ensure that the flame is turned down to a level that keeps the liquid just boiling.

It is important that pots are placed centrally over the burners.

Burner	POT SIZE	
	Minimum Diameter	Maximum Diameter
Small (auxiliary)	80mm	160mm
Medium (semi-rapid)	120mm	200mm
Large (rapid)	180mm	220mm
Triple flame (wok)	220mm	260mm
Fish burner	310x140mm	380x230mm

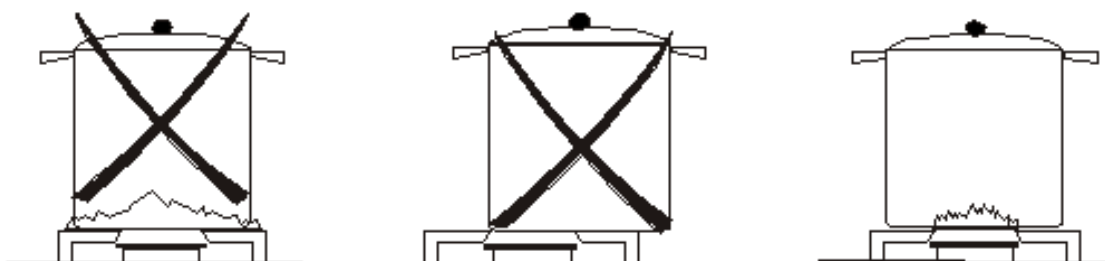

Using the cooktop for the first time

Before cooking for the first time, the ceramic glass has to be cleaned. Remove any removable labels and protective sheeting. Place a saucepan filled with water on each front hotplates, then switch on high power for at least 30 minutes. After 30 minutes, switch the front plates off, and place a saucepan filled with cold water on each of the rear and central (if present) hotplates. Switch them on high for at least 30 minutes.

This procedure is necessary in order to evaporate any protective oils and humidity that may have been used during the manufacturing process and will enable the electronic control circuits to operate properly.


Single cooking zones

Turn the control knob to the desired position (low to high). Adjustment is continuous so the cooking zone will operate at any intermediate knob setting between low and high. Once the cooking zone is hot, the LED corresponding to the zone illuminates.

You can switch off the cooking zone by turning the knob, in either direction, to the off position. The residual heat indicator will remain illuminated if the temperature of the ceramic glass surface is hot and will switch off once the surface temperature has cooled.


Dual cooking zones

For the inner cooking zone, turn the control knob clockwise to the desired position between low and max. Once the inner cooking zone is hot, the lamp corresponding to the zone illuminates.

To operate the outer cooking zone, turn the knob past the max setting to the  symbol. This will turn on the outer cooking zone, and you can adjust the temperature. Both inner and outer cooking zone will operate.

To cancel the outer cooking zone and return to using the inner cooking zone, turn the knob to the off position to switch off the outer cooking zone.

The residual heat indicator will remain illuminated if the temperature of the ceramic glass surface is hot and it will switch off once the surface temperature has cooled.

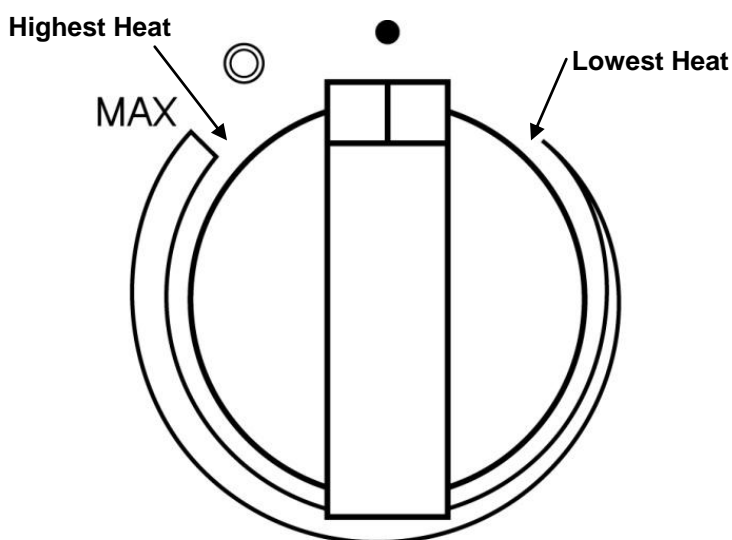

USING THE OVEN

This multi-function oven combines the advantages of traditional conventional ovens with a modern fan assisted oven, all in a single appliance. It is extremely versatile, and allows you to choose easily and safely between different modes. The various cooking modes are selected using the cooking mode selection knob, located on the control panel.

It is important to remember that this oven may perform differently than your previous appliance may have. To obtain the best cooking results, please experiment with temperature, rack height, and cooking times.

Fit the trays and shelves between the two closest wires as shown on the right.



To remove the side support racks, push down on the wire below the locking pin and pull away from the oven wall until you can release the bottom of the support from the holes in the oven wall. To replace, reverse this procedure.


To operate this oven:

- Ensure that the manual mode is selected.
- Turn the cooking mode selection knob to the desired cooking mode.
- Turn the temperature selection knob to the desired temperature.
- If grilling, turn the temperature selection knob to MAX.

The first time you use your appliance, set the temperature to MAX and select a cooking mode, leaving the empty oven to operate for 30 minutes. Then turn off the appliance and allow it to cool. Any odours during this initial use are due to the evaporation of substances used to protect the appliance during manufacture and storage.

NOTE: Place the baking tray provided on the bottom shelf to prevent any spillages from dripping onto the bottom of the oven. **Never place anything (including foil and oven trays) directly on the bottom of the oven when it is in operation as it could damage the enamel.** Place your cookware only (dishes, trays, aluminium foil, etc.) on the oven shelves provided with this appliance.


SETTING THE ELECTRONIC TIMER

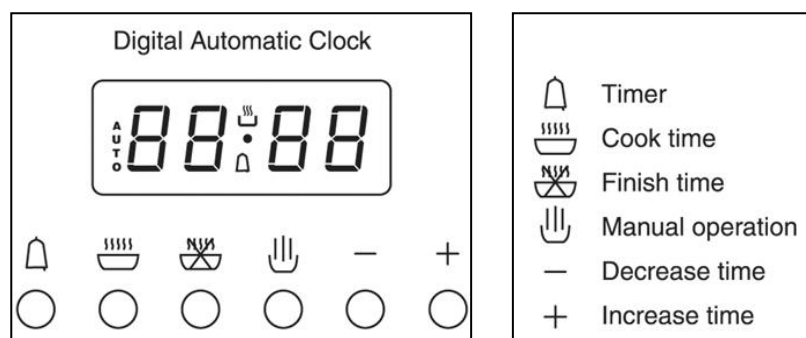


General instructions

- The oven only operates when the time has been set
- This appliance has a digital display 24 hour clock with six control buttons. When the power is connected, the screen displays 3 flashing numbers and **"AUTO"**.

Adjusting the Digital Clock



To set the correct time, press the  button first and then the + or – button to increase or decrease until the correct time is displayed.

Manual Operation Setting

If **"AUTO"** is flashing, automatic or semi automatic program has been set. Press the  button. **"AUTO"** will clear from the display and the oven can be operated manually.



Automatic Setting



Automatic setting of the oven allows you to select the end time, cooking time, temperature and cooking mode. The oven will switch on, cook according to the selected cooking mode and temperature, then switch off automatically.

1. Press  button, set the cooking time with the + and – buttons.
2. Press  button, set cooking finish time with + and – buttons.
3. Set cooking temperature and cooking mode by turning the thermostat knob and mode selector knob.


After the above setting, **"AUTO"** will illuminate, which means the automatic cooking feature of the oven is set.


For Example: If cooking time takes 45 minutes and you want it to finish at 14:00:




1. Press  button, set the cooking time to 45 minutes with the + and – buttons.
2. Press  button, set finish time to 14:00 with + and – buttons.
3. Set cooking temperature and cooking mode by turning the thermostat knob and mode selector knob.

After the above setting, the current time is displayed and **“AUTO”** will flash, indicating that the automatic cooking feature is set. When the clock displays 13:15, the oven will start cooking automatically. While cooking, **“AUTO”** and  will flash. When the clock displays 14:00, the oven automatically stops cooking. The alarm will ring and **“AUTO”** will flash. Press the  button and the ringing will stop.

Semi Automatic Setting



1. Press  button, set cooking finish time with + and – buttons. (Up to 23 hours and 59 minutes).
2. Set cooking temperature and cooking mode by turning the thermostat knob and mode selector knob.

The oven starts immediately  and **“AUTO”** will flash. At the finish time reached, the oven automatically stops cooking. The alarm will ring and **“AUTO”** will flash. Press the alarm bell to stop the ringing.

When the  button is pressed during semi-automatic cooking, the set cooking time is displayed. If the  button is pressed and the time set back to 0, the semi-automatic setting will be cancelled. When the  button is pressed again, the oven will revert back to manual mode.


Timer

The digital timer can be set up to 23 hours and 59 minutes maximum.

To set the timer, press the function button repeatedly until the square bar above the  symbol flashes, and adjust the time by pressing the + or – buttons. The timer countdown will begin to work. When it reaches the set time, the square bar above the  symbol begins to flash and the alarm will ring. To stop the alarm ringing, press any button.

NOTE: when making time and mode selections they must be entered within 5 seconds. In case of power failure, all settings including the time display will be lost. When the power is restored, three '0' and **“AUTO”** will be displayed.

The Oven Light




 



Set the cooking mode selection knob to  switch on the oven light/s. The oven light/s will stay on while the oven is operating.

Cooling / Ventilation

In order to keep the exterior of the appliance cool, the appliance is fitted with a cooling fan that operates automatically. When the oven is on, the cooling fan turns on and you will notice a flow of air exiting between the door and control panel.

NOTE: When cooking is finished, the cooling fan will continue operating until the oven has cooled down. The cooling fan will then turn off automatically.

COOKING MODES

Symbol	Function description
	Defrost: When Defrost is selected, the fan located at the back of the oven circulates room temperature air around the oven. This is recommended for defrosting all types of food, but is particularly effective at defrosting delicate food items. It is possible to accelerate the defrosting process by selecting a multi-cooking mode and setting the temperature between 80°C and 100°C.
	Conventional Bake: When set to Conventional mode, the top and bottom heating elements will operate together like a 'normal' conventional oven. Conventional bake is best suited for traditional baking and roasting. You should only use one shelf at a time, otherwise the heat will be unevenly distributed. You can balance the amount of heat between the top and the bottom of the dish by selecting a different shelf height. If you want more heat at the top of the dish, place the dish on the top or second shelf. For more heat on the bottom of the dish, place the dish on the third or fourth shelf.
	Fan Assisted Bottom Bake: When set to Fan Assisted Bottom Bake cooking mode, the bottom element and the fan will operate. This mode is suitable for pastries, cakes, and non-dry sweets in baking tins or moulds that require heat from the bottom.
	Top Bake: When set to Top Bake mode, the top heating element will operate. This mode can be used to brown food at the end of cooking.
	Grill: When Grill is selected, the top element operates. Set the temperature to MAX when using the grill function. The extremely high and direct temperature of the grill makes it possible to brown the surface of meats and roasts while locking in the juices to keep them tender. Grill can also be used for dishes that require a high temperature on the surface of the dish, such as steak ribs, fillets, hamburgers, etc. Grill the food with the oven door slightly ajar.
	Fan Assisted Grill: When the Fan Assisted Grill mode is selected, the inner element and the fan will operate. This mode increases the circulation of the heated air throughout the oven, which helps prevent food from burning on the surface and allowing the heat to fully cook the dish. This mode is particularly useful for kebabs made with meats and vegetables, sausages, ribs, chicken, etc. When Fan Assisted Grill mode is used, grill with the door closed to avoid high surface temperatures on control knobs and surfaces. Place the food on the second or third oven shelf from the bottom, and place a dripping pan on the first rack from the bottom to prevent grease and fats dripping onto the oven floor. We recommend using 200°C with this mode as it is the most efficient temperature.
	<p>Fan Forced Bake: When Fan Forced Bake is selected, the fan element and the fan operate to provide a delicate heat that is more evenly distributed throughout the oven. This mode is ideal for baking and cooking delicate foods on multiple shelves, especially cakes that need to rise such as cream puffs, biscuits, swiss rolls, etc.</p> <p>NOTE: This function relies on the air circulation within the oven cavity to provide even temperatures and as such, the size and placement of the trays can affect the temperature distribution. It is usual to have some temperature variations within the oven cavity, and this function is NOT a guarantee of perfectly even temperatures through the oven.</p>

PRACTICAL COOKING ADVICE

FOR THE COOKTOP



For best results and energy efficiency, only use pans suitable for electric cooking.

- The bottom of the pan must be thick and flat. Before placing it on the hotplate, make sure that the pan and the hotplate are clean and dry.
- To avoid scratching the ceramic glass surface, never use cast-iron pans or pans with a rough bottom.
- To avoid wasting energy, make sure that the diameter of the pan bottom is 20mm bigger than the circle marked on the hotplate.


FOR THE OVEN

The oven offers a wide range of settings which allows you to cook any type of food in the best way possible. With time and experimentation, you will learn the heat settings, cooking modes, and shelf heights that will deliver you the results that best matches your cooking style. The advice given below is a guideline only which may be varied according to your personal experience.





Pre-Heating of Oven

If the oven needs to be preheated, the convection mode  or baking mode  should be selected. These are the most efficient modes, which will reach the desired temperature as quickly as possible using the least amount of energy. Once the oven has been pre heated and the cooking mode selected, the food should be placed in the oven.

Multi-Shelf Cooking

If you want to cook food on several shelves, select the “Baking (Fan Forced)” mode. This is the only mode that allows you to cook on multi-shelves at the same time. When cooking delicate foods on more than one shelf, use “Baking Mode” , as this allows you to cook on three shelves. 

COOKING GUIDE

Selector Knob Setting	Food to be Cooked	Level from below	Temperature °C	Time in Minutes
Conventional Bake 	First Courses			
	Lasagne	2 - 3	210 - 230	30
	Oven Baked Pasta	2 - 3	210 - 230	40
	Meat			
	Roast Veal	2	175 - 200	30 – 40 /kg
	Roast Beef	2	210 – 240	30 – 40 /kg
	Roast Pork	2	170 – 200	30 – 40 /kg
	Roast Lamb	2	170 – 200	15 / kg
	Pizza	1	210 – 240	40 – 45
	Meringue	1 – 2	50 – 70	60 – 90
Temperature with preheated oven				
Selector Knob Setting	Food to be Cooked	Level from below	Temperature °C	Time in Minutes
Fan Forced Cooking 	First Courses			
	Lasagne	2	190 – 210	20 – 25
	Sponge Cake	2 – 3	190 – 220	25 – 35
	Strudel	1 – 2	150	25 – 35
	Bread	2 – 3	190 – 210	40
	Toast	1 - 2	220 - 240	7
Grilling 			First Surface	Second Surface
	Pork Chops	4	7 – 9	5 – 7
	Fillet of Pork	3	9 – 11	5 – 9
	Fillet of Beef	3	9 – 11	9 – 11
	Liver	4	2 – 3	2 – 3
Fan Assisted Grill 	Half Chicken	3	9 – 14	9 – 11
	Sausages	4	7 – 9	5 – 6
	Meat Balls	4	7 – 9	5 – 6
	Fish Fillets	4	5 – 6	3 – 4
	Toast	4	2 - 4	2 - 3

NOTE: All ovens perform differently and may not perform the same way as your previous appliance did. Please experiment with different cooking time, mode, temperature and rack heights to achieve the desired results. The information provided here is just a helpful guide and may vary according to personal preferences.

CARE AND MAINTENANCE

Do not use a steam cleaner to clean the appliance.

Cleaning the Oven

GENERAL CLEANING

Before cleaning your appliance or performing maintenance, make sure that the cooking mode selection knob and the cooking temperature selection knob is set to the "OFF" position.

To extend the life of your oven, it must be cleaned frequently:

- For best results the oven should be cleaned immediately after use, while still warm.
- The enamelled or stainless steel parts should be washed with hot soapy water. Do not use abrasive or corrosive substances as it will damage them. For tough stains use special products available on the market. After cleaning, rinse thoroughly and dry.
- Never use a steam cleaner for cleaning inside of the oven.

There is a seal surrounding the oven opening which guarantees its optimum performance. Check the condition of this seal on a regular basis.

Should it become damaged, please contact Parmco Appliances. This may or may not be covered under warranty.



Never place anything (including foil and oven trays) on the bottom of the oven when it is in operation as this will result in damage to the enamel.

Clean the glass door using non abrasive products or sponges and dry it with a soft cloth.

Do not use abrasive cleaners or sharp scrapers to clean the oven door glass as they can scratch the surface and cause the glass to shatter.



Never place anything (including foil and oven trays) on the bottom of the oven when it is in operation as this may result in damage to the enamel.

Clean the glass door using non-abrasive products or sponges, and try it with a soft cloth. Do not use abrasive cleaners or sharp scrapers to clean the oven door glass since they can scratch the surface and may result in the glass shattering.

Cleaning the Ceramic Cooktop

Switch off your appliance before starting to clean. The ceramic glass should be regularly cleaned, preferably after each use once the residual heat warnings have turned off.

Smudges from pans with aluminium bottoms can easily be cleaned off with a cloth dampened in vinegar.

Remove any burnt residues immediately after cooking, rinse with water, and wipe dry with a clean cloth.

Never use abrasive or corrosive detergents, cleaning powders, oven sprays, spot removers, steel wool, or scourers.

Cleaning the Gas Cooktop

Before cleaning the cooktop, make sure all burners are “OFF” and that the appliance is cooled down. To keep the stainless steel in a good condition, it must be cleaned regularly after each use. The stainless steel parts should be washed with lukewarm water without using any abrasive powders or corrosive substances. If any stainless steel has difficult to remove stains, use cleaners specifically recommended to clean stainless steel. After cleaning any surface, it is advisable to rinse thoroughly and dry.


Wash the burner caps and head/skirts often with hot water and detergent, taking care to remove all residues. Ensure that the burner ports in the heat/skirts are clear and not blocked by water or detergent. The pan trivets can be washed in the dishwasher. For stubborn dirt, use standard non-abrasive detergents or specific commercial products. We strongly advise you not to use any scouring type pads, steel wool or acid for cleaning.

Cleaning the Front Panels

To clean the front panels, use hot soapy water. Use of abrasive cleaners, powders, pads, etc will remove the printed graphics prematurely.

Cleaning the Ignition Candle


Automatic burner ignition is provided by a ceramic “candle” (E) and a metal electrode. Periodically clean these parts of the cooktop thoroughly. To avoid ignition difficulties, check that the cavities in the burner are not obstructed (B). To remove deposits in the burner, remove the burner caps (A). After cleaning, put the burner heads and caps back together and put them correctly in their position. After washing, replace the pan trivets, checking that they are correctly positioned (see pictures below).

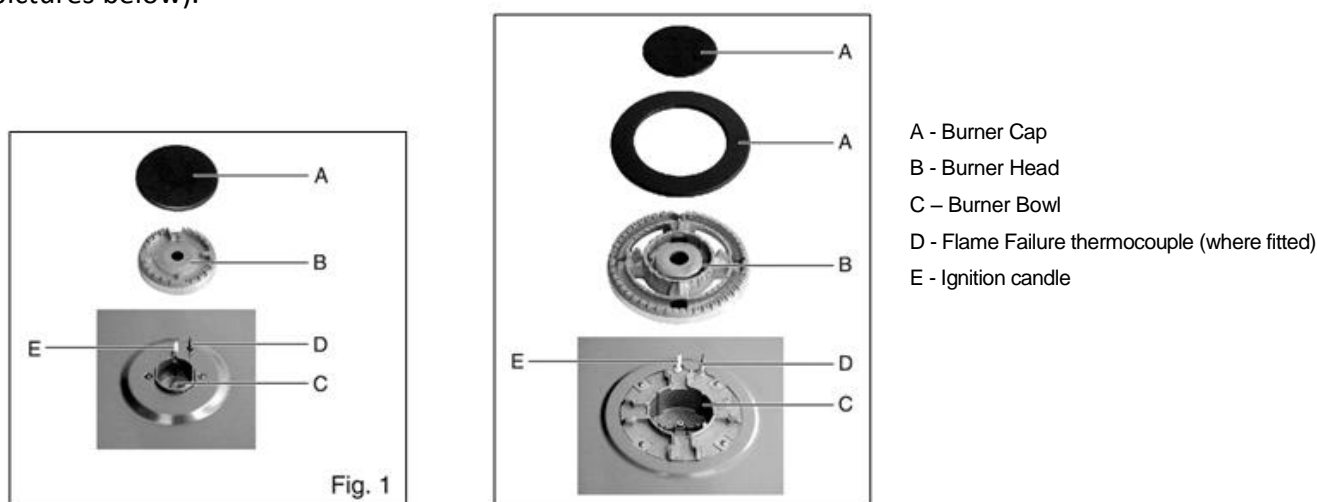

How to remove the Oven Door

Hinge Style 1

- Open the door fully (1).
- Lift up and turn the small hooks located on the two hinges (2).
- Grip the door on the two external sides and close it approximately half way. Unlock the door panel by pressing on the two small plastic buttons (3).
- Pull the door upwards towards you.
- To replace the door, reverse this procedure.

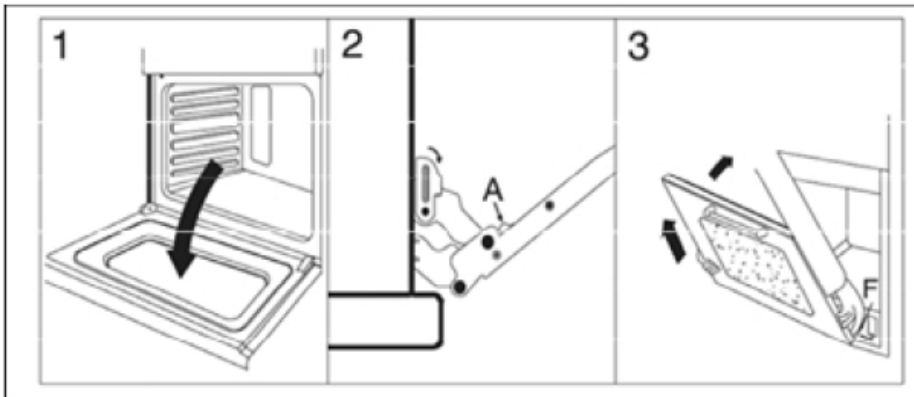

Hinge Style 2

- Open the door fully.
- Locate the hinge assembly (1).
- Lift the hinge tab to the open position (2).
- Gently close the door until the hinge assembly is against the door (3).
- Lift the door up and out at the same time.
- To replace the door reverse the above procedure, making sure that the hinge is correctly located on the small rebate in the hinge arm (4).

1

2

3



4




Replacing the Oven Lamps

WARNING: Ensure that the appliance is turned off before replacing the oven lamp/s to avoid the possibility of electric shock.

Remove the glass cover of the lamp holder as shown below.

Remove the lamp and replace with a lamp resistant to high temperatures (300°C) with the following characteristics.

- Voltage: 220 – 240V
- Wattage: 25W
- Type: E14

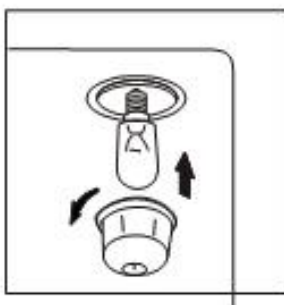

Replacement lamps are available from Parmco Appliances.

Disposal

Parmco has a commitment to being environmentally responsible. To avoid potential negative impacts on the environment, please ensure that this appliance is disposed of correctly. This product must not be treated as household waste. Instead, it should be handed over to an appropriate collection point for recycling of electrical and steel components.

Disposal should always be carried out in an environmentally appropriate manner.

For more detailed information about treatment, recovery and recycling of this product, please contact your local City Council office.

Routine Maintenance

The gas pipes and pressure regulator (if installed) should be checked periodically to ensure they are in good working condition. If anomalies are found, contact an authorised service agent.

To ensure good working performance and safety, the gas regulator taps must be greased periodically by authorised personnel only!

Abnormal Operation

Any of the following are considered to be abnormal operation and may require servicing.

- Yellow tipping of the burner flame
- Sooting up of cooking utensils
- Burners not igniting properly
- Burners failing to remain alight
- Burners extinguished by closing cupboard doors
- Gas valves being difficult to turn

Service and Parts

Before leaving the factory, this appliance was tested and adjusted by specialist and skilled staff to give the best operating results. Any subsequent necessary repairs or adjustments must be carried out with the greatest care and attention by authorized personnel. For this reason, we strongly advise you to contact Parmco Service department, specifying the nature of the problem, the model, and the serial number of the appliance. This data is provided on the data label adhered to the base of the appliance and on the duplicate data label in the appliance information pack.

IMPORTANT NOTE

It is the law in New Zealand that this appliance must be installed only by authorized persons. The installation must comply with all the appropriate New Zealand Standards and Regulatory Requirements with particular reference to the New Zealand Electrical and Gas Standards.

Any attempt to install this or any other Parmco products without an authorized person could result in damage to the product and possible health hazards. Not having an authorized person install this appliance may result in all associated warranties from Parmco Appliances being made null and void.

INSTALLATION INSTRUCTIONS

- Installation of this appliance and its connection to the electrical mains must only be carried out by authorized personnel. Before any service procedure, it is important to ensure that the appliance is DISCONNECTED from the electrical mains.
- Do not modify this appliance.
- After removing the appliance from the packaging, make sure it is undamaged. In the unlikely event this occurs, contact Parmco before operating this appliance.
- Make sure that this appliance is adequately ventilated.
- Make sure that the appliance is supplied with the type of gas indicated on the data label and the gas type label next to the connection point.
- Use of gas cooking appliances produces heat and moisture in the room in which it is installed. Ensure that the room is well ventilated by keeping the air intakes free of obstruction and in good working order, and/or by installing a ventilation extraction system.
- If the appliance is used intensively for a long time, the effectiveness of the ventilation will need to be increased, for example, by opening a window or increasing the power of the ventilation fan.

NOTES TO THE AUTHORIZED INSTALLER



This appliance shall only be installed by an authorized person. This appliance shall only be installed in complete accordance with the Gas and Electrical Standards of New Zealand. All local regulations, building code requirements, and all other statutory requirements must be met.

Data Label

The data label is located at the rear of the appliance. A duplicate label is supplied for you to adhere to a suitable accessible area next to the appliance. The data label on the appliance must NEVER be removed. This appliance is suitable for use with both Natural Gas and LPG. A label is provided to adhere to the appliance to show which type of gas the appliance has been set to use.

Ventilation

This appliance must be installed in accordance with the relevant gas installation standards. In general, the appliance must have adequate ventilation for complete combustion of gas, proper extraction, fueling, and the maintenance of temperature of immediate surroundings to within safe limits.

Before any procedure, it is important to check that the appliance is DISCONNECTED from the electrical mains. Parmco declines all responsibilities for any damage deriving from installations that are in breach of the regulations in force or from failure to comply with these installation instructions.

Combustible Surfaces




The appliance shall be installed in accordance with the New Zealand standards relating to the installation of domestic cooking appliances.

In general, any adjoining wall surface within 200mm from the edge of any burner must be of a suitable non-combustible material to a height of 150mm, for the entire length of the appliance. Any combustible construction (e.g. cabinetry) must be a minimum of 750mm above this appliance. If a combustible bench top is within 200mm of any burner, then the appliance top should be a minimum of 10mm above the bench top. Any ventilation product supplied by Parmco Appliances should be a minimum of 750mm above this appliance.

Installing Units on a Plinth

It is possible to install the AR 600, AR 900, AR 600-LEG, AR 600-OBS, AR 600-WHT, AR 900-LEG, AR 600-CER, AR 900-CER and AR 900-OBS units on a “plinth” if required. Special ventilation is required in this application. Please refer to the diagram below.

- The appliance should be placed on a plinth constructed of material suitable to carry the full weight of the appliance.
- The base of the plinth should be constructed of a suitable non-combustible material.
- A 40mm air gap must be provided at the rear of the plinth.
- 6 air gaps of 100mm wide x 10mm high must be provided in the front face of the plinth.

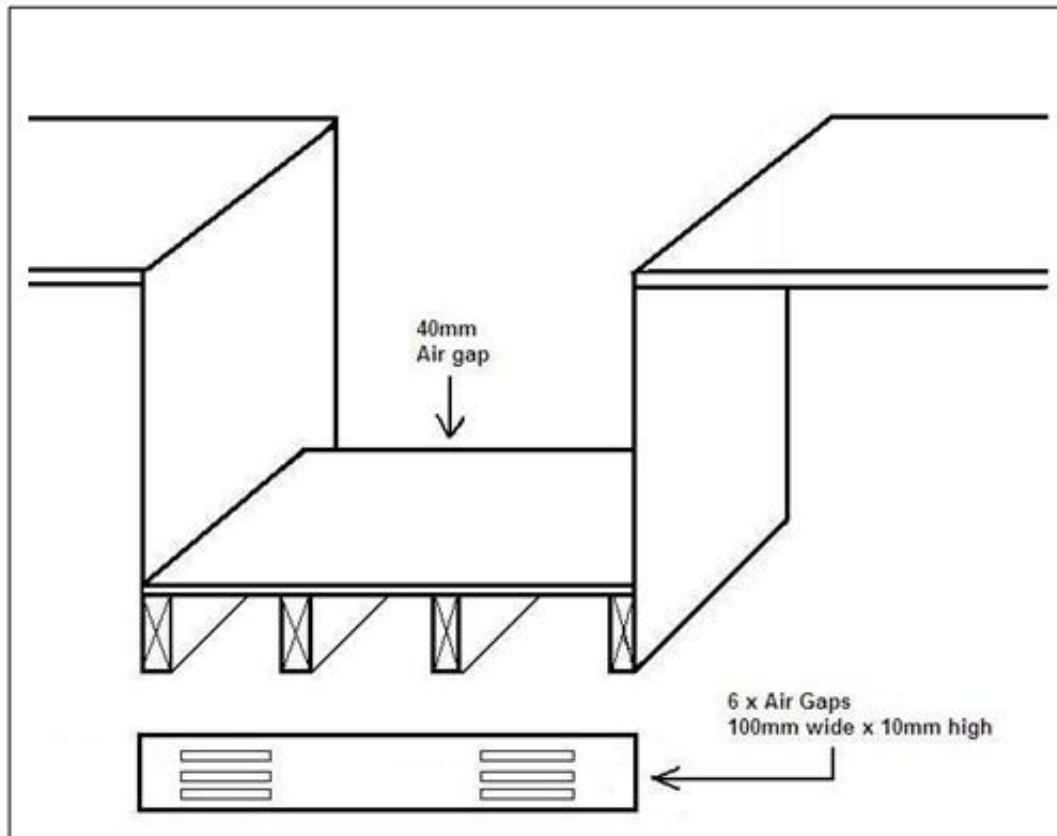

If this appliance is placed on a base, measures must be taken to prevent the appliance from slipping from the base.

Anti-Tilt/Hose Restraint Chain

Each appliance is supplied with a restraint chain. The restraint chain prevents strain being applied to the hose when the appliance is pulled forward and prevents the appliance from tilting forward.

The chain should restrict the appliance movement to no more than 80% of the hose length. The chain should be connected to a suitable anchor point as close to the behind of the appliance as possible. If the appliance is installed between two cabinets, drill holes into the cabinetry and secure the chains inside the cupboards.

WARNING: Ensure the chains are correctly anchored to prevent the appliance from tilting forward and to prevent strain on the hose when the appliance is pulled forward.



MAKE SURE THE ANTI-TILTING CHAINS ARE TAUT WHEN ANCHORED TO PREVENT THE APPLIANCE FROM TILTING.

AR 600-LEG and AR 900-LEG Models

These models have extendable legs that you can use to raise and lower the appliance to the desired installation height. It is important not to over extend these legs as the appliance can become unstable.

1. Lay the appliance on its back, being careful not to damage the appliance. It is advisable that two people carry out this operation.
2. Extend the legs to the desired height.
3. Screw the legs into the base, ensuring that the legs are hand tightened only.
4. With two people, lift the appliance back upright. Take extra care during this process to avoid placing excess stress on the back legs as this may result in the full weight of the appliance landing on the legs and bending the bottom plate of the appliance.
5. When moving the appliance in and out for cleaning, always take care to lift the appliance and not slide the appliance, as this can bend the legs.



CONNECTION TO THE GAS SUPPLY



Conversion to LPG

LPG jets are included with this appliance. To convert the unit to LPG, replace the jets with a size 7 socket. Ensure that the injector jets are matched with the burner size as per the technical data table below.

An LPG regulator is not supplied with this appliance and will need to be supplied and fitted by the authorized installer. The LPG regulator needs to meet all the relevant New Zealand standards.

Minimum Flame Setting

The minimum flame adjustment bypass screw is located above left of the gas valve shaft and can be accessed by removing the control knob. Using a thin blade screwdriver, turn the bypass screw fully clockwise and then turn it anti clockwise. 1 turn for the wok burner, $\frac{1}{2}$ of a turn for the semi-rapid burner, and $\frac{3}{8}$ of a turn for the auxiliary burners. This should result in a small, stable, flame that is uniform around the entire burner ring. If not, continue adjusting the bypass screw anti-clockwise in small increments until the desired low level flame is achieved.

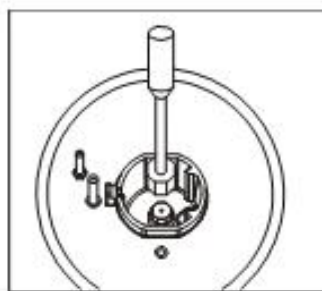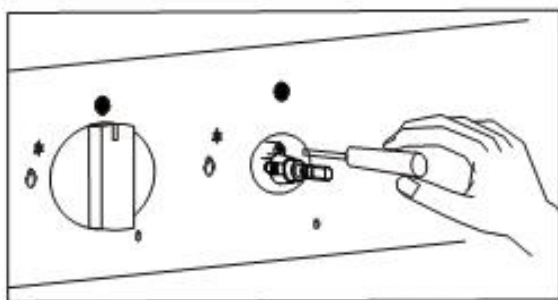

CATALYTIC LINER INSTALLATION

3 Catalytic Liners

NOTE: If your oven does not have catalytic liners and you wish to purchase them, they are available from your retailer or Parmco.

Operation

The catalytic liners are coated with a specially formulated enamel coating, over a base of regular enamel. This enamel coating has a rough surface which is also porous. During normal cooking, fats and other food spatter is partially absorbed into the surface and then oxidised away. This oxidation of the fat works best if the oven is set at high temperatures. If you do a lot of lower temperature baking, say around the normal 180°C, then the cleaning process may not be complete. Every now and then you should turn the oven on to maximum temperature for around one hour to completely remove the soil.

Cleaning

Cleaning by hand. Make sure the oven is cool before cleaning.

The catalytic liners should be cleaned using a solution of hot water and washing-up liquid applied with a soft nylon brush. Do not wash these liners in the dishwasher.

Do not use abrasive cleaning agents, hard brushes, scouring pads or cloths, steel wool, knives or other abrasive materials. Do not use oven spray on catalytic enamel as the chemicals used in oven sprays will damage catalytic liners and render them unusable.

If using oven sprays on the interior oven surfaces, the catalytic liners must first be removed from the oven.

Should the panels become heavily soiled, they will need to be taken out of the oven and cleaned by hand. They should be soaked in warm, soapy water for at least 2 hours and then wiped clean with a soft cloth.

Cleaning with high temperatures

Before cleaning the catalytic liners using high oven temperatures make sure that all interior oven surfaces have been cleaned as described above. Otherwise, the high temperatures can bake deposits onto the interior oven surfaces and make them impossible to remove.

Note that deposits of spices, syrups and similar substances are not removed by this process. These should be removed by hand with a mild solution of hot water and washing-up liquid applied with a soft brush.

- Remove all accessories from the oven.
- Set the oven to conventional function.
- Set the heat to 250 °C.
- Run the oven for approximately 1 hour. The length of time will depend on the degree of soiling.

It is a good idea to set the finish time for the process using the end time setting, in case you forget to switch the oven off at the end.

Any remaining soil will gradually disappear with each subsequent use of the oven at high temperatures. The stains on the catalytic liners caused by grease, fats and oils from cooking are completely normal and will not be able to be completely removed. Catalytic liners are a consumable item and can be replaced with new catalytic liners.

NOTE: Solid cleaning powders, creamy cleansers, caustic oven cleaners, steel wool or other scourers will ruin the catalytic surface and must NEVER BE USED.

Remove the side racks and fitting side catalytic liners

Unclip the bottom of the side rack from the lug.

Lift the side rack up to disengage the hooks.

The side rack should now be free to be pulled in towards the centre of the oven.

Repeat process for the other side.

Place catalytic liner on the side wall of the oven aligning the holes at the top.

Refit the side racks by inserting the top of the rack into the holes through the catalytic liner.

Clip bottom of rack into position over lug.

Removing and installing the catalytic fan cover

- Remove the 4 retaining screws on the top and bottom edge of the rear fan cover.
- Remove cover

Note: The fan cover must be replaced after cleaning

- To refit, place the fan cover back into position by lining up the screw holes in each corner.
- Insert screws firmly into appropriate holes
- The fan cover must not be loose

ELECTRICAL CONNECTION

The appliance comes fitted with an approved supply cord and can be connected to an appropriately rated plug that is compatible with the socket-outlet that is fitted to the final sub-circuit in the fixed wiring that is intended to supply this appliance. It is necessary that all installation and connections are carried out by qualified personnel and that the connections meet all New Zealand regulatory requirements.





Connection of Feed Cable to Mains

In the case of direct connection to the mains (hardwired without plug), it is necessary to insert a suitable omnipolar switch before the appliance, with a minimum opening of 3mm between the contacts – the grounding wire should not be interrupted by the switch.

Before connecting to the mains, make sure that:

- The electrical counter, the circuit breaker, feed cable, and socket are suitable to withstand the maximum load requirements as detailed on the rating label.
- The supply system is regularly grounded as per New Zealand regulations.
- The socket or omnipolar switch can easily be reached after the appliance is installed.
- After connection of the appliance to the mains, make sure no wires come into contact with any parts of the appliance subjected to heating.
- Never use reductions, shunts or adapters which can cause overheating or burning.

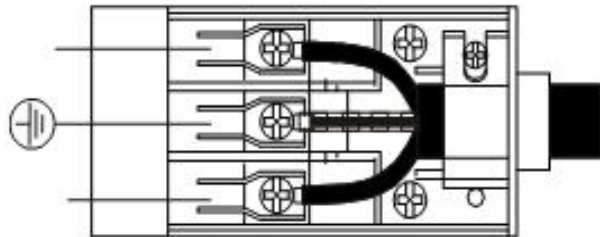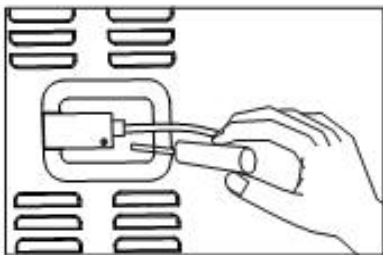

This appliance is not intended to be operated by means of an external timer or separate remote-control system. It is essential that this unit is operated in conjunction with some form of ventilation/extraction system. Parmco has a wide range of kitchen ventilation solutions available.

TECHNICAL DATA


Natural Gas (G20) 2kPa				
Product Code	No. of burners x Injector size			
	Auxiliary	Semi-Rapid	Fish Burner	Wok
AR 600	1 x 0.72	2 x 0.97	0	1 x 1.40
AR 600-LEG	1 x 0.72	2 x 0.97	0	1 x 1.40
AR 600-OBS	1 x 0.72	2 x 0.97	0	1 x 1.40
AR 600-WHT	1 x 0.72	2 x 0.97	0	1 x 1.40
AR 900	1 x 0.72	2 x 0.97	1 x 1.15	1 x 1.40
AR 900-LEG	1 x 0.72	2 x 0.97	1 x 1.15	1 x 1.40
AR 900-OBS	1 x 0.72	2 x 0.97	1 x 1.15	1 x 1.40
FS9S-5-2	1 x 0.72	2 x 0.97	1 x 1.15	1 x 1.40
	Nominal Gas consumption per burner			
	3.6 MJ/h	6.3 MJ/h	10.08 MJ/h	13.7 MJ/h

General Product LPG (G30/G31) 2.75kPa				
Product Code	No. of burners x Injector size			
	Auxiliary	Semi-Rapid	Fish Burner	Wok
AR 600	1 x 0.50	2 x 0.65	0	1 x 0.95
AR 600-LEG	1 x 0.50	2 x 0.65	0	1 x 0.95
AR 600-OBS	1 x 0.50	2 x 0.65	0	1 x 0.95
AR 600-WHT	1 x 0.50	2 x 0.65	0	1 x 0.95
AR 900	1 x 0.50	2 x 0.65	1 x 0.85	1 x 0.95
AR 900-LEG	1 x 0.50	2 x 0.65	1 x 0.85	1 x 0.95
AR 900-OBS	1 x 0.50	2 x 0.65	1 x 0.85	1 x 0.95
FS9S-5-2	1 x 0.50	2 x 0.65	1 x 0.85	1 x 0.95
	Nominal Gas consumption per burner			
	3.6 MJ/h	6.3 MJ/h	10.08 MJ/h	13.7 MJ/h

Product Code	Max power consumption
AR 600, AR 600-LEG, AR 600-WHT, AR 600-OBS	2.65KW
AR 900, AR 900-LEG, AR 900-OBS	3.5KW
AR 600-CER	10.4KW
AR 900-CER	12.65KW
FS9S-5-2	4.35KW

This appliance must be installed by a suitably qualified and authorized person. The appliance must be installed according to the electrical and gas standards of New Zealand.

Gas intake connection ½" BSP
Electricity supply 220-240V (50-60Hz)

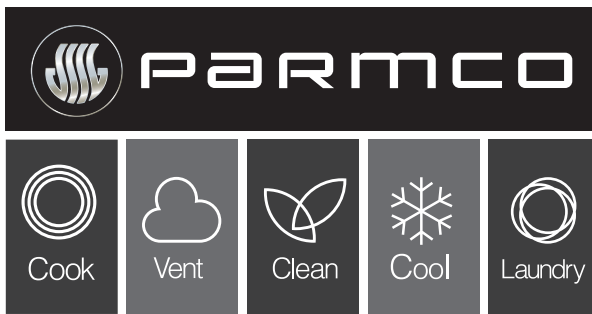

p: 09 573 5678
f: 09 573 5699
e: sales@parmco.co.nz
w: www.parmco.co.nz

Parmco Appliances *extended 5 year* *warranty*

The Warranty:

- Subject to the terms and conditions contained within this warranty, if the product is not of Acceptable Quality (as defined in the Consumer Guarantees Act) within 5 years of the date of original purchase, then Parmco Sales undertakes to repair or, at its sole discretion, replace the product.
- The warranty does not cover the costs of transport, mileage or travelling time if the product is located beyond 30km of a recognised Service Agent.
- This warranty is offered as an extra benefit, and does not affect other legal rights, which can not be modified or excluded by agreement.
- This warranty only applies to goods supplied and installed in the North and South Islands of New Zealand.
- The provisions of this warranty are in addition to the rights and remedies available to consumers under the Consumer Guarantees Act 1993.
- Products purchased as seconds or thirds may or may not carry a warranty. Please check with your reseller at the time of purchase for the warranty period being offered.

Product _____ Date of purchase _____

Dealer / Retailers Name _____

Please retain this Warranty card together with receipt or other proof of purchase date when seeking service during the warranty period

Please contact Parmco at 09 573 5678 if your appliance needs servicing under warranty. Please have your model number and proof of purchase ready. Warranty repairs must be authorized by Parmco.

Subject to updates without prior notice, please visit www.parmco.co.nz for the latest version.



The Warranty is not valid:

- If the product is not installed and operated in accordance with the operating instructions.
- If the product is not installed to comply with the electrical, gas, plumbing and other Regulations and Codes of Practice in New Zealand.
- If the product is operated on voltages or frequencies outside the normal range for domestic appliances in New Zealand.
- If the product is not used in normal domestic use, or if it is used in a business as defined in the Consumer Guarantees Act.
- If any serial number has been removed or defaced.
- If proof of date of purchase is not supplied, except at the sole discretion of Parmco Sales. Proof of purchase can be for the product itself, or if installed with a kitchen or house then proof of purchase can be from a Parmco reseller of products supplied by Parmco.
- If the products are purchased in a second hand condition from other parties (including but not limited to TradeMe, Sella, etc.)

Liability under this warranty will not be accepted for:

- Wear and tear from normal domestic use.
- Damage in transport.
- Damage caused to the product by neglect, abuse, negligence, wilful act or misuse.
- Any costs associated with the repair, replacement, removal or reinstallation of products installed in a damaged condition.
- Any defect caused by accident, misuse, neglect, tampering with or unauthorised modifications of the appliance or any attempt at internal adjustment or repair by any person other than an Authorised Service Agent.
- Service calls that relate principally to the following:
 - Instruction on how to use the product.
 - Repair or replacement of house fuses, electrical wiring, gas fitting or plumbing.
- Wear and tear caused by normal use of the product.
- Normal or scheduled maintenance including blocked filters or ducting.
- Consumable items such as light bulbs.
- Any damage to hobs caused by spills when cooking.
- Any breakage or damage of glass items.
- Any damage caused by non recommended product used for cleaning, maintaining, lubricating or similar.
- Any aspect relating to the installation of the product, or damage caused during installation including blocked access for repair.
- Any third party (including reseller) or consequential loss or damage (direct or indirect) however arising.

E & O.E. 727626022015