


Installation and Operating Instructions

Models:
PT-F6-W

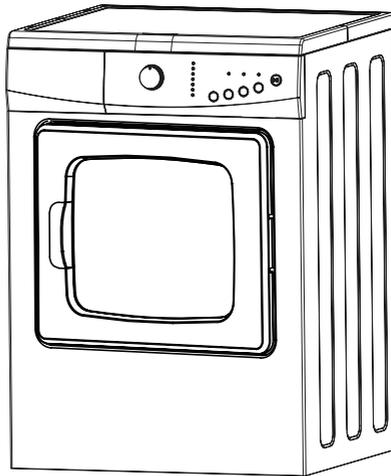

For your convenience, we recommend to attach
the serial number label HERE.

As part of Parmco Appliances commitment to improving and updating product ranges, we reserve the right to alter, change and update technical specifications and appearance attributes of all Parmco Appliances products. E&OE



Dear Valued Customer,

Thank you and congratulations on purchasing your new Parmco appliance.

All Parmco products are made to the highest quality and design standards. We are sure you will enjoy your new appliance.

As a note, please read through these instructions carefully, as these will assist you in gaining a complete understanding of the functions and features offered by your appliance.

Please take special note of all detailed technical information and installation instructions. It is essential that you only allow a qualified technician to install this appliance to ensure the safety and reliability of this appliance.

Furthermore, not using appropriate personnel to install this appliance may affect any future warranty claims lodged, so please check with Parmco Appliances before any installation is carried out.

We hope you enjoy your new appliance. If you would like to find out more about this product or any other products in Parmco's extensive range, visit us on the web at www.parmco.co.nz.

Regards,

The Parmco Team



CONTENTS

Safety information.....	1
Product description	4
Control panel.....	5
Use	6
Drying hints	10
Drying programmes.....	12
Care and cleaning.....	13
Something not working.....	14
Technical data.....	15
Installation.....	16
Environment concerns.....	19
Warranty.....	20

The following symbols are used in this manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance



General information and tips



Environmental information



WARNING

Read and understand thoroughly these safety instructions before use. The items indicated here are very important safety precautions, which must be followed. Any failure and losses caused by ignoring the above mentioned items and cautions mentioned in the manual are not covered by our warranty.

The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children should be supervised so they do not play with the appliance.




Possible electric shocks

- Disassembly, repairs or modification must only be carried out by professional technicians.
- The household electrical supply system (the current, the voltage, the cable, the fuse) should meet the specification requirements of the dryer under normal load.
- The power plug must be connected to a three-core socket with an earth wire and is grounded properly and reliably.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents, or similarly qualified persons in order to avoid a hazard.
- Do not disconnect the power plug by pulling on the supply cord. Hold the power plug with your hand.
- Do not use the supply cord when the connection between the power plug and the supply cord is loose.
- Do not touch the power plug with wet hands. Wipe off dust or water drops over the power plug with a dry cloth.
- Do not over-bend the supply cord or put it under heavy weight.
- Do not use the supply cord/socket/power plug if it is damaged or broken.




Possible explosions

- Do not put combustible liquid such as gasoline, petrol and alcohol into the appliance or nearby. Do not put clothes with that liquid into the appliance.
- Do not connect/disconnect the power plug when leakage of gas or other combustible gas occurs.

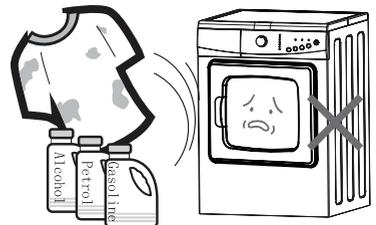

Fire accidents/short circuit or electric leakage may occur


- Do not install the appliance close to fire sources or heat sources.
- Do not rest any burning candles or cigarettes on the appliance.
- Do not install the appliance in places with dampness or suffering from rainfalls, to avoid igniting damages or other accidents due to gathered waterdrops on electrical components.
- Do not install the dryer in places under direct sunshine to avoid the plastic components and rubber components becoming aged.
- Do not shoot water at the appliance when cleaning it.
- In order to avoid danger of fires caused by excessive dryer, do not use the appliance to dry the following items: cushions, quilts, etc, as these items accumulate heat.
- Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
- If you have washed your laundry with stain remover, you must conduct an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have been accidentally left in pockets of garments that are to be loaded into the appliance.

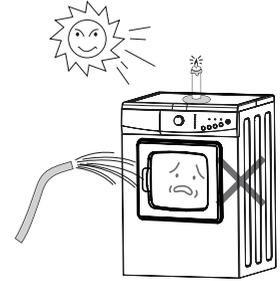

WARNING: Never stop a tumble dry before the end of the dryer cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Personal injury may occur

- This machine is not intended for use by young children or infirm persons without supervision.
- The package materials may be dangerous to children. Put all package materials (eg, the plastic bag) to places unreachable to children.
- Do not touch laundries in the drying drum until the dryer stops working completely.
- Do not keep children or pets nearby when the dryer is working, as they may be trapped into the dryer. Please check the drum carefully before closing the door.

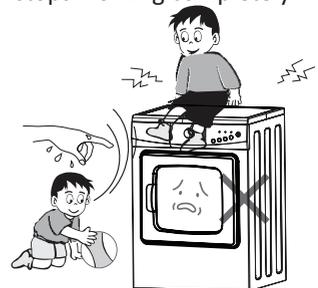





Other instructions

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed for.
- Only wash fabrics that are designed to be machine dried. Follow the instructions on each garment label.
- Any electrical work required to install this appliance should be carried out by a qualified electrician.
- If the machine is situated on a carpet floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- Do not climb onto the dryer, rest heavy objects/heavy devices, or items with water or liquid leakage on the dryer to avoid deformation of the face panel and of plastic components.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp materials can cause extensive damage and must not be placed into the machine.
- After installing the appliance, check that it is not pressing or standing on its electrical supply cable or vent hose.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles, and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use, clean, and maintenance.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes that are dripping wet should not be placed in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing it in the machine.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface, or the base is damaged so that the inside of the tumble dryer is accessible.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- The lint must not be allowed to accumulate around the tumble dryer.
- Do not dry unwashed items in the tumble dryer.
- Fabric softeners or similar products should be used as specified by the fabric softener instructions.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures the items will not be damaged.

PRODUCT DESCRIPTION


Before Use

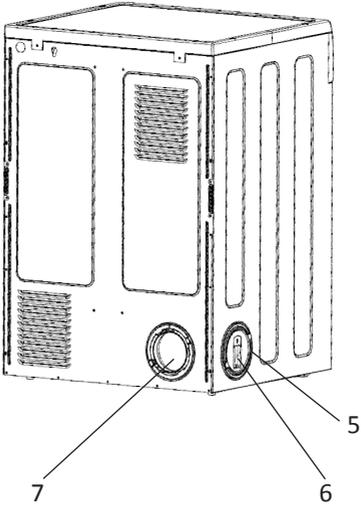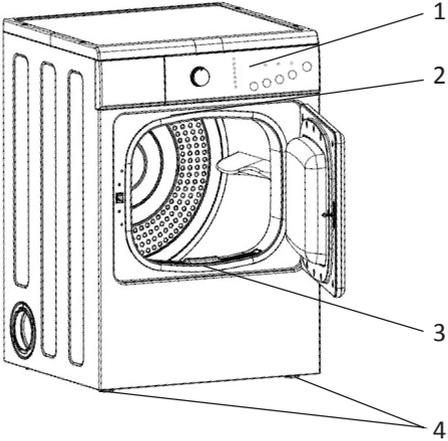

- 1. Control Panel
- 2. Drum Light
- 3. Filter

- 4. Adjustable Feet
- 5. Side Vent Outlet
- 6. Vent Pipe Cover

- 7. Rear Vent Outlet

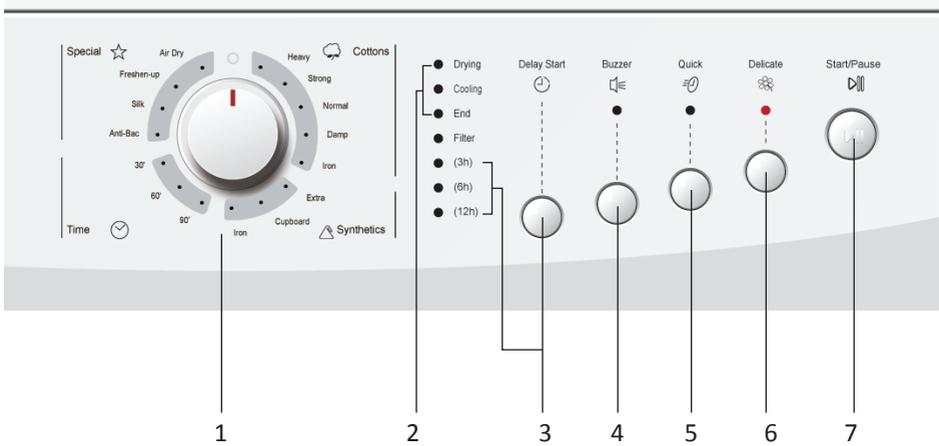

1. Programme Selector Dial
2. Sequence Indicator Lights
 - Drying
 - Cooling
 - End
 - Filter

3. Delay Button and Lights
4. Buzzer
5. Quick
6. Delicate
7. Start/Pause


i First Use

- Ensure that the electrical connections comply with the installation instructions.
- Remove the polystyrene block and any material from the drum.
- Before using your tumble dryer for the first time, we recommend that you place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand new tumble dryer.

i Daily Use


▲ Connect the appliance

- Open the door (see picture).
- Place the laundry in the drum, one item at a time, shaking them out as much as possible.
- Close the door. Please check that the laundry did not get caught between the door and the filter.

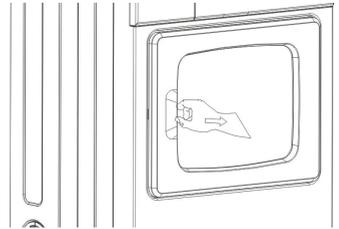

▲ Select the required programme

- Turn the programme selector dial to the required programme. The Start/Pause light starts to flash. The programme will be switched off if you have not pressed the Start/Pause button for 10 minutes.

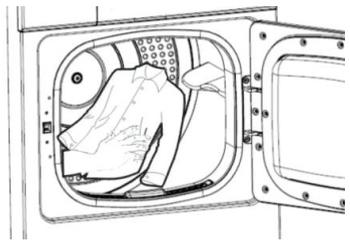

The selector dial is divided into the following sections:

- Cottons
- Synthetics
- Time
- Special

Automatic controlled drying

The appliance detects the moisture in the load and automatically adjust the drying time for optimal drying. Just select the programme according to fabrics. This drying system is good for the cottons, synthetics sections and the anti-bacterial, silk programme.

Time controlled drying

Can be used to finish off drying if necessary. Select the 60 or 90 minute programme for cottons or the 30 minute programme for synthetics. To cancel a programme which is running, turn the programme selector dial to "O". At the end of drying, turn the selector dial to "O" to switch the machine off before removing the laundry.

Programme option buttons

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before pressing the Start/Pause button. When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out.

Incorrect option selection

If you select an option that is not compatible with the programme you have selected, the option will not be selected. If you selected the "Buzzer" option, the buzzer will sound.

Select Delay Start

This button allows you to delay the start of the programme by 12 hours maximum. This option must be selected after selecting the programme and before pressing Start/Pause to start the programme. The programme is for 3, 6, or 12 hours.



It can be selected before or after selecting the programme option (Buzzer, Quick, Delicate). The countdown begins after you have pressed the Start/Pause button and the corresponding light illuminates. Press the button repeatedly to choose the programme 3, 6, or 12 hours. This option can not be selected when a Special programme is selected.

If you have selected a delay time via the button, the display will show it. The countdown is calculated automatically once you press the Start/Pause button. If you want to check the selected programme, press the Start/Pause button again to show the duration of the previously selected programme. This function cannot be used with Special programmes.

Select Buzzer

After turning on the appliance, the buzzer is off if there are no further actions. The buzzer can be turned on or off during the process. By pressing the Buzzer button, the buzzer goes off and the corresponding pilot light comes on. When the buzzer is on, the signal will sound in the following cases:

- When pressing any button
- At the end of the programme

When the buzzer is on, press the Buzzer button again to switch it off.



Select Quick

The option can be selected in the following programme: Heavy, Strong, Normal. By pressing this button, the drying time will be reduced by 3-5 minutes. The corresponding light illuminates. This option cannot be selected together with the Delicate option.



Select Delicate

The option can be selected in the following sections: Cottons, Synthetics. Pressing this button allows drying to be performed at a lower temperature for delicate items. The corresponding pilot light comes on. This option can also be used for time controlled dryer, but cannot be used with the Quick option.



Select Start/Pause

Press this button to start the dryer after selecting the programme and the options. If the door of the appliance is opened while the programme is running, this button must be pressed again after closing the door to restart the programme from the point at which it was interrupted. In these cases, the light of the Start/Pause button flashes to remind you that the start button needs to be pressed again.

Indicator lights

These lights indicate the following functions:


- Drying light
This light indicates that the appliance is in the drying phase.
- Cooling light
This light indicates that the appliance is in the cooling phase. At the end of drying, there is a 5 or 10 minutes cooling phase to cool the laundry.
- End of programme light
This light is on at the end of the cooling phase, during the anti-creasing phase.
- Filter light

It comes on every cycle to remind you that the filter must be cleaned at the end of the programme.

Thermostat reset

If during operation clothes have not dried it is possible the overheat thermostat has activated. This may be due to various reasons i.e. filter is blocked, ducting is obstructed or the dryer is overloaded. Once these items have been checked, switch dryer to air dry for 20 minutes, once the unit has cooled press the thermostat reset button at the rear of the unit. If problems persist please call for service.

Thermostat reset button

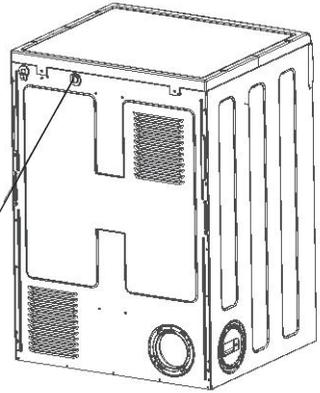

At the end of the programme

All drying programmes end with a 5 or 10 minutes cooling phase. If the laundry is not removed at the end of the cycle, the dryer performs an anti-creasing phase (duration: 30 minutes maximum). If you do not remove the laundry, the dryer will stop automatically at the end of the anti-creasing phase. The display light End shows and the buzzer sounds for 15 seconds if you have selected the buzzer. Turn the programme selector dial to "O" and all the lights will go out.

After each use

Clean the filter.

Important!

If the drying programme has to be stopped before it reaches the end, we recommend that you turn the programme selector dial to Air Dry and wait until the end of this cooling phase before removing the laundry. This will avoid a build-up of heat inside the appliance. To do this, first turn the dial to "O", then to Air Dry and press the Start button.

Modifying the programme

To change a programme which is running, first cancel it by turning the programme selector dial to "O". Select the new programme and press the Start button.



Drying Hints

Before loading the laundry

Never tumble dry the following: particularly delicate items such as net curtains, wool, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.

Always follow the instructions on garment labels:



may be tumble dried



delicate drying (low temperature)



normal drying (high temperature)



do not tumble dry

DRYING HINTS

Use Process

- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips, hooks, tie belts, and apron strings. Sort laundry according to type and degree of drying required.
- Do not overdry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract fluff.
- Laundry must be thoroughly spun before tumble drying.
- Even easy-care items (eg. shirts) should be briefly pre-spun before drying.
- Knitted textiles (knitted underwear) may shrink a little during drying. Please do not overdry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme Iron Dry. To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a brief post-drying time of at least 30 minutes. This will be necessary particularly for multilayered items (eg. collars, pockets, etc.).
- Make sure that no metal objects are left in the laundry (eg. hair clips, safety pins, pins).
- Turn items with double-layered fabrics inside out (eg. with cottonlined anoraks, the cotton layer should be on the outside). These fabrics will then dry better.

Maximum loads

Recommended loads are indicated in the programme charts.

General rules:

- **Cotton, linen:** drum full but not too tightly packed.
- **Synthetics:** drum no more than half full.
- **Delicate fabrics and woollens:** drum no more than quarter full.

Try to load to the maximum capacity as small loads are uneconomical.

Laundry weights

The following weights are indicative:

bathrobe	1200g	night dress	200g
napkin	100g	ladies' briefs	100g
quilt cover	700g	men's work shirt	600g
sheet	500g	men's shirt	200g
pillowcase	200g	men's pyjamas	500g
tablecloth	250g	blouse	100g
bath towel	200g	men's underpants	100g
tea towel	100g		

DRYING PROGRAMMES

If the weight of the laundry is less than 1kg, it is more efficient to dry with Time Controlled Drying.

Section	Course	Max load	Description of programme
Cottons	Heavy	6kg	For bathrobes, bath towels, jeans, work clothes
	Strong	6kg	For bathrobes, bath towels, jeans, work clothes
	Normal	6kg	For shirts, t-shirts, cotton trousers
	Damp	6kg	For knitted items, cotton shirts
	Iron	6kg	For sheets, bed linens, table linens, starched laundry
Synthetics	Extra	3kg	For sheets, tablecloths, synthetics items
	Cupboard	3kg	For synthetics items
	Iron	3kg	For knitted items, shirts
Time	30', 60', 90'	6kg	Multi-layered fabrics, bath towels, tea towels
Specials	Anti-Bacterial	3kg	For men's underpants, pantywaist, winter clothing
	Silk	1.5kg	For silk items
	Freshen-up	3kg	For men's underpants, shirts
	Air Dry	2kg	For refreshing or gently cleaning textiles

Care and Cleaning

You must DISCONNECT the appliance from the electricity supply before you can carry out any cleaning or maintenance work.

External cleaning

Use only soap and water and then dry thoroughly. Important: do not use methylated spirits, diluents, or similar products.




Cleaning the door

Periodically clean the interior part of the door to remove any fluff. Proper cleaning ensures effective drying.

Cleaning the filter

Your dryer will only function well if the filter is clean. The filter collects all the fluff which accumulates during drying and they must therefore be cleaned at the end of each programme. Do so with a damp cloth before removing the laundry.

The filter must be removed for cleaning (see picture).

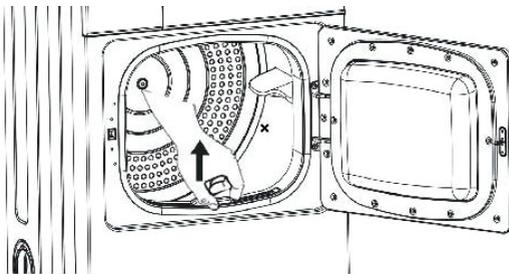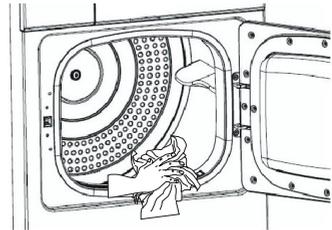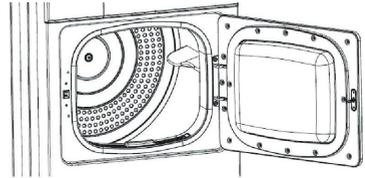

WARNING: Do not use the appliance without the filter.

Something not working

- Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling a technician. Before contacting a service agent, please carry out the checks listed below.
- During machine operation, it is possible that the Start/Pause light flashes to indicate that the machine is not working. Once the problem has been solved, press the Start/Pause button to restart the programme.
- If after all checks, the problem persists, contact Parmco at 09 573 5678.

Malfunction	Possible causes	Solution
Dryer does not work	<ul style="list-style-type: none"> • Mains plug is not plugged in • Loading door is open • Have not pressed the Start/Pause button 	<ul style="list-style-type: none"> • Plug in at mains socket • Close loading door • Press the Start/Pause button again
Drying results are unsatisfactory	<ul style="list-style-type: none"> • Wrong programme selected • Filter clogged • Incorrect volume of laundry • Ducting issue or obstruction 	<ul style="list-style-type: none"> • Select a different programme the next time you dry (see Drying Programmes section) • Clean lint filter • Refer to recommended loading volumes • Thermostat cut out may have been activated
Drum light does not work	<ul style="list-style-type: none"> • Light bulb is defective 	<ul style="list-style-type: none"> • Replace light bulb
Drying cycle lasts an unusually long time	<ul style="list-style-type: none"> • Load volume is too big 	<ul style="list-style-type: none"> • Reduce load volume

 If you are unable to identify or solve the problem, contact our Service Department. Before calling, make a note of the model, serial number, and purchase date of your machine. The Service Department will require this information.

IMPORTANT: If you call a service agent to a fault listed below, or to repair a fault caused by incorrect use of installation, a charge will be made even if the appliance is under warranty.

Technical Data

Dry Capacity (kg)	6.0
Electrical connection voltage - overall power-fuse	Information on the electrical connection is given on the rating plate
Depth with loading door open (mm)	1030
Use	The room temperature must not be lower than +5°C or higher than +35°C
Dimensions (wxdxh) (mm)	595 x 555 x 850



It is dangerous to alter the specifications or attempt to modify this product in any way.



Care must be taken to ensure that the appliance does not stand on the electrical supply cable.



Any electrical work required to install this appliance should be carried out by a qualified electrician or professional person.



IMPORTANT: The appliance must not be built-in.

- **Unpacking**
All packing must be removed before using the appliance.
- **Check accessory**
Open the accessory bag and check the accessories.

Accessory	Name	Quantity
	Vent Hose	1
	Manual	1

Should the appliance be moved, it must be transported vertically.

Positioning

It is recommended that for your convenience, the machine is positioned close to your washing machine. Whilst drying, the tumble dryer will expel a certain amount of warm, very moist air, and this should be removed from the room as quickly as possible to prevent condensation. In an extremely well ventilated room or close to an open window, this may occur naturally. However, in general, it is better to carry the dryer's exhaust outside via the vent hose supplied with the appliance; ending either temporarily at an open window, or permanently at a fixed ventilation grille, fitted to an exterior wall or window.

The tumble dryer must be installed in a clean place, where dirt does not build up. Make sure there are no obstructing items or material near the air-intake louvres at the back (eg. paper, rags, etc.). To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.




NOTE: If the floor is uneven, adjust the adjustable feet. DO not put any wooden pieces or other objects under foot bases.

Level Adjustment

When pushing down on the diagonal edges of the top plate of the dryer, the machine should not rock at all. Please check all corners. If the machine rocks, adjust the feet again.

- Loosen the locknuts with the spanner.
- Adjust the adjustable feet: lower the dryer by turning right and ascend it by turning left.
- Tighten the locknut with the spanner after ensuring the dryer is level.

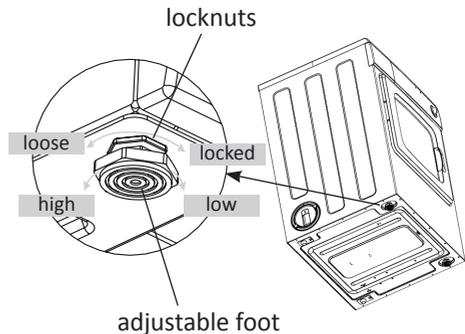

NOTE: The locknuts must be tightened after adjustment. Any looseness can cause vibration and noise.


The feet must never be removed. Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance.

! IMPORTANT: The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures. When operating the tumble dryer, the room temperature must not be lower than +5°C or higher than +35°C as it may affect the performance of the appliance.

! Fitting the vent hose

! To simplify the installation, there is a choice of vent outlets: one at the back, the other on the left hand side.


Connect the hose to whichever is more convenient by pulling the ring nut (A) from the vent outlet at the back, aligning the arrows of the hose and ring nut, then fastening by screwing the hose to the direction of the arrow, and finally pushing it firmly back into place. The unused vents should now be sealed with the special snap cover (B) provided.

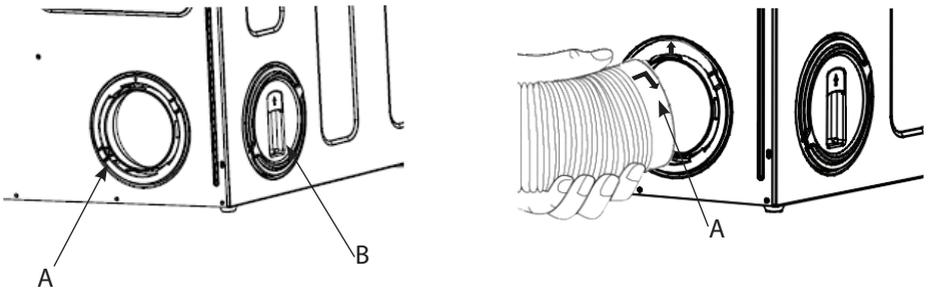

Advice:

If the hose is long and the room temperature is low, the moisture might condense inside the hose. This is an unavoidable natural phenomenon. To prevent this water from lying in the hose or flowing back into the tumble dryer, it is advisable to drill a small hole (dia. 3mm) in the lowest point of the hose and to place a small container below it (C).

Once connected to the dryer, run the vent hose to the desired outlet point - it should contain no more than two bends. As to the outlet itself, if you have decided on a fixed wall/window grille, a good local builders merchant should be able to supply you with the necessary fittings and installation advice.

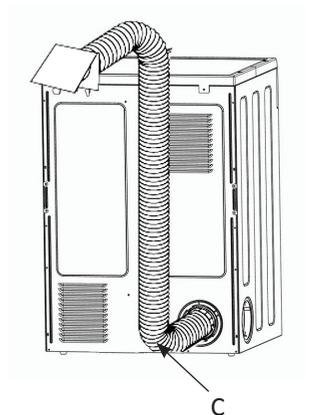

 It is important not to connect the vent hose to, for example, a cooker hood, a chimney, or a flue pipe designed to carry the exhaust from a fuel burning appliance.

Note that to avoid condensation problems, it is essential that the dryer be fitted with the flexible hose to carry the air outside the kitchen.

In order to prevent the appliance from overheating, it is important that the steam exhaust is unobstructed.

If the dryer is fitted next to kitchen units, make sure that the vent hose is not squashed. If the hose is partially squashed, drying efficiency will be reduced, resulting in longer drying times and higher energy consumption. If the hose is completely squashed, the safety cut-outs with which the machine is fitted may operate.

When operating the tumble dryer, the room temperature must not be lower than +5°C or higher than +35°C, as it may affect the performance of the appliance.



WARNING: This appliance must be earthed.



The manufacturer declines any liability should this safety measure not be observed.

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate.

Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code:

- Green and Yellow - Earth
- Blue - Neutral
- Brown - Live

The wire coloured Green and Yellow must be connected to the terminal marked with the letter ⊕ by the earth symbol, or coloured green and yellow.

WARNING:



- A cut off plug inserted into a socket is a serious safety (shock) hazard.
- Ensure that the cut off plug is disposed of safely.
- Permanent connection- in the case of permanent connection, it is necessary that you install a double pole switch. The switch must not break the yellow and green cable at any point.



Packaging Materials

- The materials marked with the  symbol are recyclable.
 - >PE<= polyethylene
 - >PS<= polystyrene
 - >PP<= polypropyleneThis means that they can be recycled by disposing of them properly in appropriate collection containers.
- Old machine
Use authorized disposal sites for your old appliance. Help to keep your country tidy!
- The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more information about recycling of this product, please contact your local council.



Ecological Hints

To save energy and to help protect the environment, we recommend the following hints:

- Try to load the maximum capacity of the machine as small loads are uneconomical.
- Do not overdry laundry, this avoids creasing and saves energy.
- Select the drying programme according to the type of laundry and the required degree of dryness.
- Clean the filters regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well. The room temperature should not exceed +35°C during drying.



p: 09 573 5678
 f: 09 573 5699
 e: sales@pamco.co.nz
 w: www.pamco.co.nz



Parmco Appliances

2 year warranty



The Warranty:

- Subject to the terms and conditions contained within this warranty, if the product is not of Acceptable Quality (as defined in the Consumer Guarantees Act) within 2 years of the date of original purchase, then Parmco Sales undertakes to repair or, at its sole discretion, replace the product.
- The warranty does not cover the costs of transport, mileage or travelling time if the product is located beyond 30km of a recognised Service Agent.
- This warranty is offered as an extra benefit, and does not affect other legal rights, which can not be modified or excluded by agreement.
- This warranty only applies to goods supplied and installed in the North and South Islands of New Zealand.
- The provisions of this warranty are in addition to the rights and remedies available to consumers under the Consumer Guarantees Act 1993.

The Warranty is not valid:

- If the product is not installed and operated in accordance with the operating instructions.
- If the product is not installed to comply with the electrical, gas, plumbing and other Regulations and Codes of Practice in New Zealand.
- If the product is operated on voltages or frequencies outside the normal range for domestic appliances in New Zealand.
- If the product is not used in normal domestic use, or if it is used in a business as defined in the Consumer Guarantees Act.
- If any serial number has been removed or defaced.
- If proof of date of purchase is not supplied, except at the sole discretion of Parmco Sales. Proof of purchase can be for the product itself, or if installed with a kitchen or house then proof of purchase can be from a Parmco reseller of products supplied by Parmco.

Liability under this warranty will not be accepted for:

- Wear and tear from normal domestic use.
- Damage in transport.
- Damage caused to the product by neglect, abuse, negligence, wilful act or misuse.
- Any defect caused by accident, misuse, neglect, tampering with or unauthorised modifications of the appliance or any attempt at internal adjustment or repair by any person other than an Authorised Service Agent.
- Service calls that relate principally to the following:
 - Instruction on how to use the product.
 - Repair or replacement of house fuses, electrical wiring, gas fitting or plumbing.
- Wear and tear caused by normal use of the product.
- Normal or scheduled maintenance including blocked filters or ducting.
- Consumable items such as light bulbs.
- Any damage to ceramic glass hobs caused by spills when cooking.
- Any breakage or damage of glass items.
- Any damage caused by non recommended product used for cleaning, maintaining, lubricating or similar.
- Any aspect relating to the installation of the product, or damage caused during installation.
- Any third party (including reseller) or consequential loss or damage (direct or indirect) however arising.

Product _____ Date of purchase _____

Dealer / Retailers Name _____

Please retain this Warranty card together with receipt or other proof of purchase date when seeking service during the warranty period

Please contact Parmco at 09 573 5678 if your appliance needs servicing under warranty. Please have your model number and proof of purchase ready. Warranty repairs must be authorized by Parmco.